


ENG

Translation of original user guide

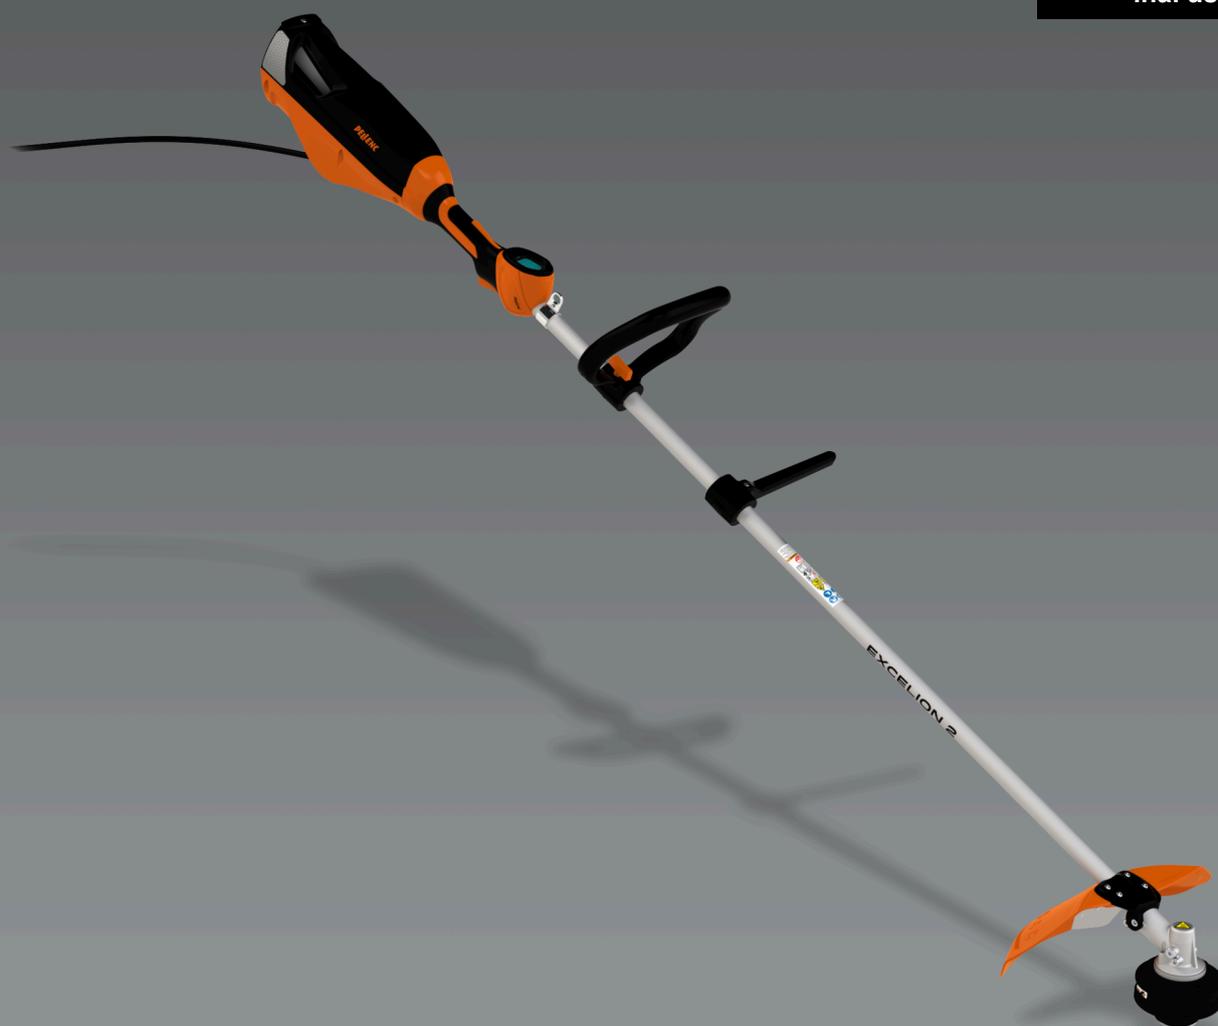

BRUSH CUTTER EXCELION 2 LH

Operating instructions

53_154421-A
04/2021

READ THE USER GUIDE CAREFULLY BEFORE USE

   #LOVEELECTRIC

PELLENC

TABLE OF CONTENTS

1. INTRODUCTION	6
2. SÉCURITÉ	7
2.1. GENERAL POWER TOOL SAFETY WARNINGS	7
2.1.1. WORK AREA SAFETY	7
2.1.2. ELECTRICAL SAFETY	7
2.1.3. PERSONAL SAFETY	8
2.1.4. POWER TOOL USE AND CARE	8
2.1.5. BATTERY TOOL USE AND CARE	8
2.1.6. SERVICE	9
2.1.7. TOOL'S END-OF-LIFE MANAGEMENT	9
2.2. SAFETY WARNINGS FOR THE GRASS CUTTER/STRIMMER, BRUSH CUTTER AND SAW BLADE BRUSH CUTTER	9
2.3. PRECAUTIONS AGAINST KICKBACK	10
2.4. SAFETY WARNINGS RELATING TO THE BRUSH CUTTER EXCELION 2 LH	10
2.5. SAFETY MEASURES RELATED TO THE USE OF THE PELLENC BATTERY AND CHARG- ER	11
2.6. SAFETY SIGNAGE	12
2.7. PERSONAL PROTECTION EQUIPMENT	13
3. DESCRIPTION AND TECHNICAL CHARACTERISTICS	14
3.1. DESCRIPTION OF THE TOOL	14
3.2. TECHNICAL FEATURES	15
3.2.1. TOOL FEATURES	15
3.2.2. CHARGERS AND BATTERIES COMPATIBILITY	16
3.2.3. VIBRATION AND NOISE EMISSION VALUES	16
4. COMMISSIONING	17
4.1. PACKAGE CONTENTS	17
4.2. FITTING/DISMOUNTING THE ROUND HANDLE ON THE BRUSH CUTTER	17
4.2.1. FITTING THE ROUND HANDLE AND THE DISTANCING BAR ON THE TOOL	17
4.2.2. DISMOUNTING THE ROUND HANDLE AND THE DISTANCING BAR FROM THE TOOL	18
4.3. FITTING/ DISMOUNTING OF THE SAFETY GUARDS ON THE BRUSH CUTTER	19
4.3.1. ASSEMBLY/DISASSEMBLY OF THE SAFETY GUARD	19
4.3.2. FITTING/DISMOUNTING OF THE PROTECTIVE SHIELD (OPTION)	20
4.3.3. FITTING/DISMOUNTING THE SAFETY GUARD FOR THE CHISEL-TOOTH SAW BLADE (OP- TION)	21
4.4. FITTING/DISMOUNTING OF THE CUTTING HEADS ON THE BRUSH CUTTER	22
4.4.1. FITTING/DISMOUNTING THE TRI-BLADE/TWIN-BLADE ON THE TOOL	22
4.4.2. FITTING/DISMOUNTING THE MULCHING BLADE ON THE TOOL	24
4.4.3. FITTING/DISMOUNTING OF THE TAP CUT 2 / TAP CUT 3	26
4.4.4. ADJUSTING THE LENGTH OF THE STRIMMER WIRE ON TAP CUT 2 AND 3	29
4.4.5. FITTING/DISMOUNTING THE CHISEL-TOOTH SAW ON THE TOOL	29
4.4.6. FITTING/DISMOUNTING THE CITY CUT ON THE TOOL	33
4.5. FITTING THE BATTERY ON THE HARNESS	36

4.6. CONNECTING PELLENC BATTERIES TO THE TOOL	36
4.7. DISCONNECTING THE BATTERY	37
4.8. ADJUSTING THE WORKING POSITION	37
4.8.1. ADJUSTMENT OF THE HARNESS AND FITTING OF THE CARRYING STRAP	37
4.8.2. MOVEMENT OF THE CARRIER RING ACCORDING TO THE CENTRE OF GRAVITY	39
4.8.3. ADJUSTING THE POSITION OF THE ROUND HANDLE AND THE DISTANCING BAR	39
5. USING THE TOOL	40
5.1. POWERING THE TOOL ON AND OFF	40
5.1.1. POWER ON	40
5.1.2. STOPPING THE TOOL	41
5.2. UNLOCKING OF THE TOOL	42
5.3. PRESENTATION OF THE HMI (HUMAN MACHINE INTERFACE) DISPLAY SCREEN	42
5.3.1. REMAINING BATTERY LIFE	43
5.3.2. "ENERGY SAVING" PICTOGRAM	44
5.4. ADJUSTING TOOL SPEED	44
5.4.1. ACCELERATION	44
5.4.2. CHANGING SPEEDS	45
5.4.3. "BOOST" MODE	45
5.5. SETTINGS VIA THE HMI MENU	46
5.5.1. BROWSING IN THE MENU	46
5.5.2. ACTIVATION OF THE CUTTING HEAD VIA THE HMI MENU	47
5.5.3. "INFORMATION" MENU AND ACCESS TO MACHINE SETTINGS	48
5.6. TIPS FOR USE AND WORKING TECHNIQUES	55
5.6.1. CHOICE OF THE RIGHT CUTTING HEAD ACCORDING TO THE USE	55
5.6.2. ADVICE FOR OPTIMIZING THE BATTERY	56
5.6.3. TIPS FOR USE AND WORKING TECHNIQUES	56
5.7. EMERGENCY RELEASE	58
6. SERVICE	60
6.1. MAINTENANCE ADVICE	60
6.2. MAINTENANCE TABLE	60
6.3. CLEANING THE TOOL	61
6.4. CLEANING TAP CUT 2 / TAP CUT 3	61
6.5. ANGLE GEAR LUBRICATION	62
6.6. SAWING KIT MAINTENANCE	62
6.6.1. ANGLE GEAR LUBRICATION	62
6.6.2. DISMOUNTING/FITTING OF THE CITY CUT SAFETY GUARD	63
6.7. MAINTENANCE OF THE CITY CUT	63
6.7.1. DISMOUNTING/FITTING OF THE CITY CUT SAFETY GUARD	63
6.7.2. CHANGING THE CITY CUT BLADES	64
6.7.3. CLEANING AND LUBRICATING BLADES	66
6.7.4. SHARPENING THE BLADES	66
6.7.5. ANGLE GEAR LUBRICATION	67
7. INCIDENTS AND TROUBLESHOOTING	68
7.1. TABLE OF INCIDENTS AND BREAKDOWNS - TROUBLESHOOTING	68
7.2. SUMMARY OF DISPLAY SCREEN MESSAGES	70

8. STORAGE AND TRANSPORT	71
8.1. STORAGE	71
8.1.1. TOOL STORAGE POSITION	71
8.2. TRANSPORTING THE TOOL	71
8.3. STORING THE TOOL	72
9. ACCESSORIES AND CONSUMABLES	73
9.1. ROUND HANDLE ACCESSORIES	73
9.2. CUTTING TOOLS	73
9.2.1. WEED CONTROL	73
9.2.2. MULCHING	74
9.2.3. CHISEL-TOOTH SAW	74
9.2.4. URBAN WEED CONTROL	75
9.3. OTHER ACCESSORIES	75
9.4. CONSUMABLES	76
9.4.1. TAP CUT CONSUMABLES	76
10. WARRANTIES	77
10.1. GENERAL WARRANTIES	77
10.1.1. STATUTORY WARRANTY	77
10.1.2. COMMERCIAL WARRANTYPELLENC	78
10.1.3. PAID AFTER-SALES SERVICE	79
11. COMPLIANCE STATEMENTS	80
11.1. CE STATEMENT OF COMPLIANCE: EXCELION 2 LH	80
11.2. UK DECLARATION OF CONFORMITY ^{UK} CA : EXCELION 2 LH	81

1. INTRODUCTION

Dear Customer,

Thank you for purchasing your Brush cutter Excelion 2 LH. Correctly used and maintained, this tool will give a satisfactory performance for many years.

Warning



Your device contains numerous recoverable or recyclable materials. Return it to your dealer or, failing this, to an approved servicing centre to be treated.



Comply with the regulations in force in your country as concerns environmental protection associated with your activity.



Warning

It is imperative that you read through the ENTIRE user's manual before using or servicing the tool. Always comply with the instructions and illustrations in the manual.

All through this user guide you will find advisory notes and information entitled: NOTE, IMPORTANT, ATTENTION and WARNING.

The points marked "NOTE" indicate additional information.

The points marked "IMPORTANT" warn the user of a potential risk to the equipment.

The points marked "ATTENTION" warn the user of a potentially hazardous situation which if not avoided leads to minor injuries.

The points marked "WARNING" warn the user of a potentially hazardous situation which if not avoided leads to serious injury or death.

The warning  indicates that damage resulting from failure to comply with the procedures and instructions is not covered by the warranty and the owner will be liable for any repair costs.

Safety indications are also given on the tool; they remind you of the safety precautions to be taken. Identify and read these indications before using the tool. Immediately replace any indications that may become partially illegible or deteriorated.

Refer to Section 2.6, "Safety signage" for the location diagram of the safety stickers affixed to the tool.

No part of this manual may be reproduced without the written permission of the company PELLENC. The illustrations given in this manual are for information purposes and are in no way contractual. The PELLENC company reserves the right to make any modification or improvement to its products as deemed necessary without informing customers already in possession of a similar model. This manual forms an integral part of the tool and must accompany the tool if it changes hands.

2. SÉCURITÉ

- The Brush cutter Excelion 2 LH is a professional tool whose use is reserved exclusively for clearing green spaces (grasses, dense grasses, woody weeds, brambles and small shrubs).
- The PELLENC company accepts no responsibility for any damage caused by improper or unspecified use different from its original intention.
- The PELLENC company accepts no responsibility for any damage caused by the use of non-original parts or accessories.
- The company PELLENC also declines all responsibility in the event of damage caused by the use of mulching blades with a diameter greater than 320 mm.

2.1. GENERAL POWER TOOL SAFETY WARNINGS



Warning

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to comply with the following instructions risks causing electric shock, fire and/or serious injury.

Retain all the safety measures and instructions for later reference.

Disconnect the battery before carrying out maintenance.

Note

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

2.1.1. WORK AREA SAFETY

1. **Keep the work area clean and well lit.** Cluttered or dark areas invite accidents.
2. **Do not operate power tools in an explosive atmosphere, for example in the presence of flammable liquids, gases or dust.** Power tools create sparks, which can ignite dust or fumes.
3. **Keep children and bystanders away while operating the power tool.** Distractions can cause you to lose control of the tool.

2.1.2. ELECTRICAL SAFETY

1. **The power tool connector must be adapted to the socket. Never modify the connector in any way whatsoever. Do not use adapter plugs with earthed (grounded) power tools.** Unmodified plugs and suitable sockets reduce the risk of electric shock.
2. **Avoid contact with earthed surfaces such as pipes, radiators, cookers, and refrigerators.** There is an increased risk of electric shock if your body is in direct contact with the ground.
3. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
4. **Do not misuse the power cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges and moving parts.** Damaged or entangled cords increase the risk of electric shock.
5. **Use an extension cord suitable for outdoor use when operating power tools outdoors.** Use a cord suitable for outdoors to reduce the risk of electric shock.
6. **Use a power supply protected by a residual current device (RCD) when the power tool is operated in a damp location.** Use of an RCD reduces the risk of electric shock.

Note

The term “Residual Current Device” (RCD) can be replaced by “Ground Fault Circuit Interrupter” (GFCI) or “Earth Leakage Circuit Breaker” (ELCB).

2.1.3. PERSONAL SAFETY

1. **Stay alert, watch what you are doing, and use common sense when operating the power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** A moment of inattention when using a power tool can result in serious personal injury.
2. **Use personal protective equipment. Always wear eye protection.** Safety equipment such as dust masks, non-slip safety shoes, helmets, or ear protection used at the appropriate times reduces injuries.
3. **Avoid accidental starting of the tool. Make sure the switch is in the off position before you connect the tool to the power source and/or battery pack, pick it up, or carry it.** Carrying a power tool with your finger on the switch or connecting a power tool with the switch in the ‘on’ position can cause accidents.
4. **Remove any adjusting wrench before switching the electric tool on.** A wrench left attached to a rotating part can cause injury.
5. **Do not rush. Keep proper footing and balance at all times.** This provides better control of the power tool in unexpected situations.
6. **Dress appropriately. Do not wear loose clothing or jewellery. Keep hair and clothing away from moving parts.** Loose clothes, jewellery or long hair can get caught in moving parts.
7. **If devices are provided for connecting dust extraction and collection equipment, ensure that these are connected and properly used.** Use of dust collection can reduce dust-related hazards.
8. **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** A careless action can cause severe injury within a fraction of a second.

2.1.4. POWER TOOL USE AND CARE

1. **Do not force the power tool. Use the power tool suited for the job.** The adapted power tool does the work better and more safely at the speed it was built to operate at.
2. **Do not use the power tool if the switch does not allow it to be switched on and off.** Power tools that cannot be controlled by a switch are dangerous and must be repaired.
3. **Unplug the tool from the socket or remove the battery (if possible) before any adjustment, change of accessory or storage.** These preventive safety measures reduce the risk of accidentally starting the power tool.
4. **When not in use, keep power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate it.** Power tools are dangerous when operated by inexperienced users.
5. **Maintenance of the power tool and its accessories is mandatory. Check that the moving parts are not out of alignment or jammed, that there are no broken parts or that there is no other condition which could affect the operation of the power tool. If damaged, repair the power tool before using it.** Many accidents are due to poorly maintained power tools.
6. **Keep the cutting elements sharp and clean.** Properly maintained cutting tools with sharp cutting elements are less likely to jam and are easier to control.
7. **Use the power tool, accessories, blades, etc. in accordance with these instructions, taking into account the working conditions and the work to be done.** Use of the power tool for operations different from those intended could result in a hazardous situation.
8. **Handles and gripping surfaces must be kept dry, clean and free from oils and grease .** Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

2.1.5. BATTERY TOOL USE AND CARE

1. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
2. **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.

3. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
4. **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, wash away with water. If liquid contacts eyes, seek additional medical help.** Liquid ejected from the battery may cause irritation or burns.
5. **Do not use a battery pack or tool that is damaged or modified.** Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
6. **Do not expose a battery pack or battery operated tool to fire or excessive temperature.** Exposure to fire or temperatures exceeding 130° C (265° F) may cause an explosion.
7. **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the operating instructions.** Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

2.1.6. SERVICE

1. **Have the power tool serviced by a qualified technician using only identical spare parts.** This ensures the continued safety of the power tool.
2. **Never perform maintenance on damaged battery packs.** Maintenance on battery packs should only be performed by the manufacturer or authorised service providers.

2.1.7. TOOL'S END-OF-LIFE MANAGEMENT

1. **When the tool reaches the end of its life, PELLENC keeps the end of life sheet of the equipment at disposal.** The end of life sheet provides instructions for safely removing components.

2.2. SAFETY WARNINGS FOR THE GRASS CUTTER/STRIMMER, BRUSH CUTTER AND SAW BLADE BRUSH CUTTER

1. **Do not use the machine in adverse weather conditions, especially in the event of a risk of lightning.** This decreases the risk of being struck by lightning.
2. **Carefully check that there is no wildlife present in the area where the machine is to be used.** Wildlife can be injured by the machine in operation.
3. **Carefully examine the area where the machine is to be used and remove all stones, sticks, wires, bones, and other foreign objects.** Projected objects may cause injuries.
4. **Before using the machine, always visually inspect the cutting device or blade and the cutting device or cutting assembly for damage.** Damaged parts increase the risk of injury.
5. **Before use, check the power cord and all extension cables for signs of damage or wear. Do not use the machine if the cable is damaged or worn. If the power cord is damaged or worn during use, turn off the power to the machine and do not touch the cord before disconnecting it from the power supply.** A damaged power cord or extension cable can cause electric shock, fire and/or serious injury.
6. **Follow the instructions for changing accessories.** Improperly tightened blade securing nuts or bolts can damage the blade or come loose.
7. **The rated rotational speed of the blade must be at least equal to the maximum rotational speed marked on the machine.** Blades that spin faster than their rated rotational speed can break and shatter.
8. **Wear eye, ear, head and hand protection.** Proper protective equipment reduces injury from shards of debris or accidental contact with the trimmer wire or blades.
9. **When operating the machine, always wear non-slip safety shoes. Do not operate the machine barefoot or with sandals on.** This reduces the risk of foot injury from contact with the moving blade.
10. **When operating the machine, always wear long pants.** Exposed skin increases the likelihood of injury from flying objects.
11. **Keep bystanders away when the machine is running.** Flying debris can cause serious injury.
12. **Always use both hands to operate the machine.** Hold the machine with both hands to prevent loss of control.
13. **Hold the machine by the insulated gripping surfaces only, as the cutting line or blade may come in contact with hidden electrical wires or its own cable.** Trimmer wire or blades contacting an "active" cable can "activate" exposed metal parts of the machine and expose the operator to electric shock.
14. **Always maintain good footing and operate the machine only while standing firmly on the ground.** Slippery or unstable surfaces can cause loss of balance or loss of machine control.

15. **Do not operate the machine on steep slopes.** This reduces the risk of loss of control, slipping or falling which can cause injury.
16. **When working on a slope, always be sure of your footing, always work across a slope, never up or down, and be extremely careful when changing direction.** This reduces the risk of loss of control, slipping or falling which can cause injury.
17. **Keep all power cords away from the cutting blades.** A damaged power cord can cause electric shock, fire and/or serious injury.
18. **Keep all parts of your body away from the trimmer wire or blade when the machine is in operation. Before starting the machine, check that the trimmer wire or the blade are not in contact with any element.** A moment of inattention while operating the machine may cause injury.
19. **Do not operate the machine above your waist height.** This is to prevent accidental contact with the cutting device or blade and to better control the machine in unforeseen situations.
20. **When cutting underbrush or springy saplings, be careful of bounce back.** If the strain in the wood fibers is released, brush or saplings can strike the operator and/or cause him to lose control of the machine.
21. **Cut brush and saplings with extreme care.** Fine debris can get caught in the machine, be projected and cause a loss of balance.
22. **Keep control of the machine and do not touch the blades and other dangerous moving parts that are still in motion.** This reduces the risk of injury from moving parts.
23. **When clearing jams or repairing the machine, make sure all switches are off and the power cord is disconnected.** Unintentionally activation of the machine while clearing jams or performing repairs could result in serious injury.
24. **Carry the machine off and always away from the body.** Correct handling of the machine reduces the likelihood of accidental contact with the moving blade.
25. **When storing or transporting the machine, always cover the metal blades.** Correct handling of the machine reduces the likelihood of accidental contact with the blade.
26. **Use only replacement trimmer wire, cutting heads and blades specified by the manufacturer.** Improper replacement of parts can increase the risk of breakage and injury.
27. **When clearing jams or repairing the machine, make sure the switch is off and the battery pack has been removed.** Unintentionally activation of the machine while clearing jams or performing repairs could result in serious injury.

2.3. PRECAUTIONS AGAINST KICKBACK

Kickback is a sudden sideways, forward or backward movement of the machine that can occur when the blade jams or hits an object (such as a sapling or stump). It can be violent enough to propel the machine and/or the operator, and possibly lose control of the machine.

Kickback and its associated hazards can be avoided by taking the necessary precautions listed below.

1. **Maintain a firm grip with both hands on the machine and position your arms to resist the kickback. Position your body to the left of the machine.** Kickback can increase the risk of injury from an unintended movement of the machine. Blade kickback can be controlled by the operator provided precautions have been taken.
2. **If the blade gets stuck or if a cut is interrupted for any reason, turn the machine off and leave it stationary in the material until the blade comes to a complete stop. If the blade is stuck, never attempt to remove the machine from the material or pull it back while the blade is in motion, otherwise kickback may occur.** Find the cause and take corrective actions to eliminate the cause of the blade sticking.
3. **Do not use dull or damaged blades.** Dull or damaged blades increase the risk of blockage or hitting an object, resulting in kickback.
4. **Always maintain a clear view of the material being cut.** Kickback is more likely to occur in areas where it is difficult to see the material being cut.
5. **If a person approaches while the machine is running, turn off the machine.** The risk of injury to others struck by the moving blade in the event of kickback is greater.

2.4. SAFETY WARNINGS RELATING TO THE BRUSH CUTTER EXCELION 2 LH

1. Do not use the metal cutting tools near walls, fences, tree trunks, rocks or similar obstacles. Contact with such elements can cause kickback, increased ricochets and damage the cutting tool. PELLENC recommends the

use of CITY CUT for these working conditions. Clear the work zone of all obstacles (glass, stone, metal, waste, and other solid objects) as they can be projected when working with the cutting tool.


Never use the Brush cutter Excelion 2 LH with only one hand.

2. Always use the machine with the cutting head parallel to the ground. The safety guard no longer provides sufficient protection if the angle of the cutting head is excessive, This can increase the risk of injury from flying debris.
3. Immediately stop the Brush cutter Excelion 2 LH in the event of a change in the behaviour of the cutting tool (change in noise, increased vibrations). Check that the cutting tool is properly attached and verify its condition (no distortion, sufficiently sharp). Replace any damaged cutting tool as it can explode and cause serious, even fatal injuries.
4. **CAUTION!** The cutting tool continues rotating for a few seconds after the control trigger has been released. Always keep your hands and feet clear of the rotating cutting tool.
5. **Strimmer wire**
 - Never remove the blade installed in the safety guard as it trims the strimmer wire to the appropriate length.
 - Never use metal wire or any other material instead of the nylon strimmer wire. Metal wire is likely to break and be projected, causing serious injuries.
 - Only use nylon strimmer wire recommended by PELENC with a max. diameter of 3 mm.
6. **Cutting blades**
 - For the mulching blade, the maximum recommended dimensions are 280 mm in diameter and 3 mm in thickness.
 - For the tri-blade and the twin-blade, the maximum recommended dimensions are 320 mm in diameter and 2.5 mm thickness.
7. Put on the harness and carrying strap of the tool.

2.5. SAFETY MEASURES RELATED TO THE USE OF THE PELENC BATTERY AND CHARGER

Refer to the instructions supplied with the PELENC battery and charger.

2.6. SAFETY SIGNAGE

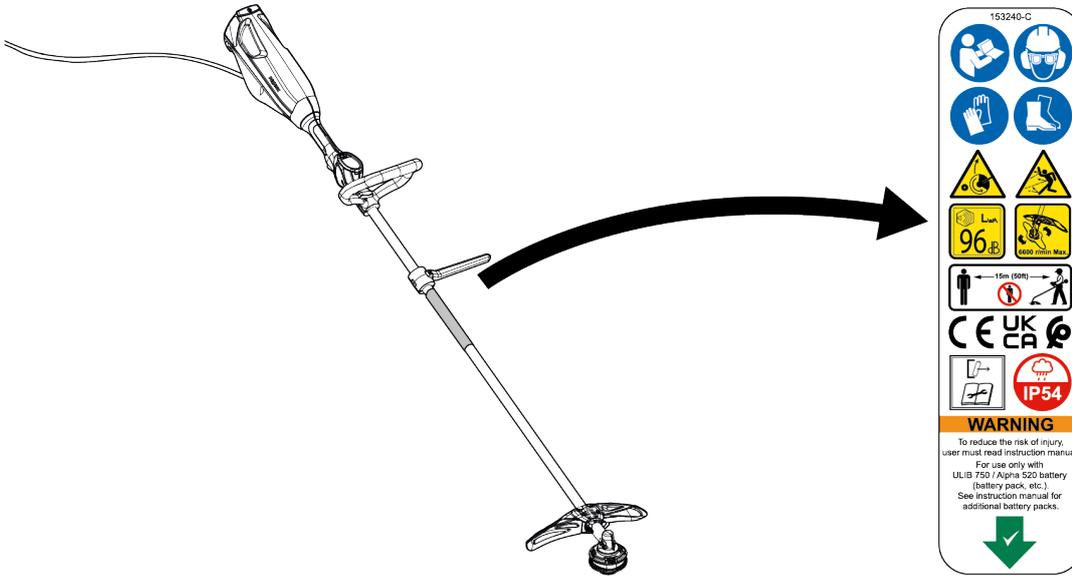

53_20_281



Read the user guide.



Wear eye, ear and head protection.



Wear protective gloves.



Wear non-slip shoes.



Beware of kickback.



Beware of flying projections.



LWA sound power level guaranteed.



Direction of rotation and maximum rotational speed (6600 rpm)



Maintaining an adequate safety distance: Keep at least 15 metres back from the machine working area.



Tool compliant with EC standards.



Equipment compliant with UK standards.



Equipment compliant with Moroccan standards.



Disconnect the battery before carrying out maintenance.



IP54 protection rating of the tool (allover protection against dust and water spray).



Indicates the location of the round handle and the distancing bar

00_20_043


00_20_004

2.7. PERSONAL PROTECTION EQUIPMENT

	Equipment	Wearing of	Description	
<p>00_20_054</p>	1	Safety helmet	Recommended	Mandatory if there is a risk of falling objects
	2	Protective visor	Recommended	Risk of projections.
	3	Resistant work gloves	Mandatory	Wear hand protection especially when working on the cutting tool.
	4	Robust, non-slip safety shoes	Mandatory	When operating the machine, always wear non-slip safety shoes. Do not operate the machine in bare feet or with sandals.
	5	Ear protection	Mandatory	Wear approved ear protectors with sufficient noise attenuating effect. Prolonged exposure to noise can cause permanent hearing damage.
	6	Safety goggles	Mandatory	Wear approved eye protection.
	7	Jacket or over-sleeves	Recommended	Risk of projections.
	8	Work trousers	Recommended	Always wear clothing that covers the operator's legs when the machine is in operation.
	9	Shin pads	Recommended	Risk of projections.

3. DESCRIPTION AND TECHNICAL CHARACTERISTICS

3.1. DESCRIPTION OF THE TOOL

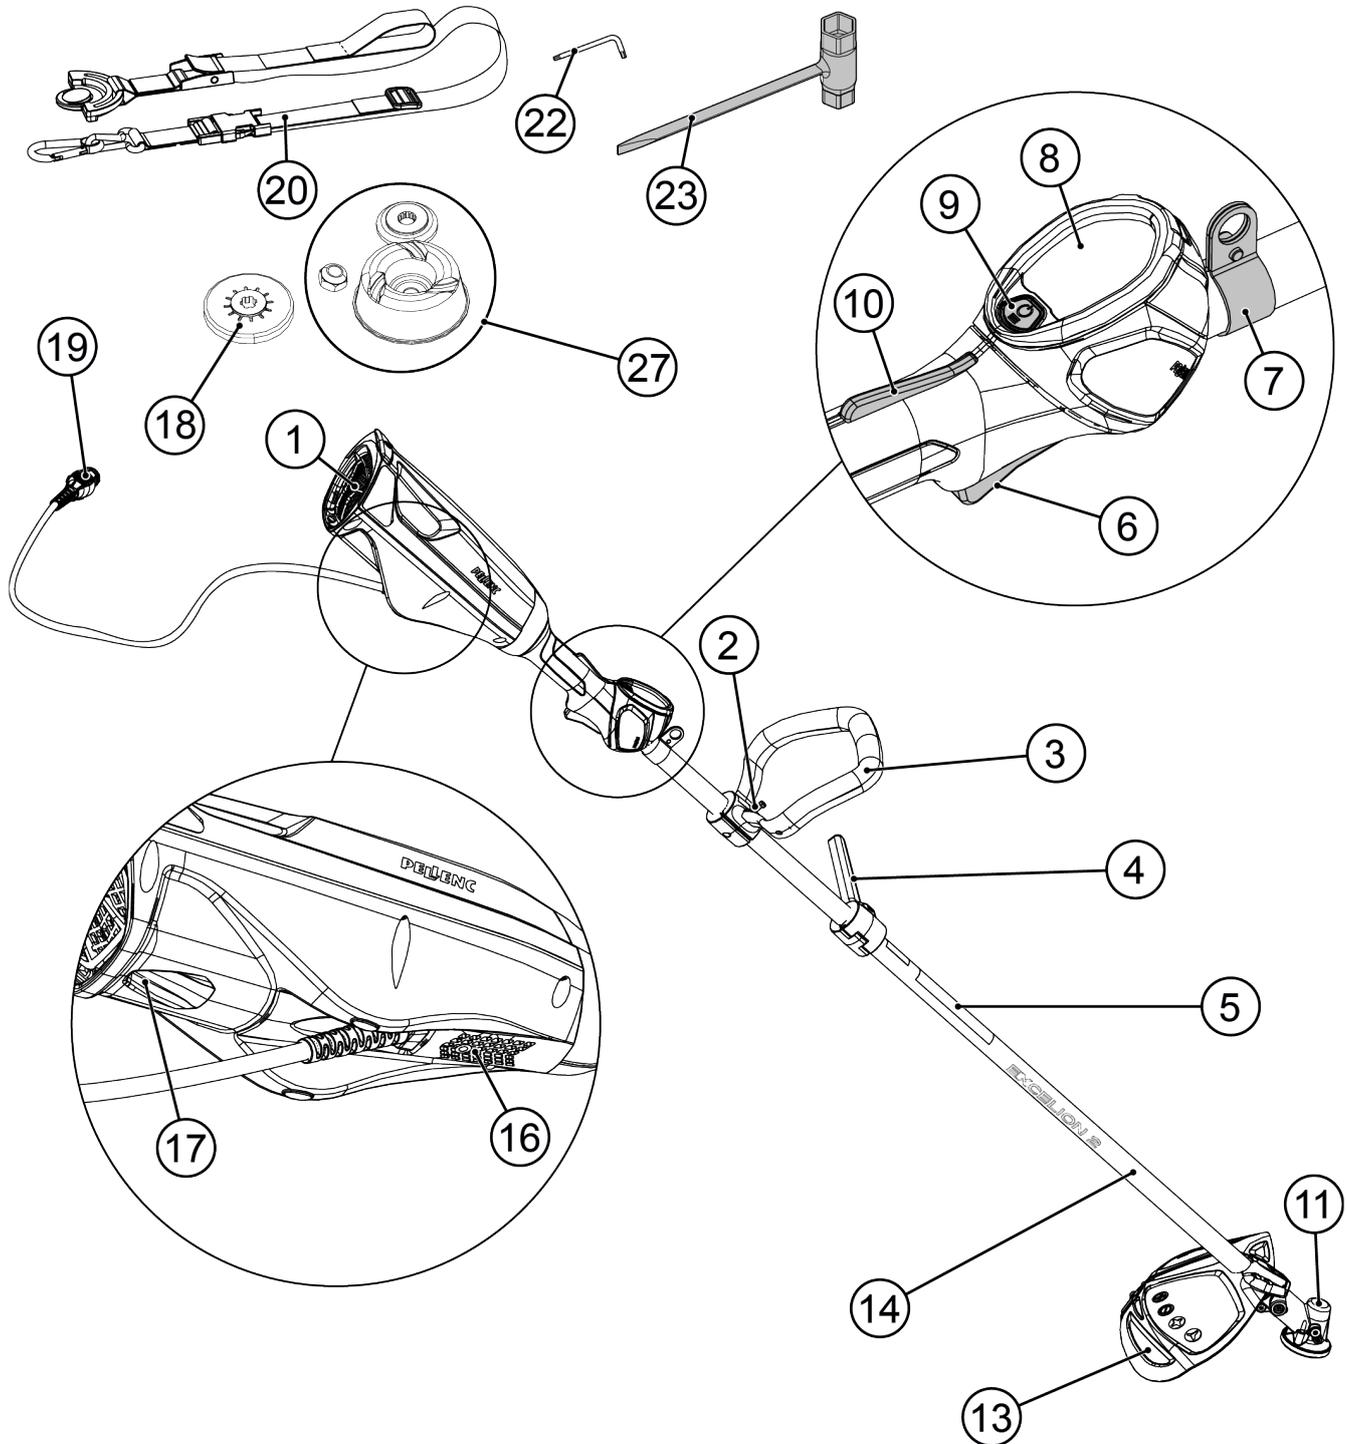

1. Air exhaust screen: A hot air discharge screen that cools the motor and the electronic board.
2. Round handle tightening knob
3. Round handle
4. Distancing bar
5. Safety sticker: the arrow is an indication for the installation of the round handle.
6. Control trigger (power switch): used to activate the rotation of the cutting tool at a progressively adjustable speed.
7. Carrying ring
8. HMI screen
9. POWER / MENU button
10. Safety throttle: prevents the inadvertent activation of the control trigger; the safety throttle must be activated prior to activating the control trigger.
11. Angle gear
13. Safety guard for TAP CUT 3 / blades: limits the projections of solid objects (stones, pieces of metal) towards the operator.
14. Drive shaft
16. Air intake screen: cold air intake screen located under the tool and which cools the motor and the electronic board.
17. Hole for attaching the machine on a wall fixture
18. Anti-vegetation protection washer
19. Quick connector: used to connect the machine to the PELLENC tools battery
20. Carrying strap LH
22. TORX 25 wrench
23. EXCELION 2 special key
27. Blades adaptation accessories (1 blade locking washer, 1 protective bowl and 1 bowl retaining nut)

Note

The Brush cutter Excelion 2 LH is delivered without a cutting head.

The cutting heads are available for purchase separately. This operating instructions manual may refer to these cutting heads sold as options. For more information on their use, refer to Section 5.6.1, “Choice of the right cutting head according to the use”.



Caution

Before any intervention on the tool, bring the machine to a complete stop. To consult the procedure for switching off your tool, refer to Section 5.1.2, “Stopping the tool”.

3.2. TECHNICAL FEATURES

3.2.1. TOOL FEATURES

	EXCELION 2
Template	LH
Power	1500 W
Tool voltage	43.2V
Weight (excluding cutting tool and safety guard)	4.5 kg
Dimensions (l x w x h)	1800 x 450 x 650 mm
Rotational speeds	1880 to 6600 rpm
Battery compatibility	See Section 3.2.2, “Chargers and batteries compatibility”
Battery life	According to use and battery type

3.2.2. CHARGERS AND BATTERIES COMPATIBILITY

Battery	Charger	Remarks
ALPHA 520	CB5022 ; CB5022HV	*with adapter cord ref. 57248
ULIB 750	CB5022; CB5022HV	*with adapter cord ref. 57238

3.2.3. VIBRATION AND NOISE EMISSION VALUES

The determination of noise levels and vibration rates is based on operating conditions at maximum rated speed according to a standardised test method. It can be used to compare two machines.

Sound pressure values

Maximum sound pressure level at the user's position (Uncertainty K_{pA} : 1.5 dB (A))	$L_{pA} = 80 \text{ dB(A)}$
Peak sound pressure level at the user's position	$L_{pC} < 130 \text{ dB(C)}$

Sound power values

Measured sound power level L_{WA} (uncertainty K_{WA} : 2 dB(A))	94 dB(A)
Guaranteed sound power level L_{WAg}	96 dB(A)

The measured sound power level and the guaranteed sound power level were measured on a brush cutter with a metal twin-blade tool.

The measured sound level and the guaranteed sound power level were measured according to a procedure in accordance with Directive 2000/14 / EC Annex V.

Vibration values

Vibration values measured at maximum rated speed*		
	a_h value of the right handle measured in m/s^2	a_h value of the left handle measured in m/s^2
TAP CUT 3 (trimmer wire \varnothing 2.7 mm)	3.32	3.77
TAP CUT 2 (trimmer wire \varnothing 2.7 mm)	3.29	3.37
Twin-blade	3.27	3.44
Tri-blade	2.91	3.92
Mulching	3.99	4.23
Chisel-tooth saw	2.63	3.92
CITY CUT	1.90	2.39

*Measurement uncertainty: $KWA = 2 \text{ m/s}^2$

The total declared values for vibration and noise emissions can be used for a preliminary exposure assessment.

Caution

Vibrations during actual working use of the machine may differ from the total declared value, depending on the way the machine is used

It is necessary to identify safety measures to protect the operator, based on an estimate of exposure under actual operating conditions (taking into account all parts of the operating cycle, such as the time the machine is switched off and the time it is idling, in addition to the working time).

4. COMMISSIONING

4.1. PACKAGE CONTENTS

Check that the Brush cutter Excelion 2 LH is delivered with:


- 1 carrying strap to be fitted on the harness
- 1 safety guard
- 1 Excelion 2 LH special key
- 1 TORX 25 wrench
- 1 kit for blades
- 1 Operating instructions manual

4.2. FITTING/DISMOUNTING THE ROUND HANDLE ON THE BRUSH CUTTER

4.2.1. FITTING THE ROUND HANDLE AND THE DISTANCING BAR ON THE TOOL


1. Carefully remove the tool from its packing box.
Lay the tool on a flat, stable and clean surface.
2. Fit the round handle (3) on the transmission tube (14) at a comfortable distance for the user's arm. The user's arm should be semi-flexed.

Ensure the correct orientation of the round handle. The arrow on the sticker on the round handle should point to the arrow on the sticker on the transmission shaft.
3. Lock the position of the round handle (3) by screwing the adjustment knob supplied with your tool (2).

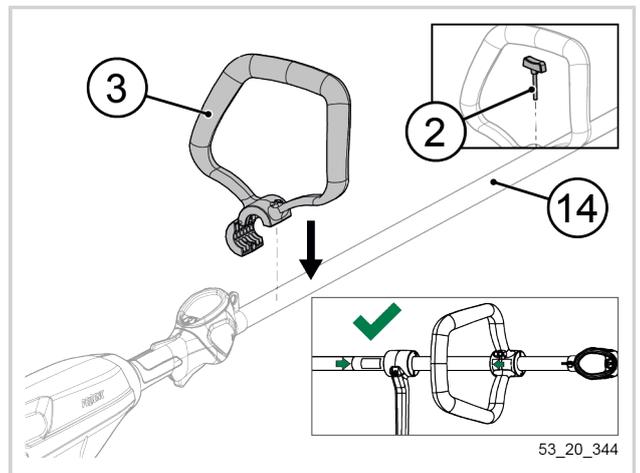


Warning

To guarantee the safety of the user, it is necessary to respect a distance (A) between the top of the HMI screen and the top of the distancing bar, varies depending on the cutting tool.

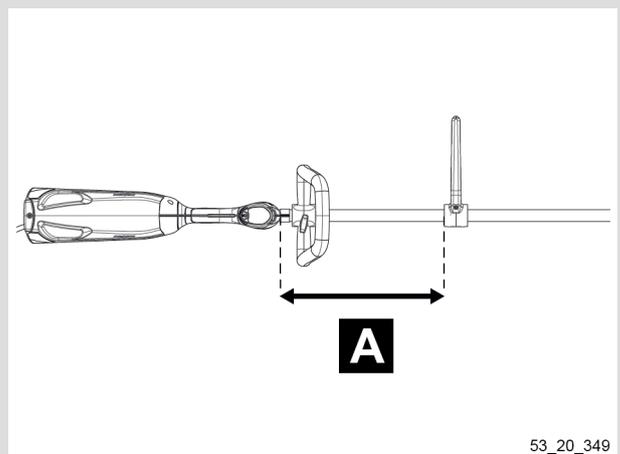

Cutting tool	Maximum distance (A) to be respected	Position of the round handle
Tap Cut / Cutting Blades / Mulching Blade	290 mm	Between the distancing bar and the control handle
Chisel-tooth saw	300 mm	Between the angle gear and the distancing bar

4. Position the distancing bar (4) on the transmission shaft (14).
5. Lock the position of the distancing bar (4) by tightening the screw.

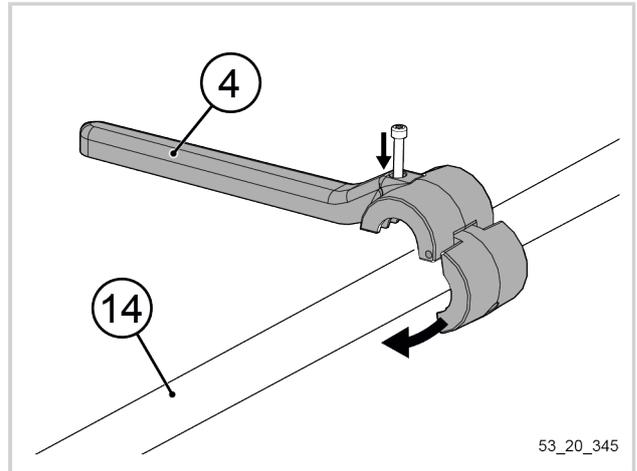


Note

The distancing bar can be fixed either between the HMI screen and the round handle or after the round handle on the transmission shaft (9) but the distances recommended above must be observed.

Note


The carrying ring (7) must always be positioned between the two gripping handles of the tool (HMI screen and round handle (3)).

To consult the carrying ring adjustment procedure, refer to Section 4.8.2, "Movement of the carrier ring according to the centre of gravity".

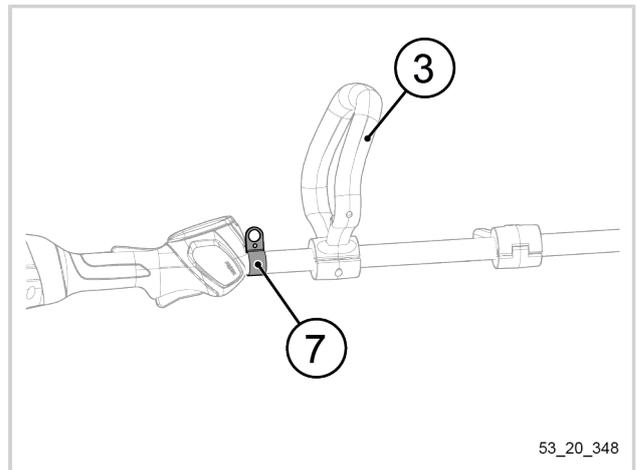


4.2.2. DISMOUNTING THE ROUND HANDLE AND THE DISTANCING BAR FROM THE TOOL

1. Lay the tool on a flat, stable and clean surface.
2. Unscrew the screw located on the distancing bar (4).
3. Remove the distancing bar (4).

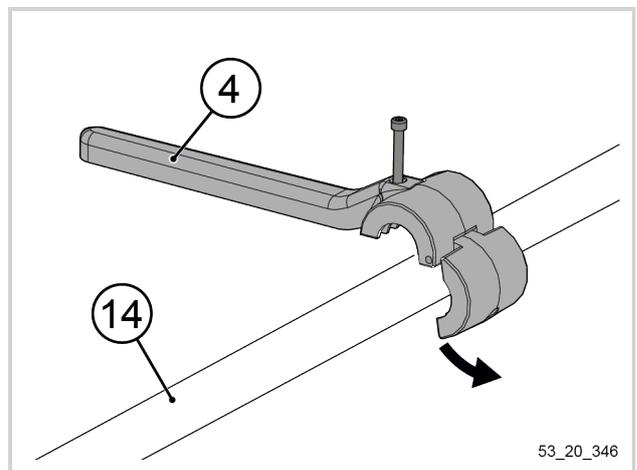

4. Unscrew the knob (2) located on the round handle (3).
5. Remove the round handle (3).

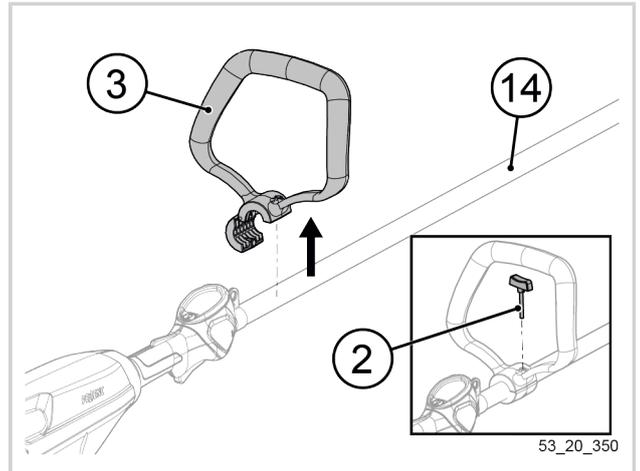

4.3. FITTING/ DISMOUNTING OF THE SAFETY GUARDS ON THE BRUSH CUTTER



Caution

Before any intervention on the tool, stop the machine completely and disconnect the battery. To consult the procedure for switching off your tool, refer to Section 5.1.2, "Stopping the tool".


Wear safety gloves. Handling of sharp elements.

4.3.1. ASSEMBLY/DISASSEMBLY OF THE SAFETY GUARD


The safety guard supplied as standard with your tool is mandatory when the tool is equipped with the TAP CUT 3 and weed control blades.

Fitting the standard safety guard

1. Fit the eyelet located on the upper part of the safety guard (13) on the top screw of the angle gears (11).

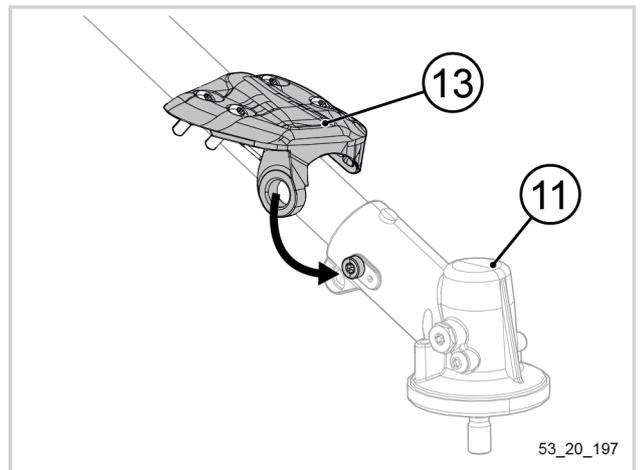


2. Fit the lower part of the safety guard (13) by aligning the screw marks.
3. Screw the 4 screws in place with the Torx 25 key (22) to lock the position of the safety guard (13).

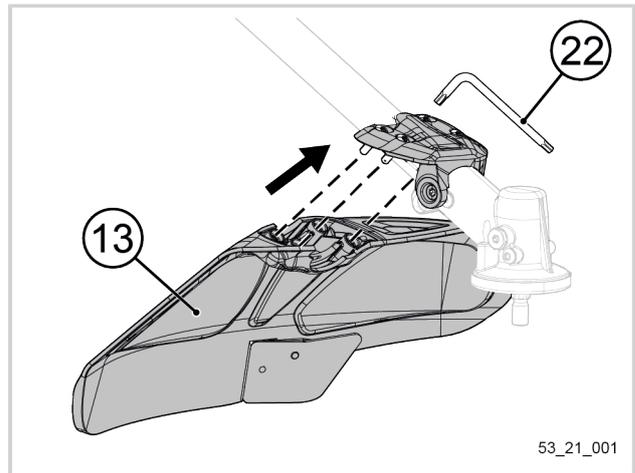


Dismounting the standard safety guard

1. Unscrew the 4 screws which lock the position of the safety guard (13) using the Torx 25 key (22).
2. Remove the lower part of the safety guard (13).

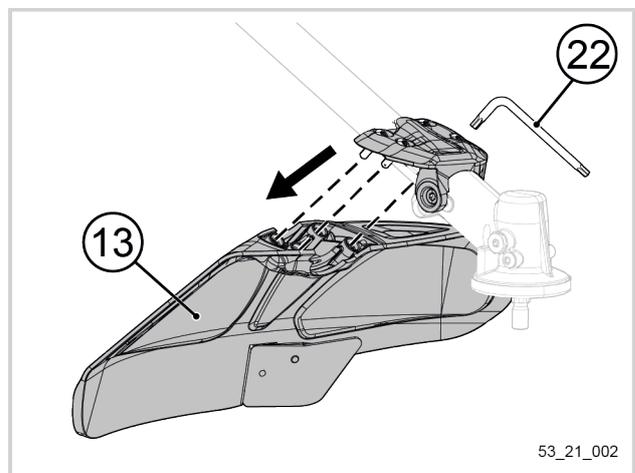

3. Remove the upper part of the safety guard (13) by first removing the eyelet fitted on the upper screw of the angle gear (11).

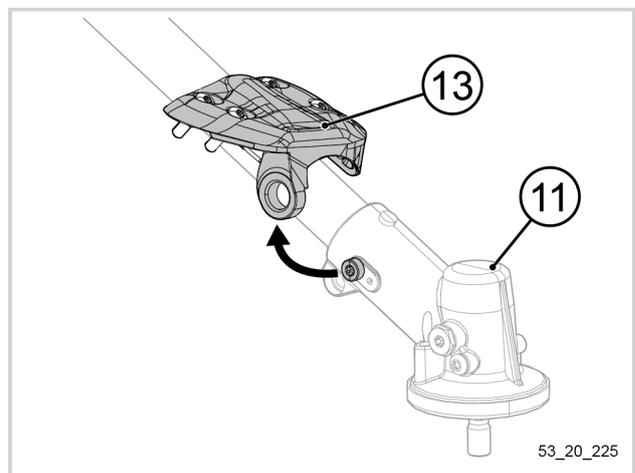

4.3.2. FITTING/DISMOUNTING OF THE PROTECTIVE SHIELD (OPTION)

Note



Refer to part Section 9.2.2, “Mulching” for the description and reference number of accessories.

The protective shield (ref.158492) is compulsory when the tool is fitted with a mulching blade.

Fitting the protective shield


1. Fit the two parts constituting the protective shield on the transmission shaft (14).
2. Start screwing in the 4 captive screws so as to assemble the two parts of the protective shield.

3. Adjust the position of the protective shield on the transmission shaft, making sure to maintain a distance of 130 mm between the upper part of the angle gear (11) and the flange of the protective shield.
4. Lock the position of the protective shield by tightening the 4 captive screws.

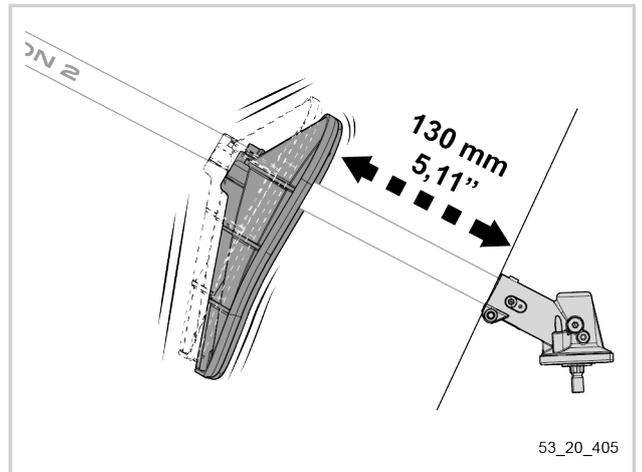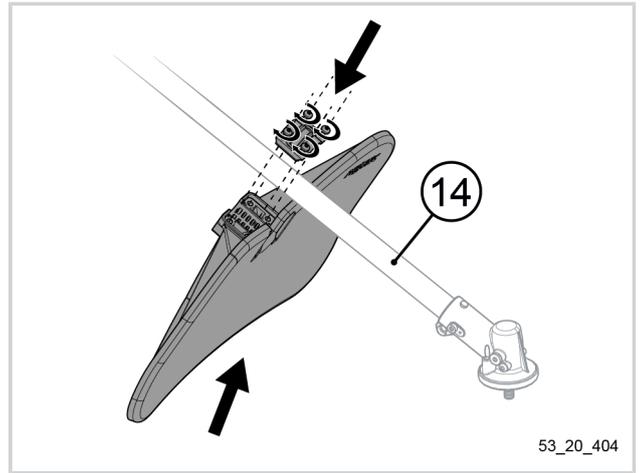

Dismounting the protective shield

1. Unscrew the 4 captive screws which lock the position of the protective shield.
2. Remove the two parts of the protective shield.

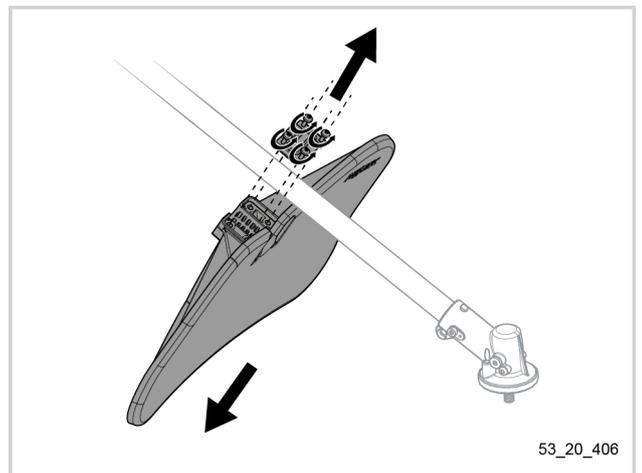

4.3.3. FITTING/DISMOUNTING THE SAFETY GUARD FOR THE CHISEL-TOOTH SAW BLADE (OPTION)

The safety guard (ref. 111500) is compulsory when the tool is fitted with the chisel-tooth saw.

Refer to Section 4.4.5, "Fitting/dismounting the chisel-tooth saw on the tool".

4.4. FITTING/DISMOUNTING OF THE CUTTING HEADS ON THE BRUSH CUTTER



Caution

Before any intervention on the tool, stop the machine completely and disconnect the battery. To consult the procedure for switching off your tool, refer to Section 5.1.2, “Stopping the tool”.

Wear safety gloves. Handling of sharp elements.

4.4.1. FITTING/DISMOUNTING THE TRI-BLADE/TWIN-BLADE ON THE TOOL

Note

Refer to part Section 9.2.1, “Weed control” for the description and part numbers of accessories.



Caution



Before any intervention on the tool, stop the machine completely and disconnect the battery. To consult the procedure for switching off your tool, refer to Section 5.1.2, “Stopping the tool”.

Wear safety gloves. Handling of sharp elements.

Fitting the tri-blade/twin-blade on the tool


1. Check that the anti-vegetation protection washer (18) is present on the angle gear (11).
2. Take the tri-blade/twin-blade out of its packaging
3. Place the following parts in turn on the angle gear (11):
 - the tri-blade / the twin-blade,
 - the blade locking washer (pay attention to the direction of insertion),
 - the protective bowl,
 - the bowl retaining nut.
4. Align the angle gear and its cover in order to match the holes located on each of the elements.
5. Insert the Torx 25 wrench (22) supplied with your tool into the hole on the angle gear.

This action will allow the position of the motor shaft and the support washer to be locked.

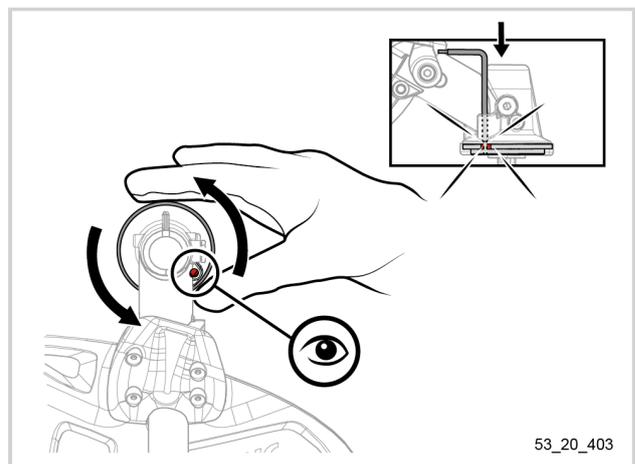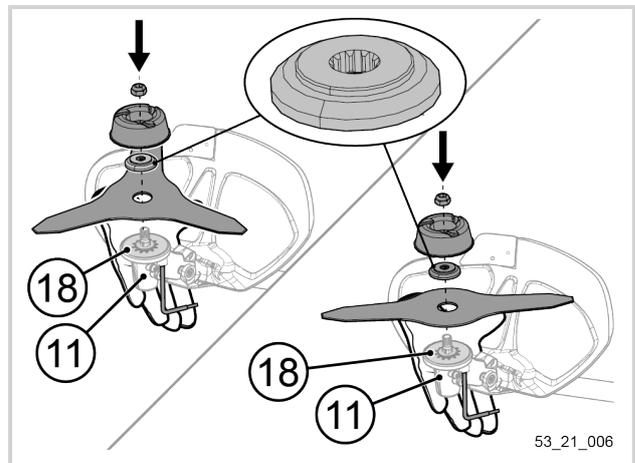

- Using the special EXCELION 2 wrench (23) supplied with your tool, tighten the nut anti-clockwise while holding the protective bowl.


Tightening torque: 35 N m.

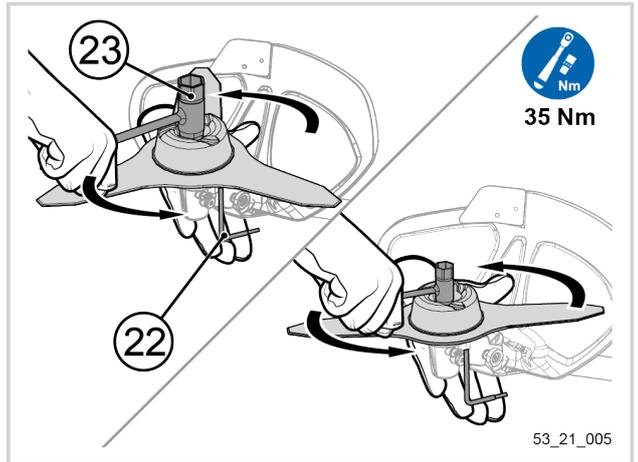

The blade is now fitted on your tool and is ready for use.

Note

After fitting your cutting head on your tool, it is necessary to select it in the HMI to operate the tool. Refer to Section 5.5.2, "Activation of the cutting head via the HMI menu".

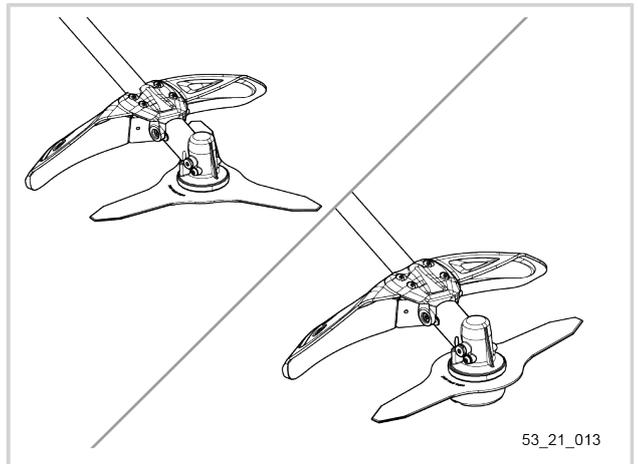


Dismounting the tri-blade/twin-blade from the tool


- Insert the Torx 25 wrench (22) supplied with your tool into the hole on the angle gear.

This action will allow the position of the motor shaft and the support washer to be locked.

- Using the special EXCELION 2 wrench (23) supplied with your tool, unscrew the nut clockwise while holding the protective bowl.

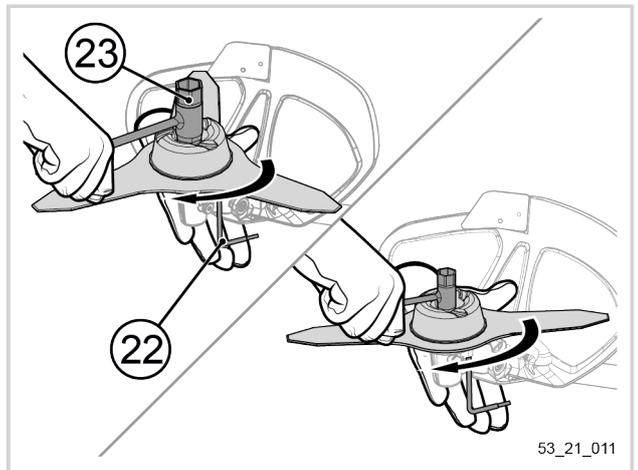

- Remove:
 - the tri-blade / the twin-blade,
 - the blade locking washer,
 - the protective bowl,
 - the bowl retaining nut.

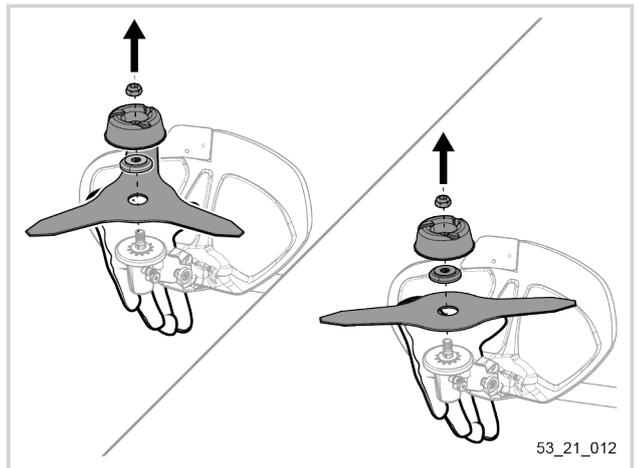

4.4.2. FITTING/DISMOUNTING THE MULCHING BLADE ON THE TOOL

Note

Refer to part Section 9.2.2, “Mulching” for the description and part numbers of accessories.

Caution



Before any intervention on the tool, stop the machine completely and disconnect the battery. To consult the procedure for switching off your tool, refer to Section 5.1.2, “Stopping the tool”.

Wear safety gloves. Handling of sharp elements.




Fitting the mulching blade on the tool

1. Check that the anti-vegetation protection washer (18) is present on the angle gear (11).
2. Take out the mulching blade from its packaging.
3. Place the following parts in turn on the angle gear (11):
 - the mulching blade
 - the blade locking washer (pay attention to the direction of insertion)
 - the specific protective bowl delivered with the Mulching Kit (ref.: 57277)
 - the bowl retaining nut.
4. Align the angle gear and its cover in order to match the holes located on each of the elements.
5. Insert the Torx 25 wrench (22) supplied with your tool into the hole on the angle gear.

This action will allow the position of the motor shaft and the support washer to be locked.

6. Using the special EXCELION 2 wrench (23) supplied with your tool, tighten the nut anti-clockwise while holding the protective bowl.

Tightening torque: 35 N m.

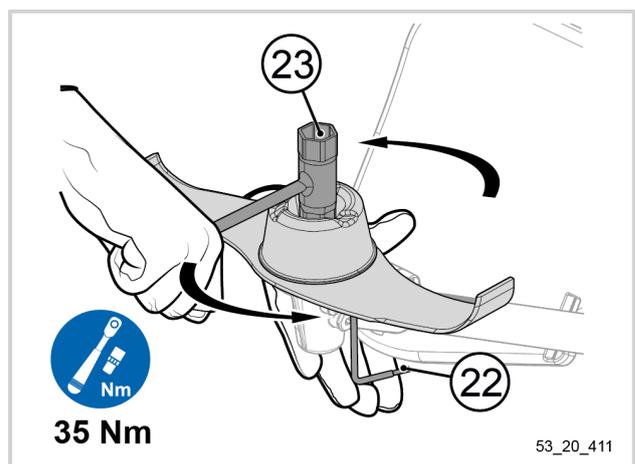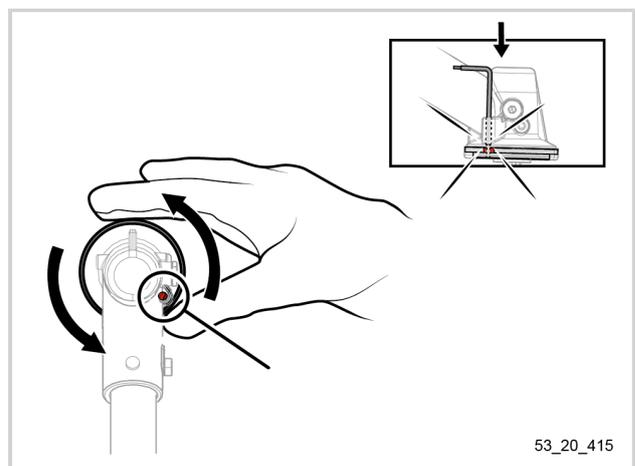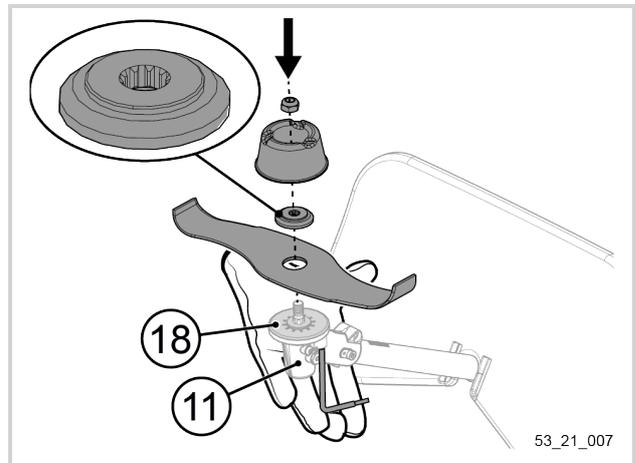

Fitted with the protective shield and the mulching blade, the brush cutter is ready for use.

Note

After fitting your cutting head on your tool, it is necessary to select it in the HMI to operate the tool. Refer to Section 5.5.2, "Activation of the cutting head via the HMI menu".




Dismounting the mulching blade

1. Insert the Torx 25 wrench (22) supplied with your tool into the hole on the angle gear.

This action will allow the position of the motor shaft and the support washer to be locked.

2. Using the special EXCELION 2 wrench (23) supplied with your tool, unscrew the nut clockwise while holding the protective bowl.


3. Remove:
 - the mulching blade
 - the blade locking washer
 - the specific protective bowl delivered with the Mulching Kit (ref.: 57277)
 - the bowl retaining nut.

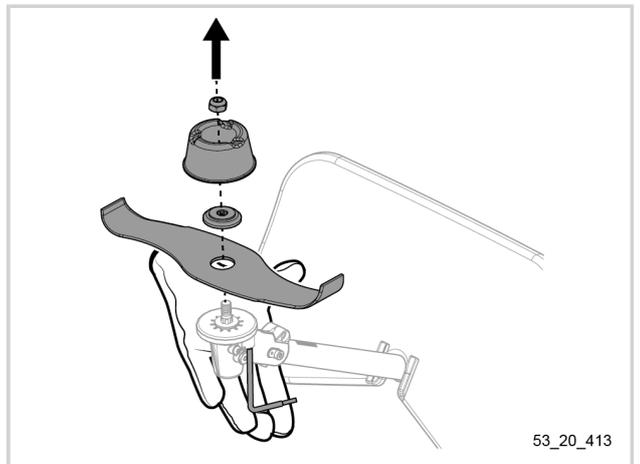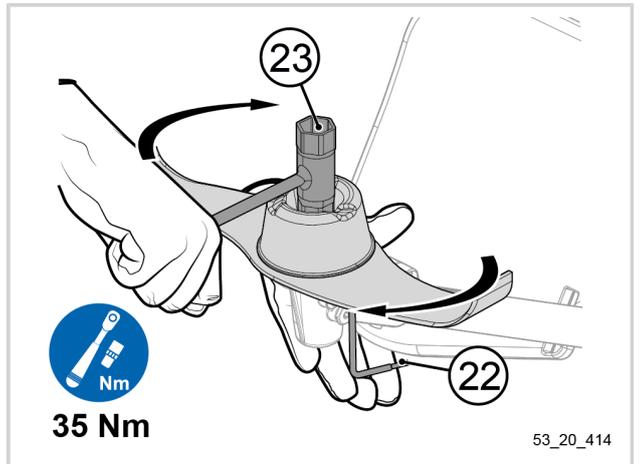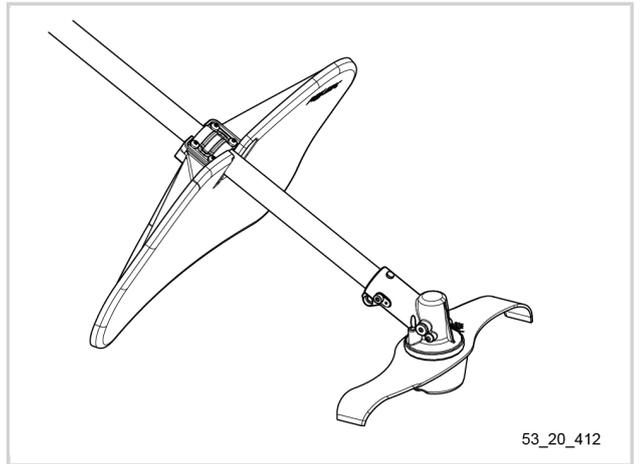


4.4.3. FITTING/DISMOUNTING OF THE TAP CUT 2 / TAP CUT 3

Fitting the TAP CUT 2 / TAP CUT 3 onto the tool

1. Check that the anti-vegetation protection washer (18) is present on the angle gear (11).
2. Fit the TAP CUT (12) on the angle gear (11).

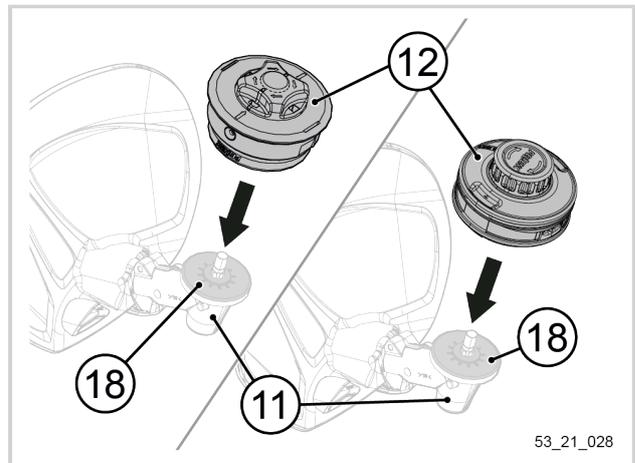


3. Screw the head counterclockwise until in contact with the angle gear.

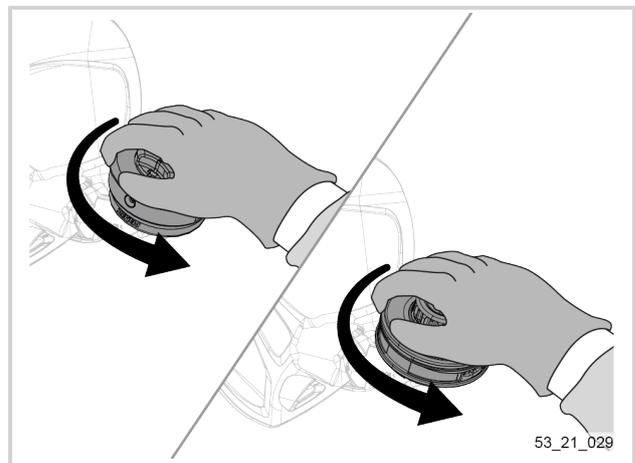


4. Insert the Torx 25 key (22) into the hole on the angle gear.
5. If necessary, turn the head slightly so that the Torx 25 wrench (22) also fits into the corresponding hole on the cutting head this time.

This action will allow the position of the motor shaft and the support washer to be locked.

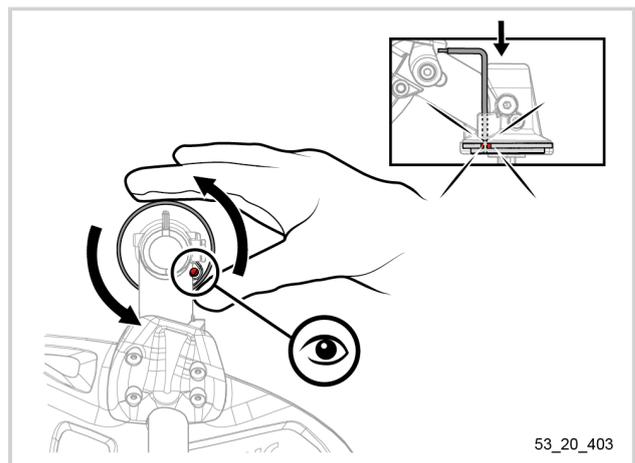


6. Tighten the head counterclockwise to lock the position.

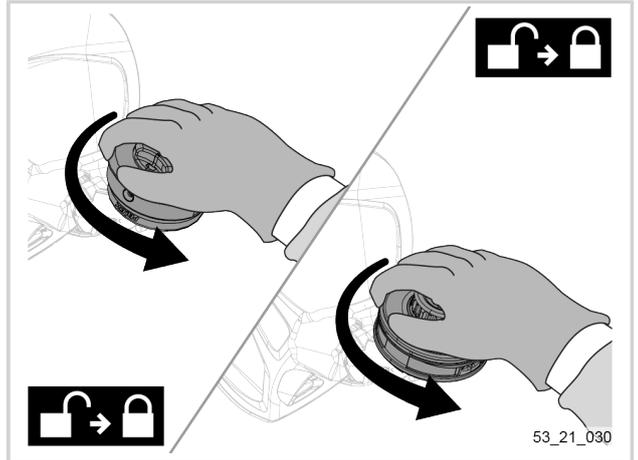

Fitting a strimmer wire

The TAP CUT wire refill system that allows it to be refilled with strimmer wire without having to open the head.


1. For the TAP CUT 2, turn the central part so as to align the arrows on the outer part with the lines on the central part.
2. For the TAP CUT 3, turn the central part so as to align the arrows on the outer part with the lines on the central part.

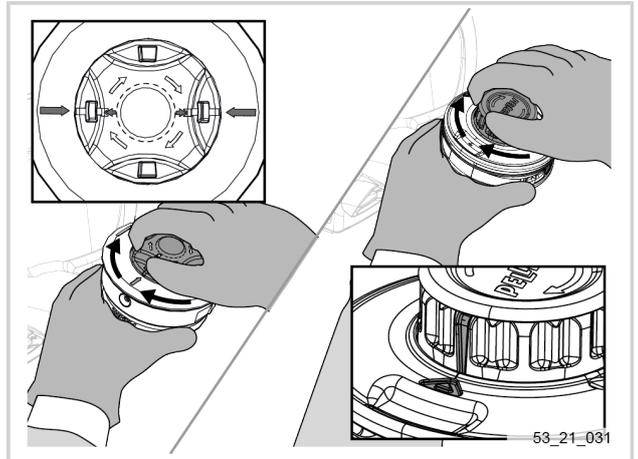


3. Cut a length of strimmer wire of 3 metres maximum (refer to Section 9.4, "Consumables")
4. Insert the strimmer wire through one of the eyelets and pass the strimmer wire through the TAP CUT.

Note

To make it easier to insert the strimmer wire through the eyelets, use both hands to slacken the strimmer wire. This will make the strimmer wire stiffer and straighter.

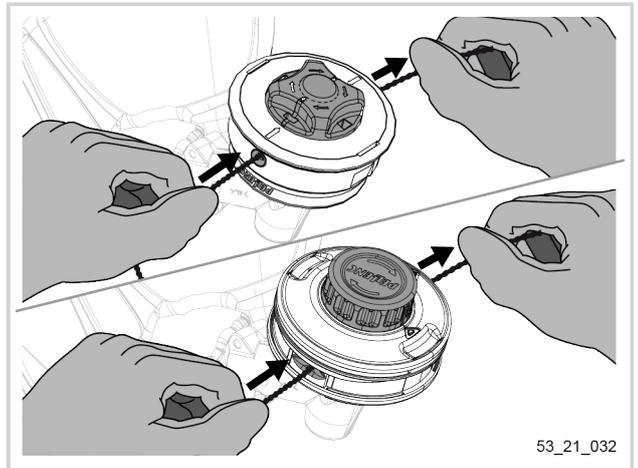


The strimmer wire should be the same length on both sides of the cutting head.

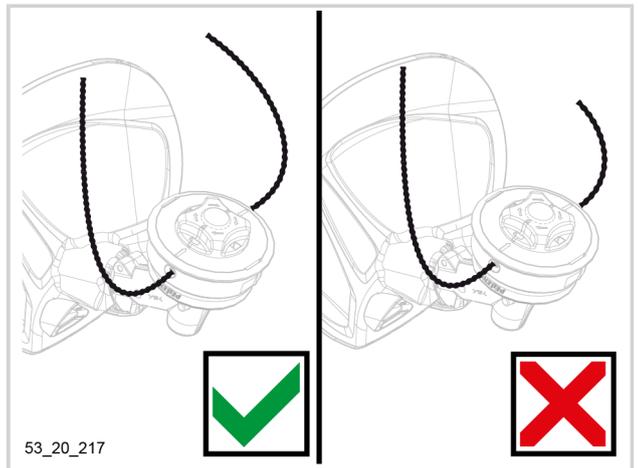

- Screw in the middle part so that the wire enters the cutting head and becomes less and less apparent.

Note

The length of the trimmer wire must be sufficient for the blade on the safety guard to cut it.

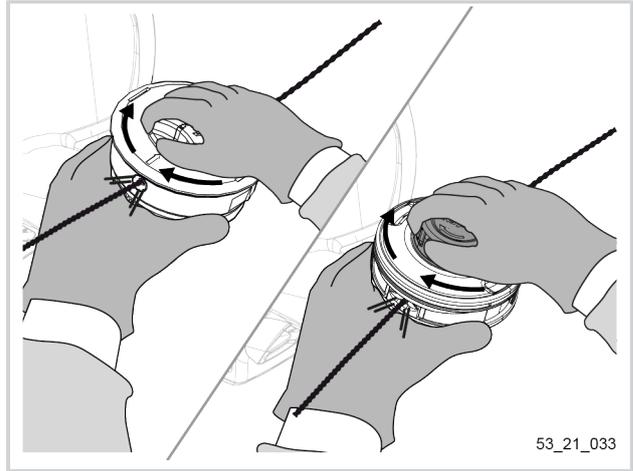

53_21_033


Note

After fitting your cutting head on your tool, it is necessary to select it in the HMI to operate the tool. Refer to Section 5.5.2, "Activation of the cutting head via the HMI menu".

Dismounting the TAP CUT 2 / TAP CUT 3 from the tool


- Insert the Torx 25 key (22) into the hole on the angle gear.
- If necessary, turn the head slightly so that the Torx 25 wrench (22) also fits into the corresponding hole on the cutting head.

This action will allow the position of the motor shaft and the support washer to be unlocked.

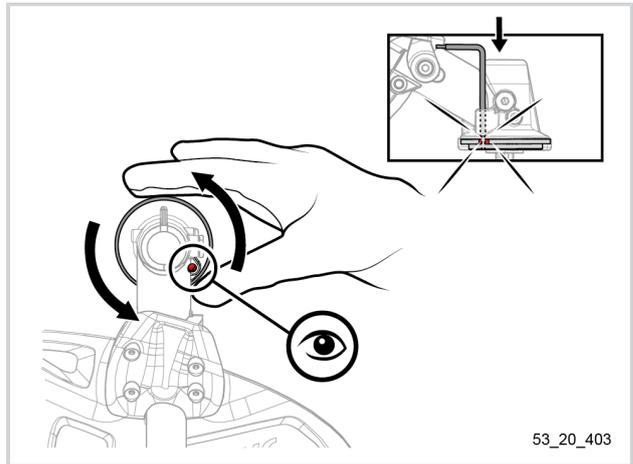


53_20_403

- Turn the head clockwise to unlock the position.
- Unscrew the head.

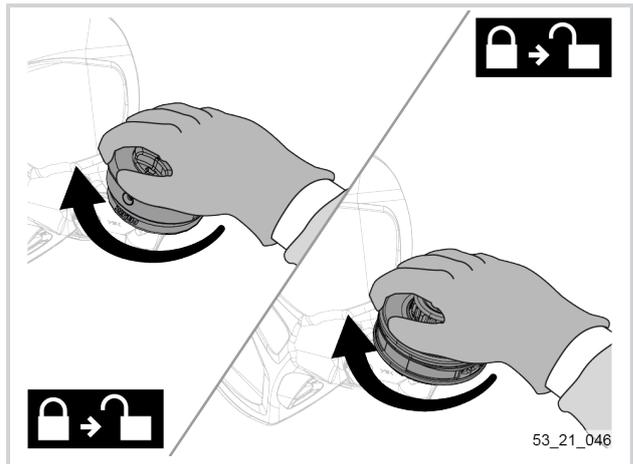

53_21_046


5. Remove the TAP CUT (12) from the angle gear (11).
6. Take care not to lose the anti-vegetation protection washer (18).

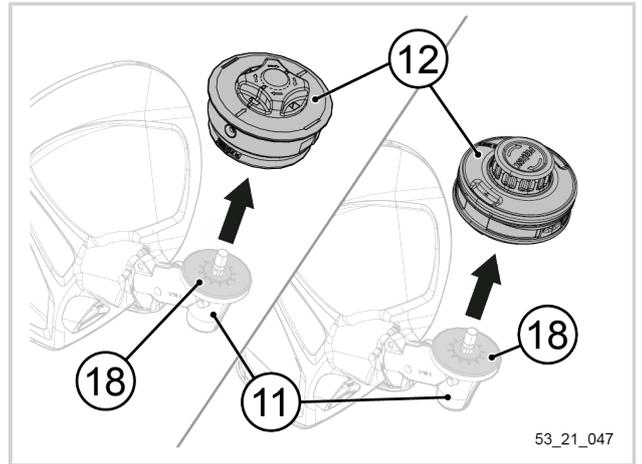


4.4.4. ADJUSTING THE LENGTH OF THE STRIMMER WIRE ON TAP CUT 2 AND 3

Adjustment of the length of the strimmer wire

1. Start the tool (refer to Section 5.1.1, "Power on").
2. Operate at maximum speed.
3. Gently tap a few times on the ground.

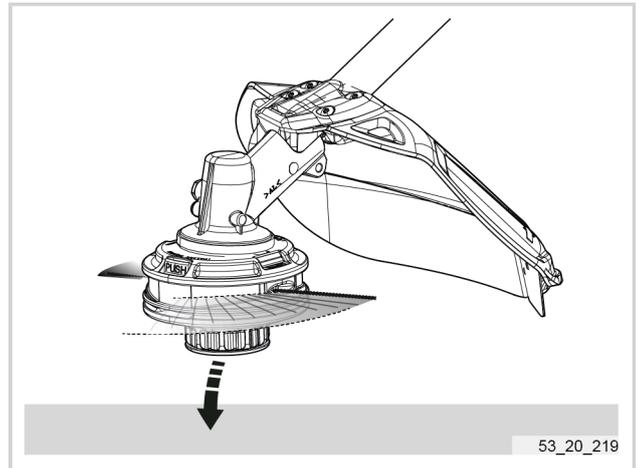

The strimmer wire length will be gradually adjusted by cutting itself on the blade of the safety guard.

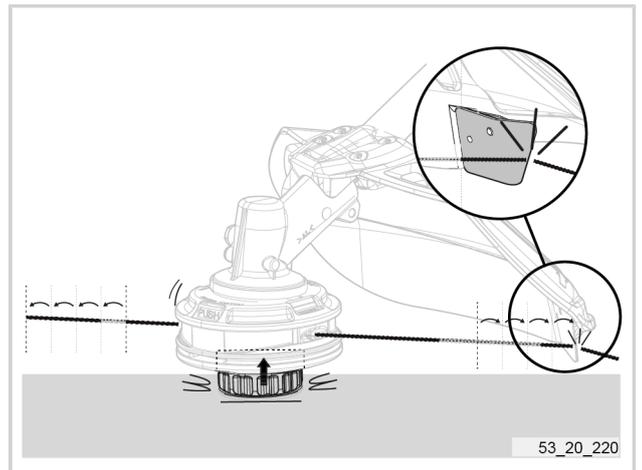

4.4.5. FITTING/DISMOUNTING THE CHISEL-TOOTH SAW ON THE TOOL

Note

Refer to part Section 9.2.3, "Chisel-tooth saw" for the description and part numbers of accessories.




Caution

Before any intervention on the tool, stop the machine completely and disconnect the battery. To consult the procedure for switching off your tool, refer to Section 5.1.2, "Stopping the tool".


Wear safety gloves. Handling of sharp elements.

Fitting

1. Unscrew the two screws on the angle gear (11) mounted on the tool.
2. Take the transmission shaft (14) out of its housing.
3. Remove the angle gear (11).

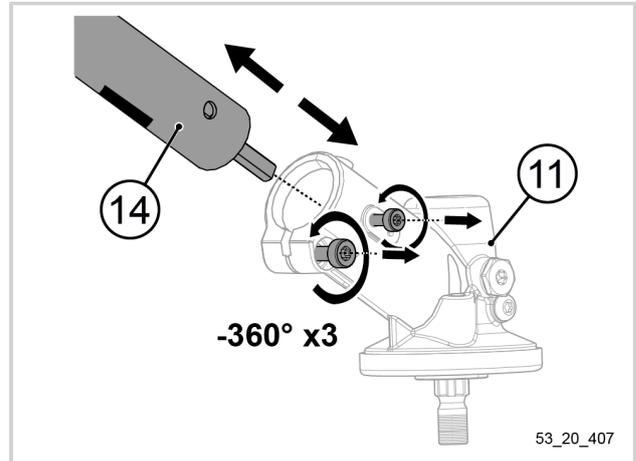


4. Remove the screw located on the right side of the angle gear supplied with your saw Kit (ref. 57275).
5. Insert the transmission shaft (14) into the angle gear.

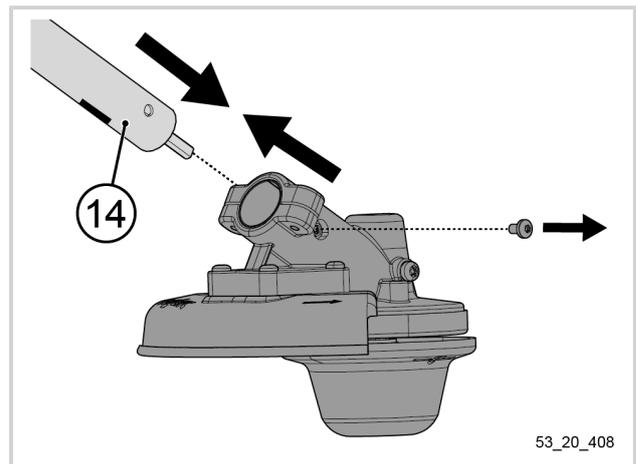

6. Screw in the three screws on the angle gear.


Note

Make sure to line up the side screw with the hole in the tube before tightening.

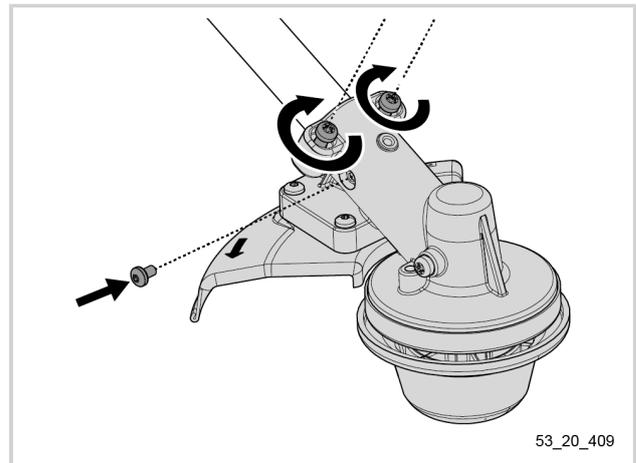


7. Align the angle gear and its cover in order to match the holes located on each of the elements.
8. Insert the Torx 25 wrench (22) supplied with your tool into the hole on the angle gear.

This action will make it possible to lock the position of the angle gear and of its cover.

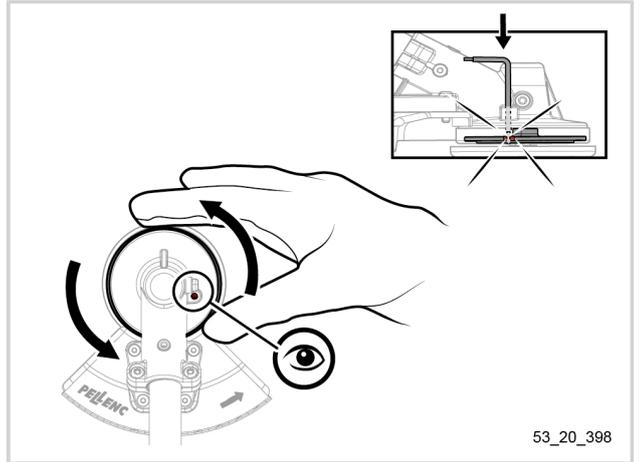


53_20_398

9. Using the special EXCELION 2 wrench (23) supplied with your tool, unscrew the nut clockwise while holding the protective bowl.

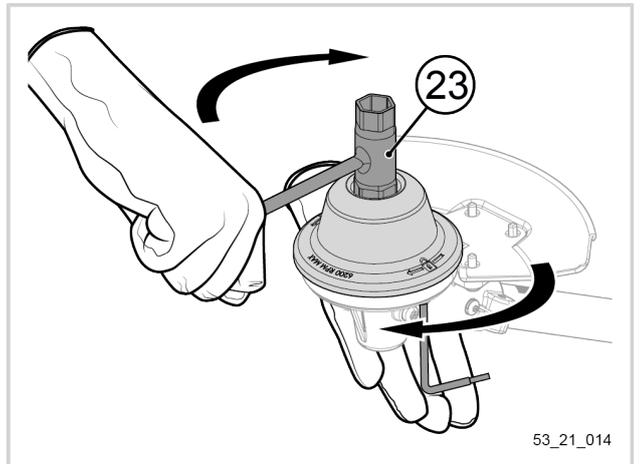

53_21_014

10. Remove the protective bowl.

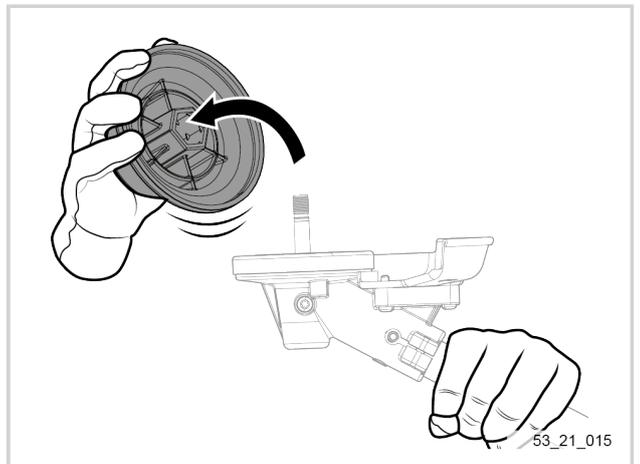


53_21_015

11. Check that the anti-vegetation protection washer (25) is present on the angle gear (11).
12. Place the following parts in turn on the angle gear:
 - the chisel-saw blade (ref. 111700),

Note

Pay attention to the mounting direction. The direction of the arrow engraved on the blade must match that of the arrow on the housing.

- the protective bowl.

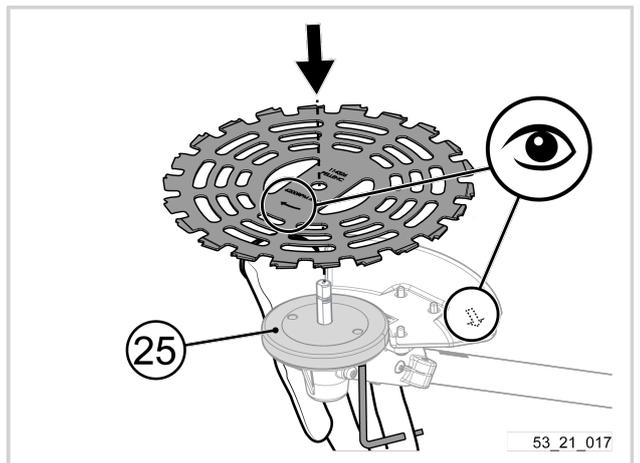


53_21_017

- Using the special EXCELION 2 wrench (23) supplied with your tool, tighten the nut anti-clockwise while holding the protective bowl.

Tightening torque: 35 N m.


Note

After fitting your cutting head on your tool, it is necessary to select it in the HMI to operate the tool. Refer to Section 5.5.2, "Activation of the cutting head via the HMI menu".

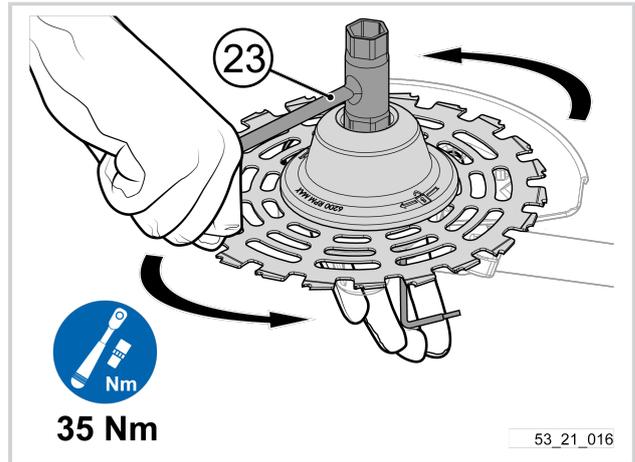


Removing the chisel-saw blade

- Using the special EXCELION 2 wrench (23) supplied with your tool, unscrew the nut clockwise while holding the protective bowl.

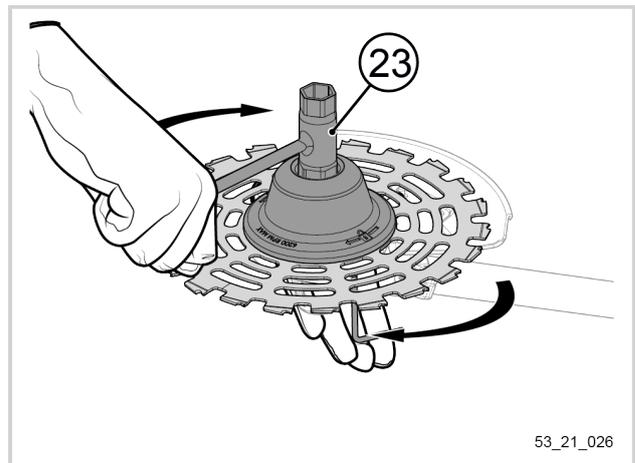


- Remove in turn:
 - the protective bowl,
 - the chisel-saw blade (ref. 111700).

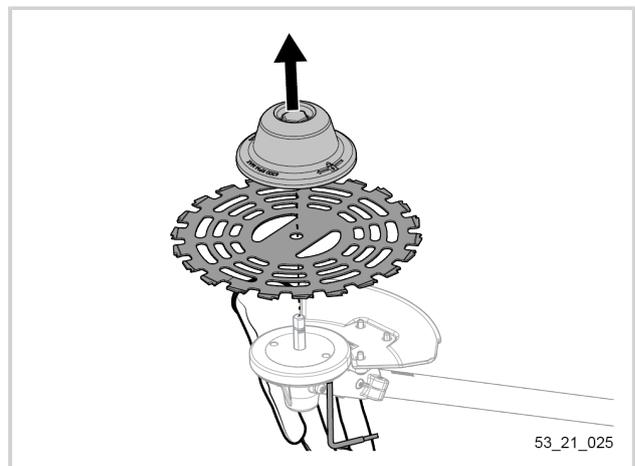


Removing the cutting head

- Unscrew the two screws on the angle gear.
- Remove the screw located on the right side of the angle gear.

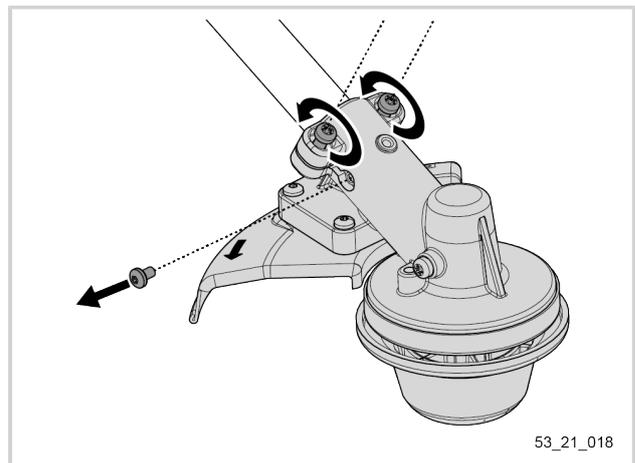

3. Take the tool transmission shaft (14) out of its housing.
4. Remove the cutting head.

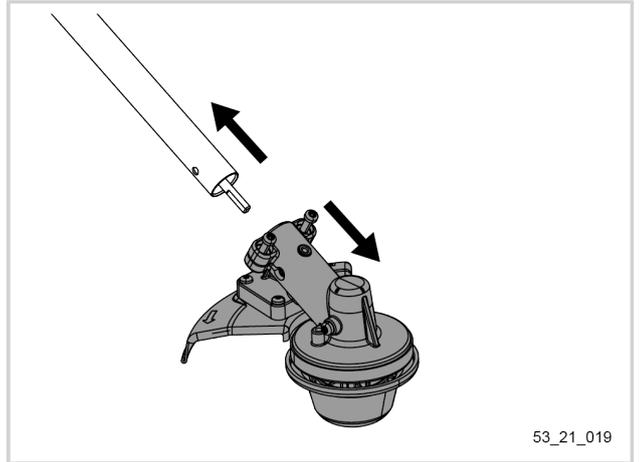

4.4.6. FITTING/DISMOUNTING THE CITY CUT ON THE TOOL




Caution

Before any intervention on the tool, stop the machine completely and disconnect the battery. To consult the procedure for switching off your tool, refer to Section 5.1.2, “Stopping the tool”.


Wear safety gloves. Handling of sharp elements.

Fitting


1. Unscrew the two screws on the angle gear (11) mounted on the tool.
2. Take the transmission shaft (14) out of its housing.
3. Remove the angle gear (11).

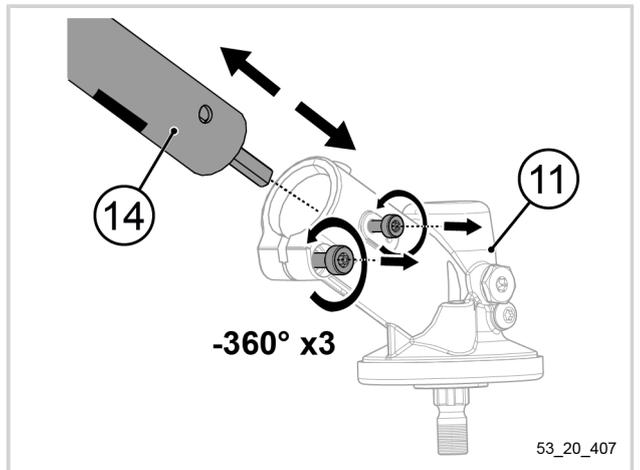

4. Unscrew the two screws on the CITY CUT using the TORX 25 (22) wrench supplied with your tool.

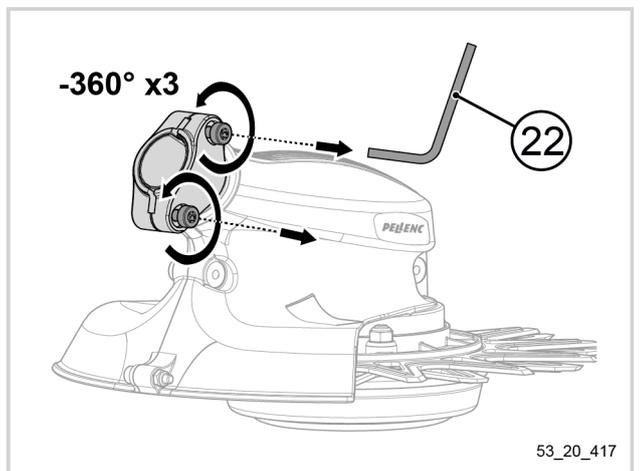


5. Insert the ring supplied with your CITY CUT.

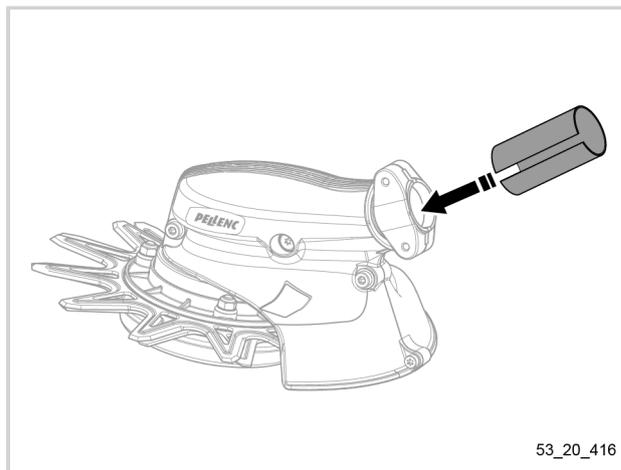


53_20_416

6. During the first fitting, position the sticker supplied with your CITY CUT on the transmission shaft of your brush cutter as shown in the image opposite.

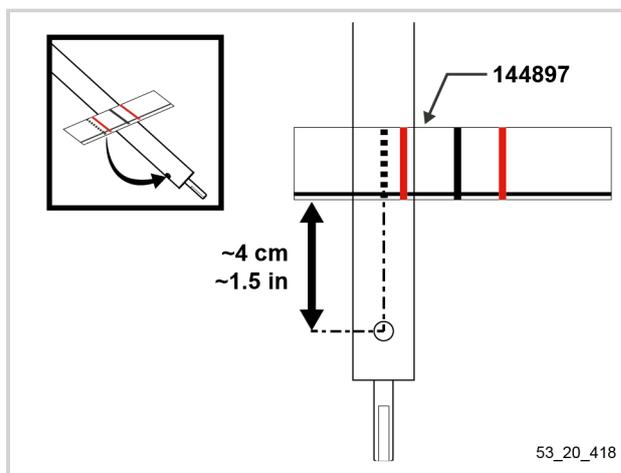


53_20_418

7. Insert the transmission shaft (14) into the CITY CUT.

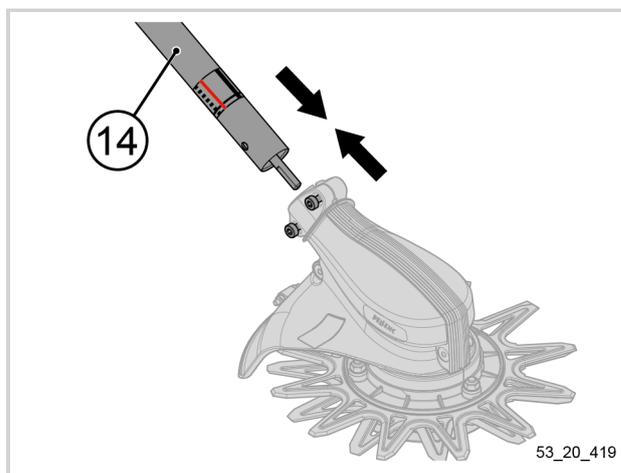

53_20_419

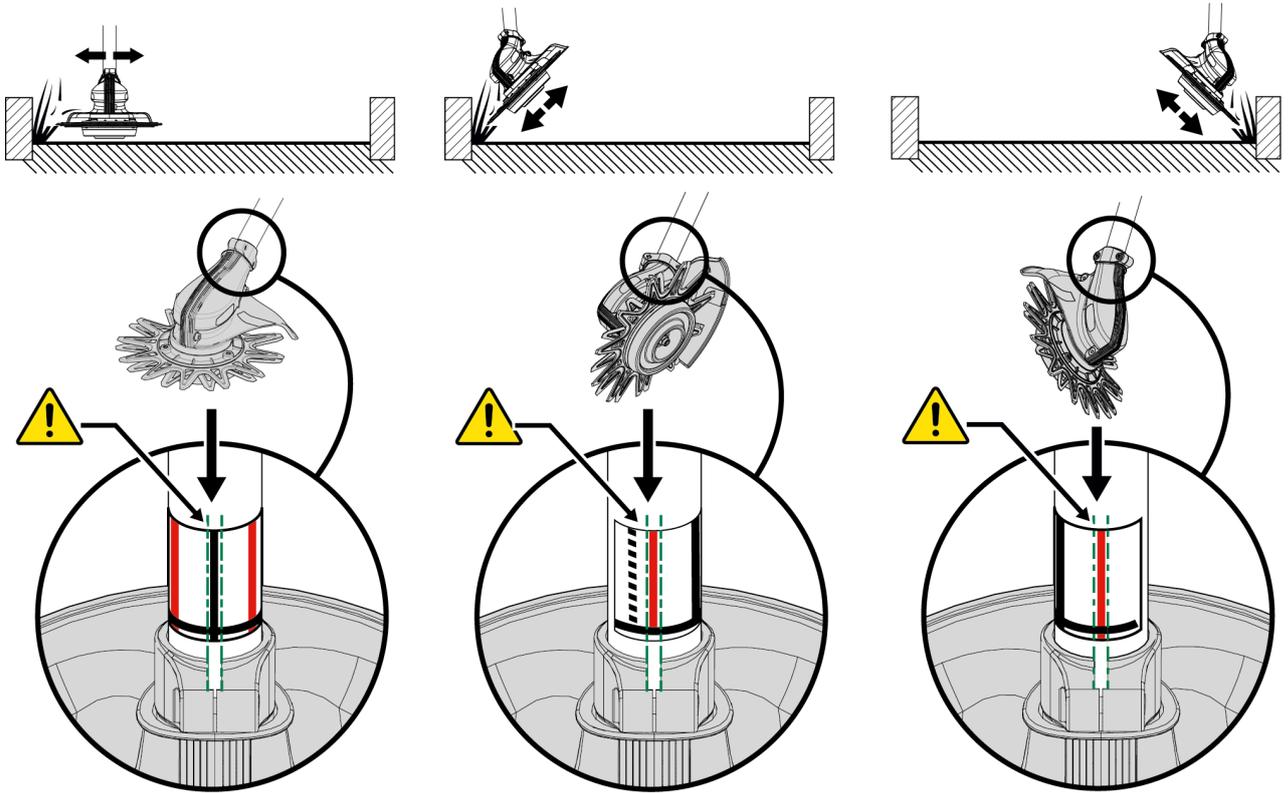

53_20_420


8. Align the marks located on the sticker previously positioned and the top of the CITY CUT head, according to the use that will be made of the tool.
9. Tighten the screws located on the CITY CUT, to lock its position, using the TORX 25 (22) wrench supplied with your tool.

Torque tightening: 8 Nm.

The CITY CUT is now fitted on your tool and is ready for use.

Note

After fitting your cutting head on your tool, it is necessary to select it in the HMI to operate the tool. Refer to Section 5.5.2, "Activation of the cutting head via the HMI menu".


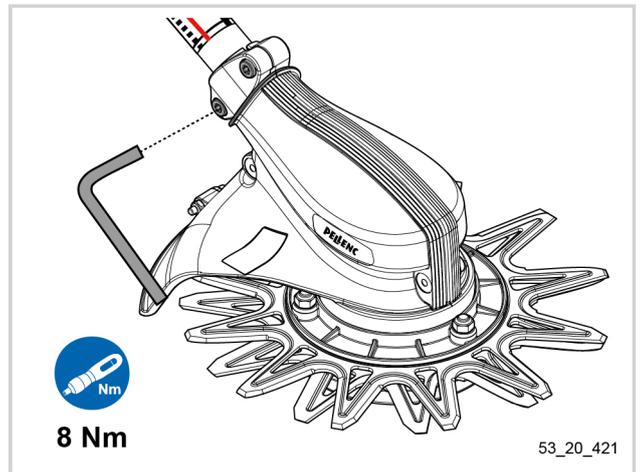


53_20_421

Dismounting

1. Using the TORX 25 wrench (22) supplied with your tool, unscrew the 2 screws located on the CITY CUT.

2. Take the tool transmission shaft (14) out of its housing.
3. Remove the CITY CUT.

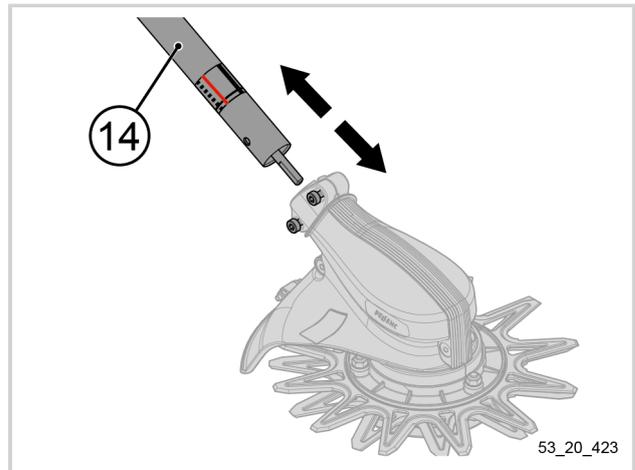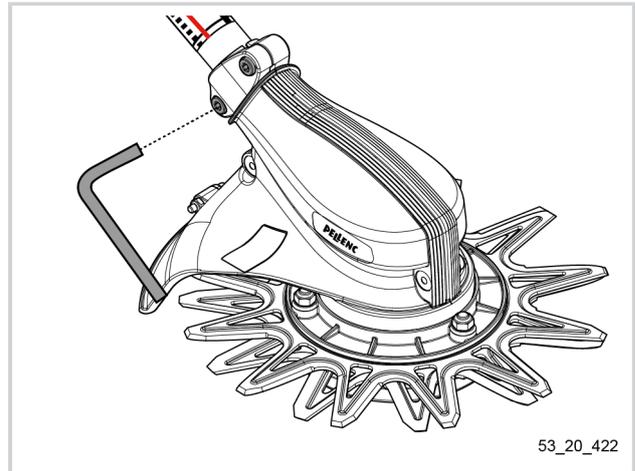

4.5. FITTING THE BATTERY ON THE HARNESS

To consult the procedure for installing your battery on your harness, refer to the assembly sheet supplied with it.

4.6. CONNECTING PELLENC BATTERIES TO THE TOOL


Important

Always check the remaining battery-life before use. If necessary, recharge the battery using the charger.

To prolong the life of the connectors, it is advisable to protect them when they are disconnected. Avoid leaving them in contact with abrasive or dirty surfaces, or subjecting them to significant impacts (falls).


For more information on PELLENC batteries see the battery instructions.

1. Install the battery and the power cord on the harness, refer to the assembly sheet supplied with the harness.
2. Check that the power cord is properly connected.
3. On the right chest strap of the harness, connect the adapter cord (reference 57238 for 750 battery, 57248 for Alpha 520 battery) to the quick connector of the power cord (19) of the Brush cutter.

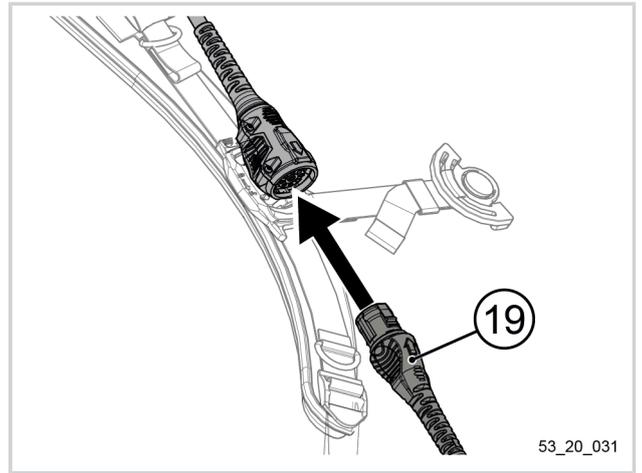

4.7. DISCONNECTING THE BATTERY

1. Switch off the tool (refer to Section 5.1.2, "Stopping the tool").
2. On the right chest strap of the harness, disconnect the adapter cord from the quick connector of the power cord (19) of the Brush cutter.
3. To remove the battery from the harness, refer to the battery instructions and to the harness assembly instructions

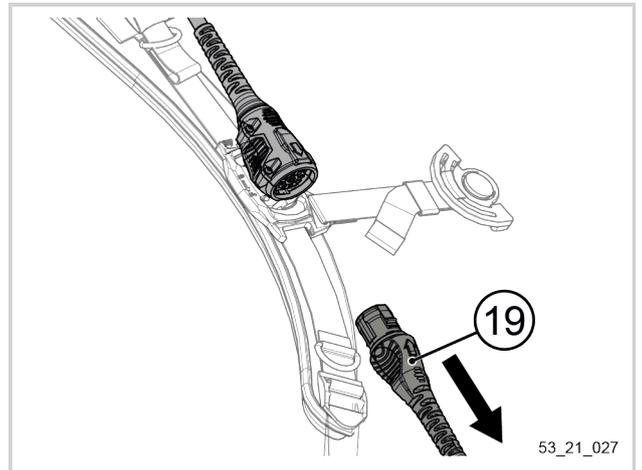

4.8. ADJUSTING THE WORKING POSITION

Important

Take the time to properly adjust your harness and machine. This will guarantee your ease of use and prevent any discomfort.

Before use, the working position of Brush cutter Excelion 2 LH must be adjusted according to the size of the user.


4.8.1. ADJUSTMENT OF THE HARNESS AND FITTING OF THE CARRYING STRAP

Adjusting the length of the harness makes it possible to adjust the "vertical position" of the Brush cutter Excelion 2 LH. This adjustment goes hand in hand with the adjustment of the balancing of the machine and the adjustment of the round handle.


To consult the procedure for adjusting your harness, refer to the assembly sheet supplied with it.

Fitting the carrying strap on the harness:


1. Remove the male chest buckle from the harness.

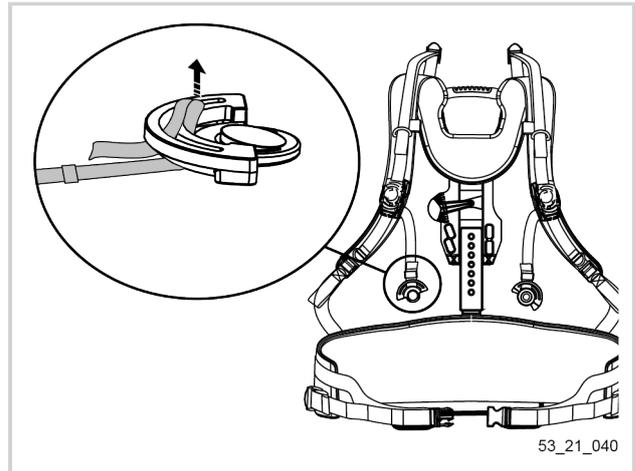


2. Fit the male chest buckle of the carrying strap in place of the original male chest buckle of the harness.

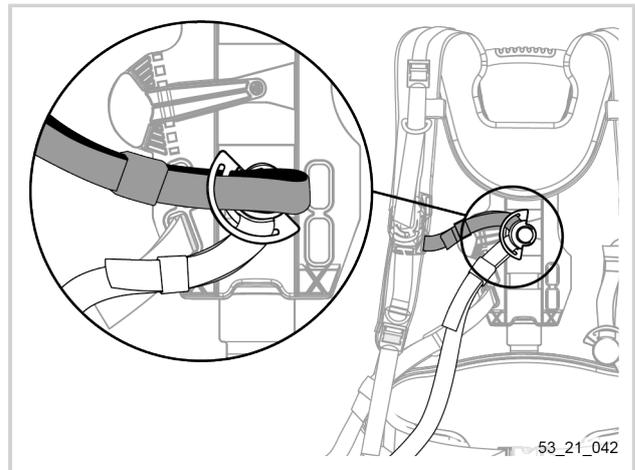

3. Fit the carrying strap end buckle in the location provided on the harness, making sure to pass over the harness holder.

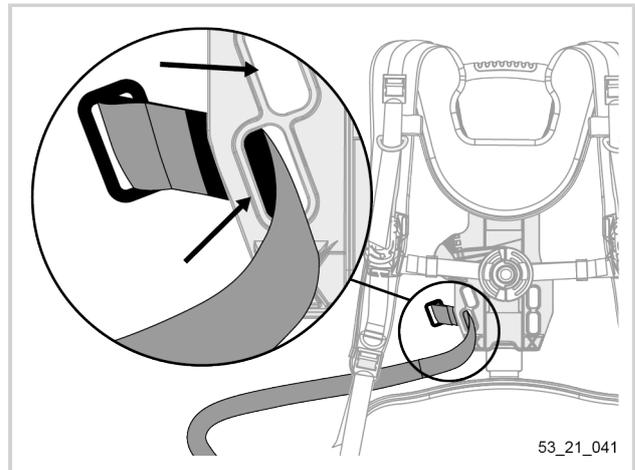

4. Clip the carabiner of the carrying strap (20) into the carrying ring (7).
5. Adjust the carrying strap to obtain the best balance of the tool.

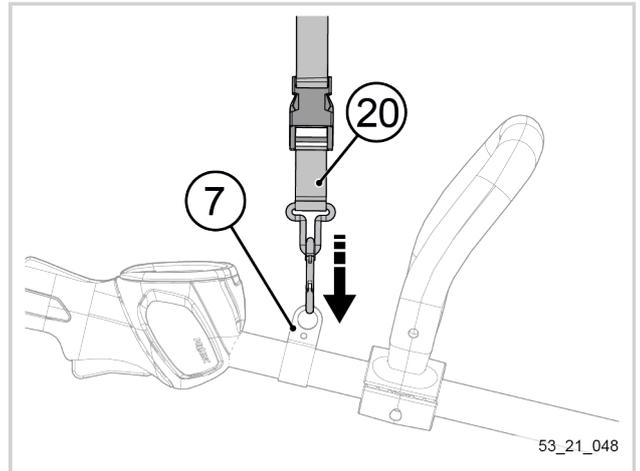


Note


The tool carrying strap has an emergency release system. For more information, refer to Section 5.7, “Emergency release”.

4.8.2. MOVEMENT OF THE CARRIER RING ACCORDING TO THE CENTRE OF GRAVITY

1. Unscrew the screw located on the carrying ring (7).

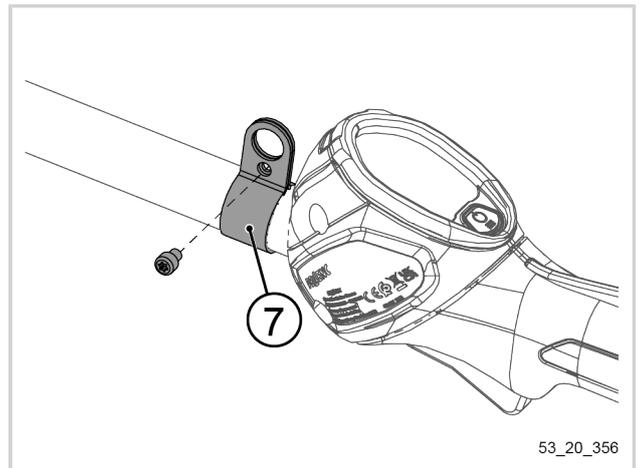

2. Slide the carrier ring over the transmission shaft.
Choose a position which allows you to obtain the best balance of the tool (weight distribution between front and rear and machine balanced horizontally).
3. Replace the screw previously removed on the carrying ring to lock the position of the latter.

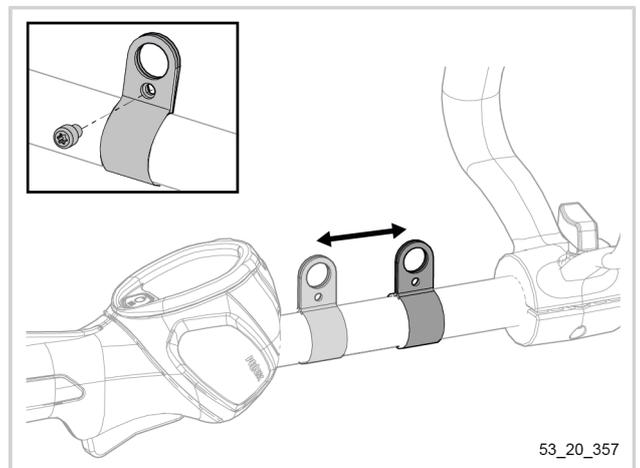

Note

The balancing of the machine depends on the size of the user and the cutting tool used.

4.8.3. ADJUSTING THE POSITION OF THE ROUND HANDLE AND THE DISTANCING BAR

These adjustments help adjust the position of the round handle and the distancing bar according to the morphology of the user.


Refer to Section 4.2, "Fitting/dismounting the round handle on the Brush cutter".

5. USING THE TOOL

5.1. POWERING THE TOOL ON AND OFF

5.1.1. POWER ON


1. Press and hold the POWER / MENU button (9) for 3 seconds.

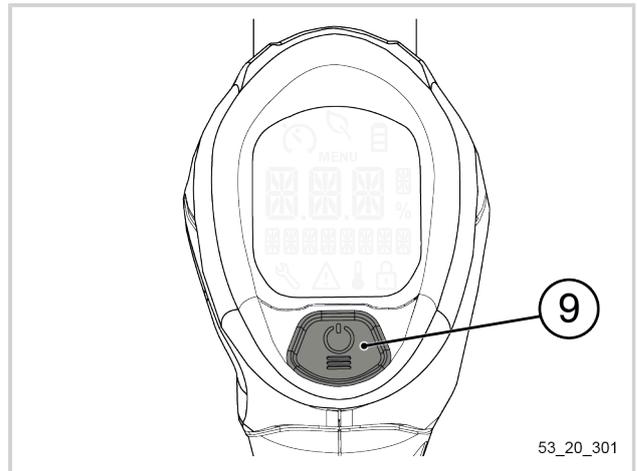

2. Make sure the tool turns on. The screen lights up in blue.


Note

To power on your Excelion 2 LH, it is not necessary to turn on your battery beforehand. In fact, the battery is switched on from the tool handle.

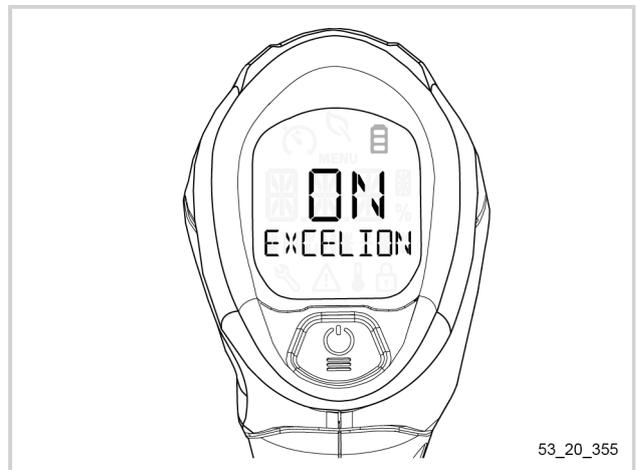


3. Make sure the screen displays the name of the battery.

If the screen displays "BATTERY NOT RECOGNIZED", refer to Section 7, "Incidents and troubleshooting".

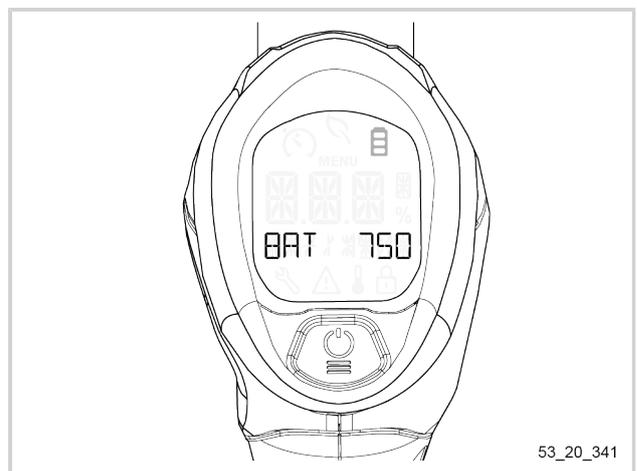

Note

After powering on, your tool is locked by default. It displays "1 X CLICK TO UNLOCK ". To use it, it is necessary to unlock it (refer to Section 5.2, "Unlocking of the tool").

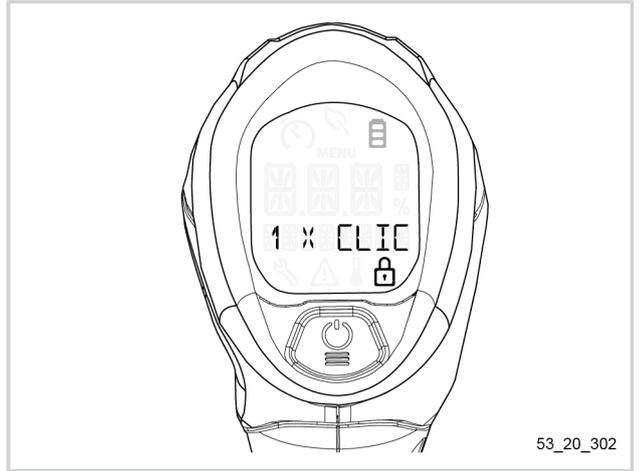


53_20_302

5.1.2. STOPPING THE TOOL

1. From the main screen, press and hold the POWER/MENU button (9) (until "OFF" remains displayed).

The tool switch-off sequence starts.

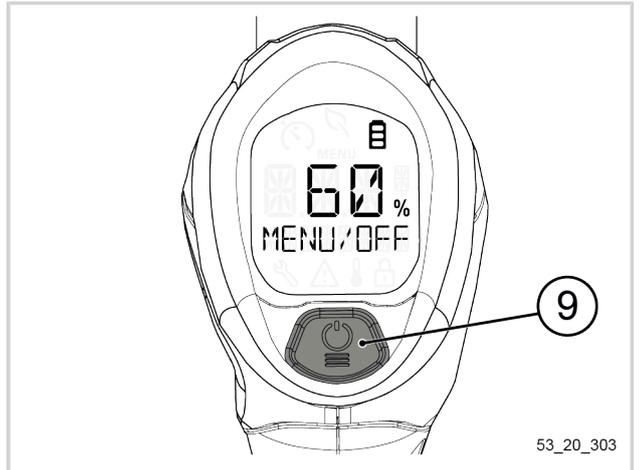


53_20_303

The screen displays "OFF" and there is a countdown, until the tool comes to a complete stop.

Note

If you take your finger off the POWER / MENU button (9) before the required time, the switch-off sequence is interrupted.

The tool cannot be turned off from the menu.

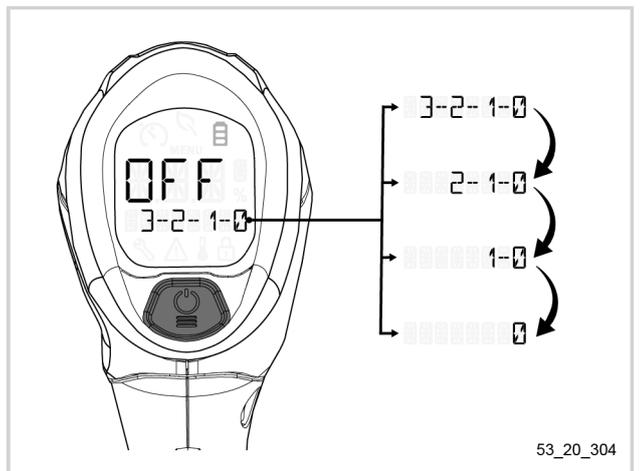

53_20_304

5.2. UNLOCKING OF THE TOOL


To unlock the tool,

1. Press simultaneously on the trigger (6) and the safety throttle (10). The tool is now unlocked.

Note

The tool automatically locks itself after 5 seconds of inactivity.

The battery goes to standby after 15 minutes of inactivity.

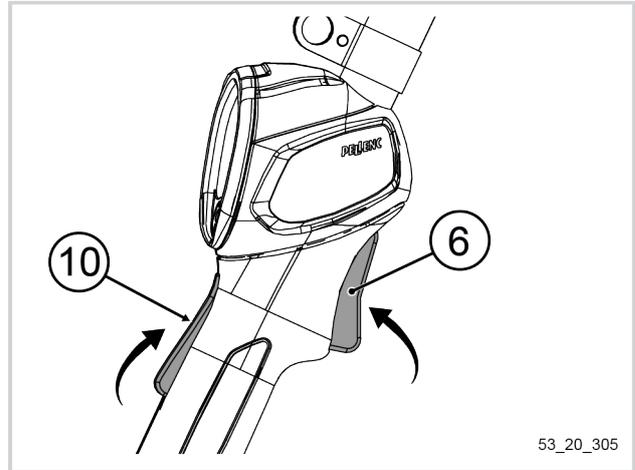

53_20_305


5.3. PRESENTATION OF THE HMI (HUMAN MACHINE INTERFACE) DISPLAY SCREEN

		Energy saving mode
		Battery charge indicator
		Schedule tool maintenance
		Fault
		Caution
		Fault
		High temperature indicator
		Tool locked
		Tool values
		Value unit
		Menu
	Speed indicator	
	Power indicator	

53_20_300

Note

When less than 10 minutes of battery life remain, the screen indicates "- - -".

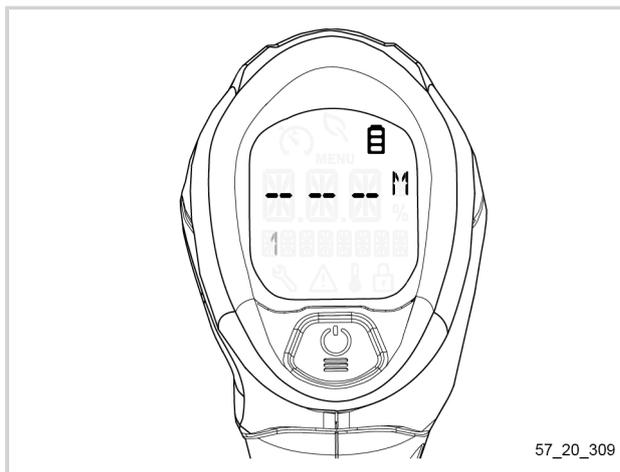

57_20_309

5.3.2. "ENERGY SAVING" PICTOGRAM

In use, when the motor consumption is less than or equal to 500W, a pictogram of a leaf symbol is automatically displayed. It means that the tool is working in energy saving mode.

Note

The energy saving mode only works when the tool is equipped with the blades / mulching blade or the CITY CUT.



57_20_310

5.4. ADJUSTING TOOL SPEED

5.4.1. ACCELERATION


1. Press the safety throttle (10) on the tool handle.
2. To increase tool power, squeeze the trigger (6).

Note

During the first seconds of acceleration, the display will show the currently selected mode.

Note

The tool adapts its acceleration according to the position of the trigger (6): the more the trigger is depressed, the greater the rotational speed.

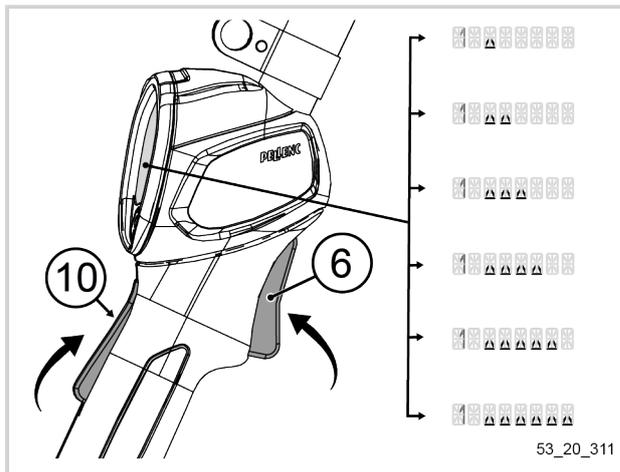

53_20_311


5.4.2. CHANGING SPEEDS

The tool has 4 working speeds.

1. To increase a speed and gain power, press the POWER / MENU button (9) as many times as necessary.

Note

The speed selector works as a loop: 1-2-3-4-1-2-3-4 etc.

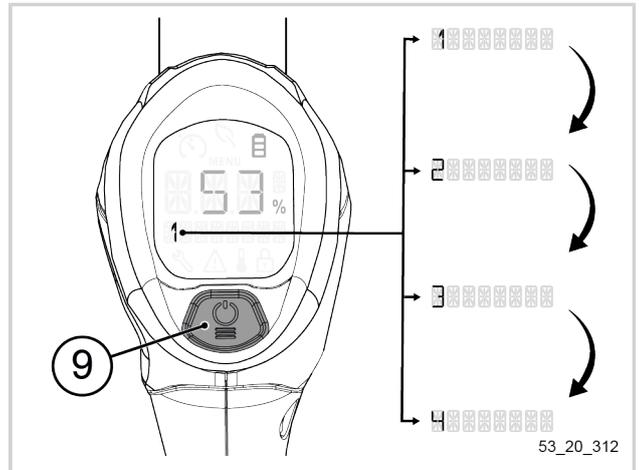


5.4.3. "BOOST" MODE

The "Boost" mode allows you to instantly obtain the maximum rotational speed for the cutting head used (6600 rpm for a blade, 6300 rpm for a strimmer wire).


Activating "Boost"

1. Double press the trigger (6).

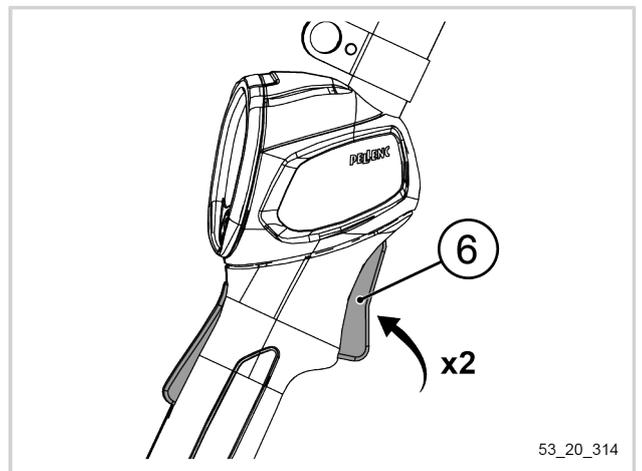

1. Make sure the screen flashes and displays the "Boost" function.

The speed is then at its maximum for a period of 10 seconds.

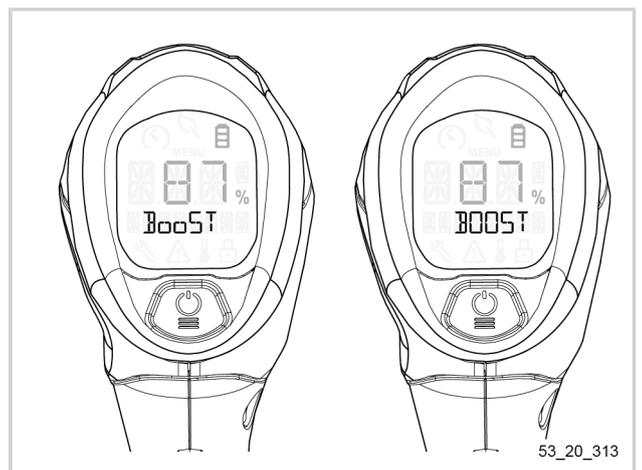


Deactivating “Boost” mode

1. Release the trigger (6).

The "Boost" mode is deactivated.

Note

With the speed is at maximum, in "Boost" mode, the tool consumes more energy. Be sure to use the "Boost" mode only briefly and only when necessary, for example for cutting the strimmer wire or in the case of a higher density of plants.

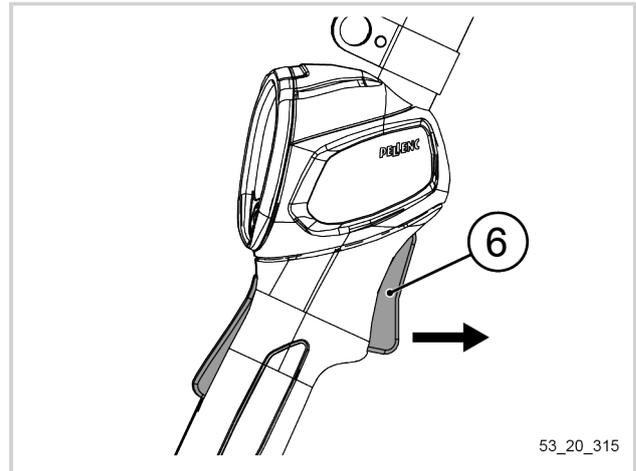

5.5. SETTINGS VIA THE HMI MENU

5.5.1. BROWSING IN THE MENU

Accessing the menu:


1. To access the menu, press the POWER / MENU button (9) for 1 second (until "MENU" is displayed).

Note

If you take your finger off the POWER / MENU button (9) before the required time, the sequence is interrupted.


Navigate in the menu:

1. To navigate between the different menu items, press the POWER / MENU button (9) as many times as necessary.

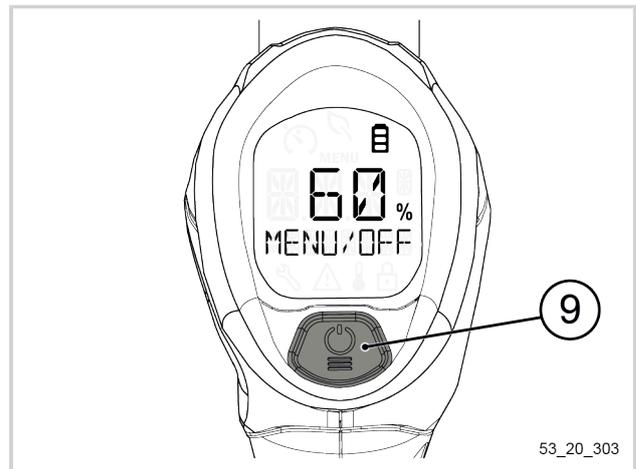

Exit the menu:

1. An action on the trigger (6) exits the menu.

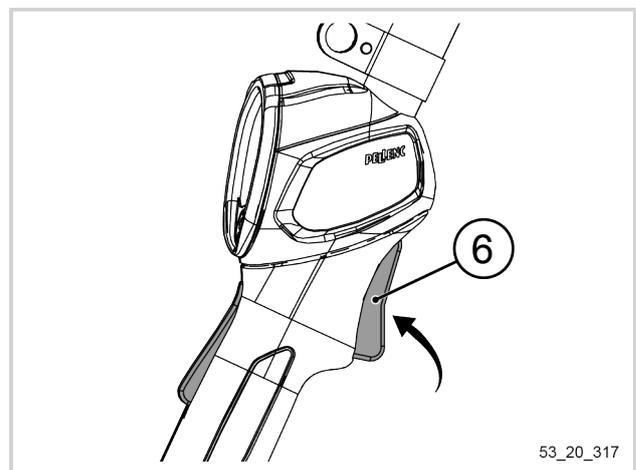

Note

If you exit the menu with the trigger, the screen displays "RELEASE TRIGGER".



5.5.2. ACTIVATION OF THE CUTTING HEAD VIA THE HMI MENU

Selecting the right cutting head is essential to the proper functioning of your brush cutter.

On receipt of your machine, the "TAP CUT" mode is activated by default.

To work with cutting heads on the market or with strimmer wire, activate the "TAP CUT" mode. For work with a blade, activate the "BLADE" mode.

3 choices are available to the user:


- 1 CITYCUT Only speeds 1 and 2 are available. The "CITY CUT mode flashes during work and when stopped to remind the user that the mode is active.
- 2: TAP CUT
- 3: BLADE

Note

1. Only the "CITY CUT" mode flashes on the home screen. The other modes, although selected, will not be visible on the home screen during work or shutdown. When entering the menu, the first displayed mode is the selected mode.
2. Whatever mode is selected, it remains saved for the next start.

1. Access the tool menu (refer to Section 5.5.1, "Browsing in the menu").
2. Click several times on the POWER / MENU button (9) so as to scroll through the different cutting heads available on the tool.
3. Press and hold on the POWER / MENU button (9) to select the cutting head fitted on the tool.

Once selected, the cutting head will be displayed in the middle part of the screen and the text will freeze.

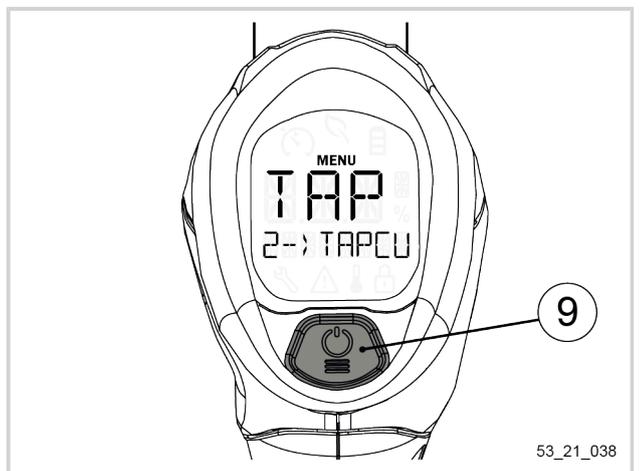


5.5.3. "INFORMATION" MENU AND ACCESS TO MACHINE SETTINGS

Access to the "Information" menu:

1. Access the tool menu (refer to Section 5.5.1, "Browsing in the menu").
2. Click several times on the POWER / MENU button (9) so as to scroll through the different cutting heads available on the tool.
3. Press and hold the POWER / MENU button (9) to select the "Information" menu

The user accesses the tool settings.

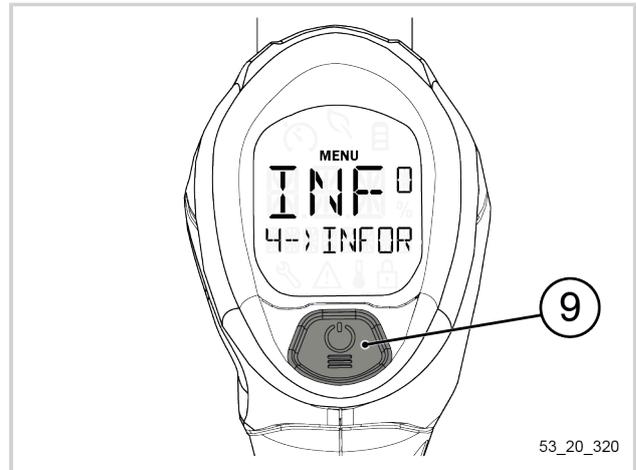


Note

Access to the "Information" menu is available after activating the cutting head via the HMI menu (refer to Section 5.5.2, "Activation of the cutting head via the HMI menu").

- 5.5.3.1. WORKING TIME (HOURS) DISPLAY


1. Access the "Information" menu (refer to Section 5.5.3, "'Information' menu and access to machine settings").

The first parameter to be displayed on the screen is the menu "1-->WORKING TIME-HRS".

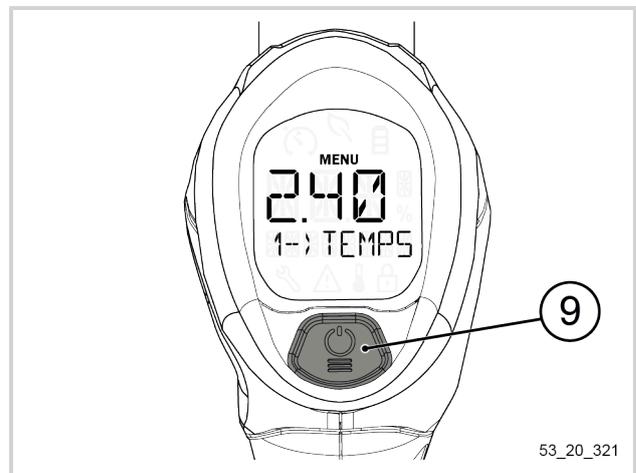


Note

From 10 hours, the display is in increments of one hour. In this example, illustration A indicates a working time of 73 hours and illustration B indicates a working time of 1720 hours.

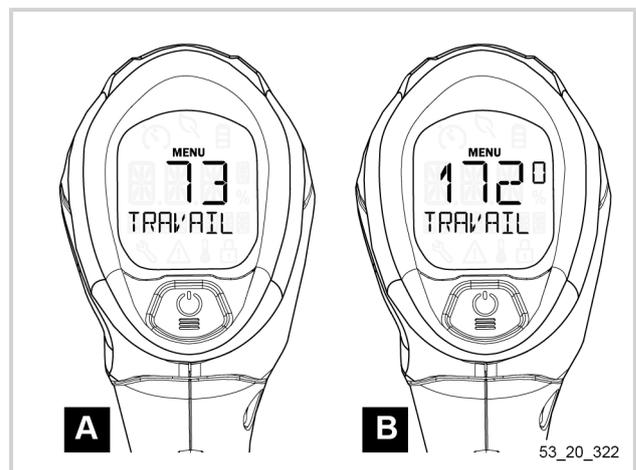

Note

Below 10 minutes worked, the display shows "---".

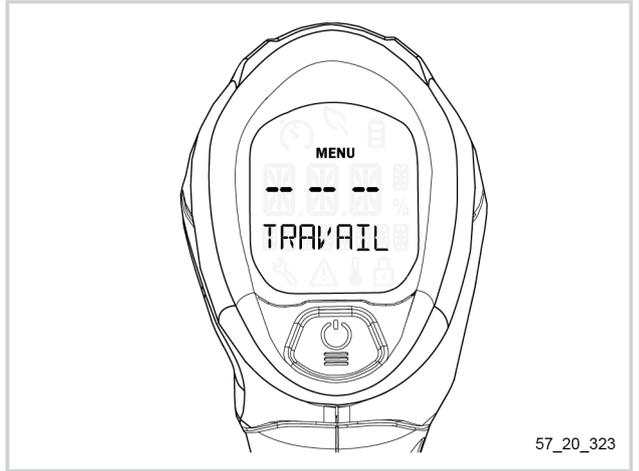


57_20_323

Resetting working time

1. Press and hold the MENU/POWER button (9) for 1 second to reset the value.
2. An action on the trigger exits the menu.

Note

Resetting the working time also resets the average power and the consumed energy.

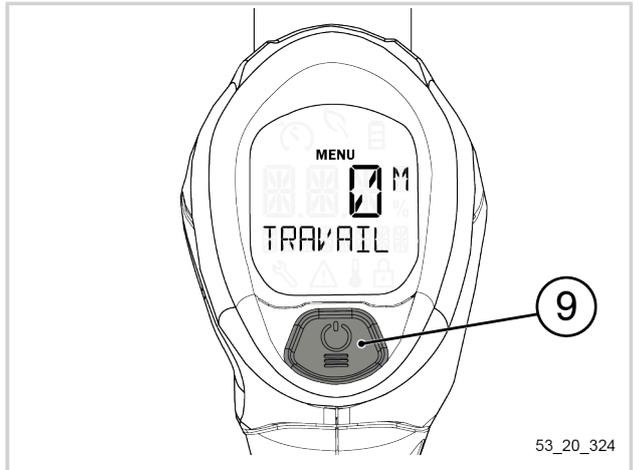

53_20_324


- 5.5.3.2. DISPLAY OF THE AVERAGE POWER USAGE

1. Click on the POWER / MENU button (9) to access the menu "2--AVERAGE POWER-W".

The display shows a value in watts (W).

Note


If the average consumption is below 500W, the screen displays the "Energy saving" pictogram (refer to Section 5.3.2, "Energy saving" pictogram").

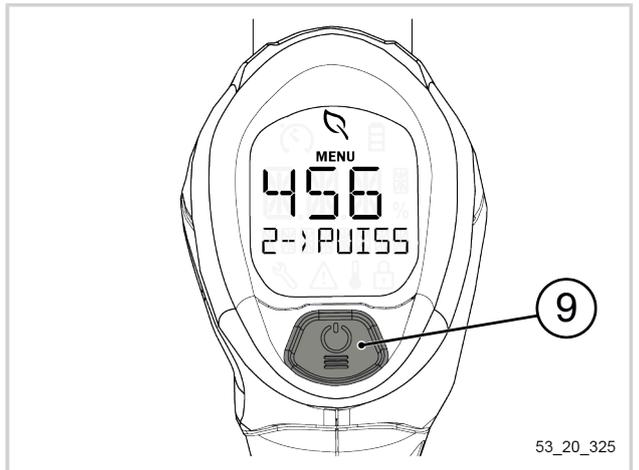

53_20_325

Note

If the data is insufficient to calculate an average power, the display will show "- - -".

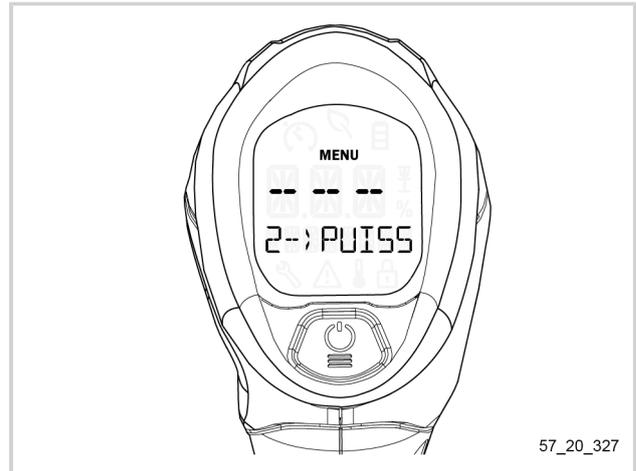


Reset average power

1. Hold down the POWER / MENU button (9) for 1 second to reset the value to 0.
2. An action on the trigger exits the Menu.

Note


Resetting the average power also resets the consumed energy and working time.

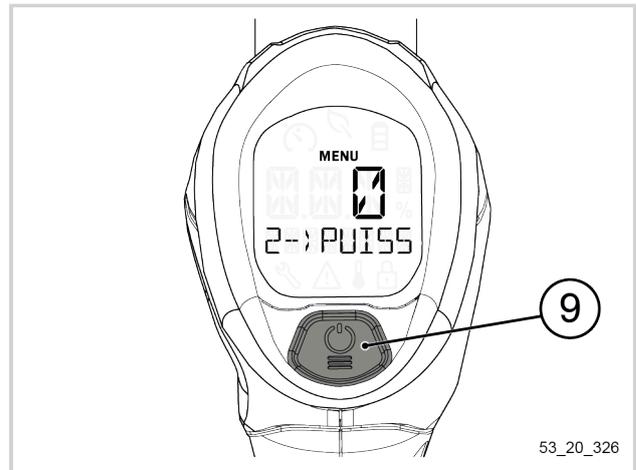

- 5.5.3.3. ENERGY CONSUMPTION DISPLAY


1. Click several times on the POWER/MENU button (9) to access the "3--ENERGY-KWH" menu.

The display shows a value in kilowatt-hours (KWH).

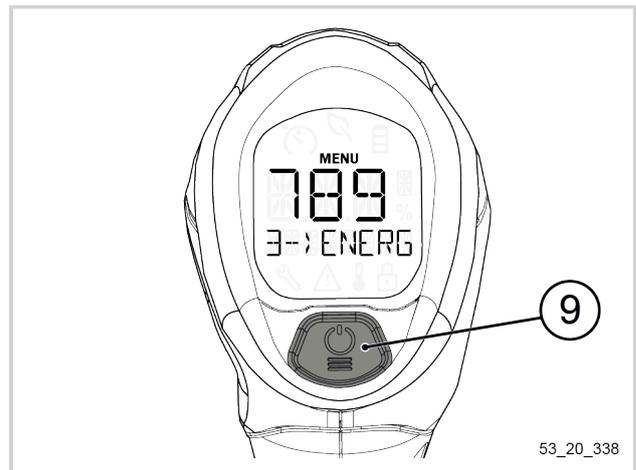

Note

If the data is insufficient to calculate an average consumption, the display will show "- - -".

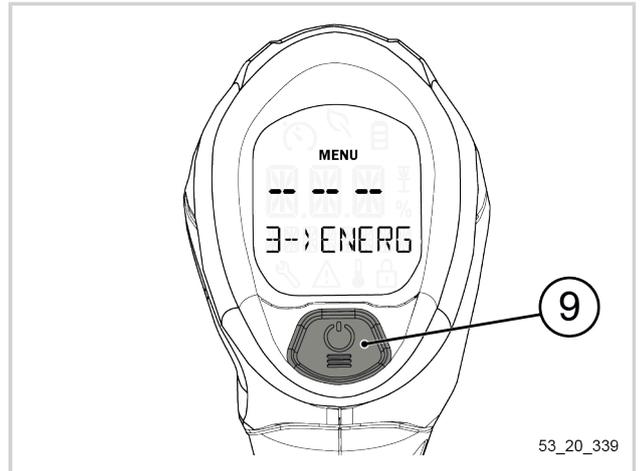


Reset of consumed energy

1. Hold down the POWER / MENU button (9) for 1 second to reset the value to 0.
2. An action on the trigger exits the menu.


Note

Resetting the consumed energy also resets the average power and working time.

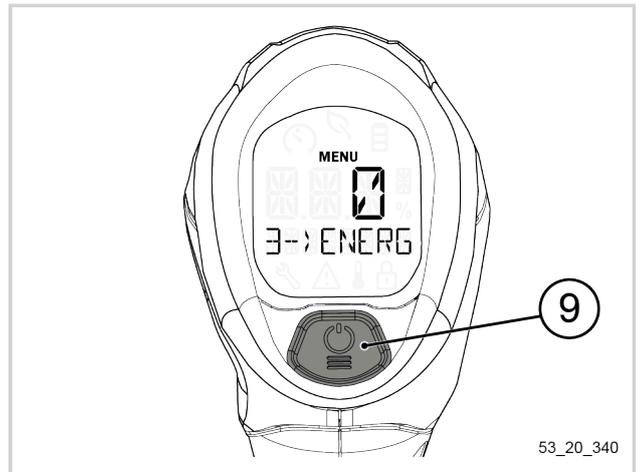

- 5.5.3.4. DISPLAY OF TOTAL TOOL USAGE TIME


1. Click several times on the POWER/MENU button (9) to access the "4--MACHINE HOURS-HRS" menu.
The display shows a value in hours (H).

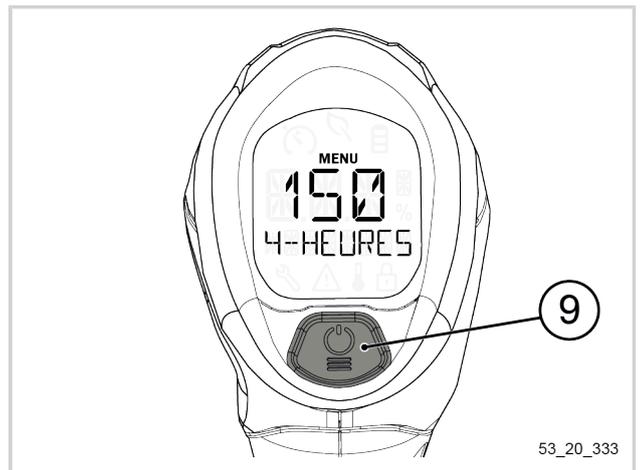

Note

If the data is insufficient when starting the tool for the first time, the display will show "---".

This value cannot be reset.

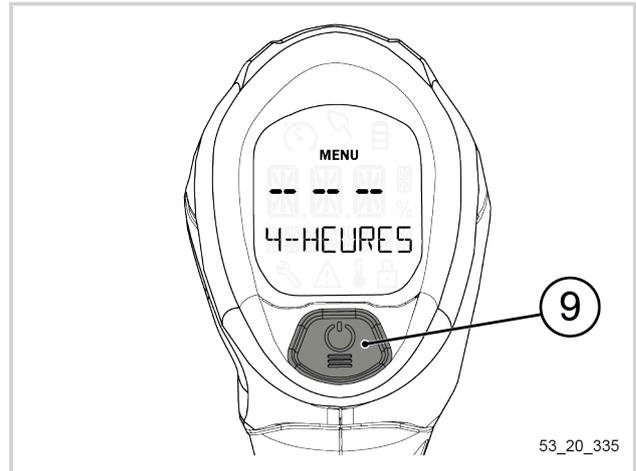


- 5.5.3.5. DISPLAY OF THE TIME REMAINING BEFORE THE MAINTENANCE SERVICE

1. Click several times on the POWER/MENU button (5) so as to display the menu "5--MAINTENANCE-HRS".

When the tool is started for the first time, the screen displays "500".

The screen displays a value in 10 hour increments.

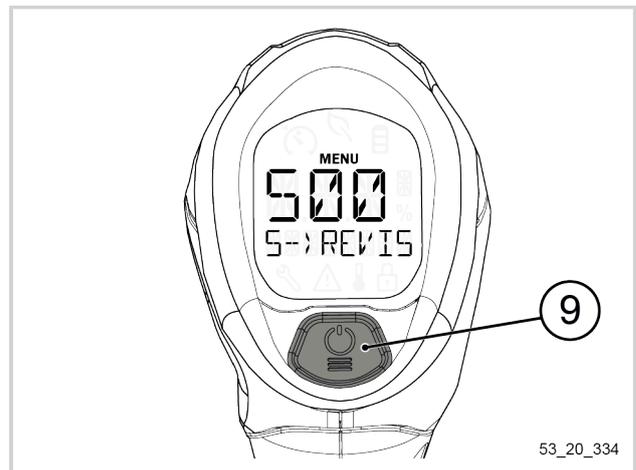



Important

When the "time before service" counter reaches 50 hours, when the tool is started up, the main screen displays a flashing pictogram symbolizing a wrench.

When the counter reaches "0", when starting the tool, the screen displays a fixed pictogram symbolizing the wrench.


In both cases, the tool must be serviced by an authorized PELENC distributor.

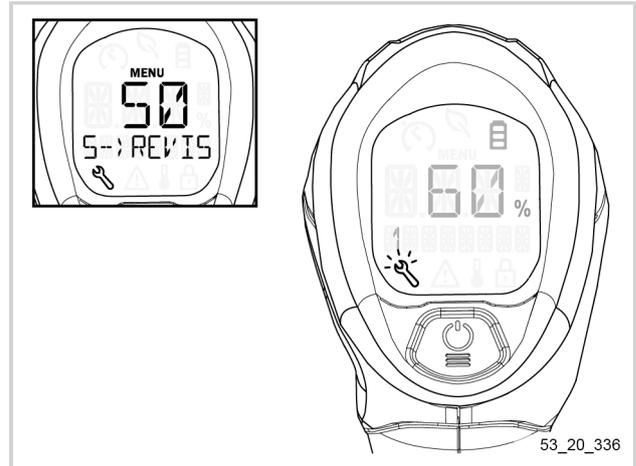

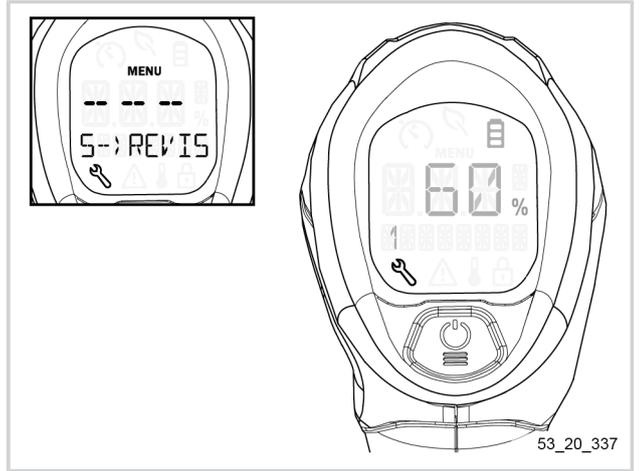


- 5.5.3.6. LANGUAGE SELECTION

1. Click several times on the POWER/MENU button (9) to access the "6--LANGUAGE" menu.

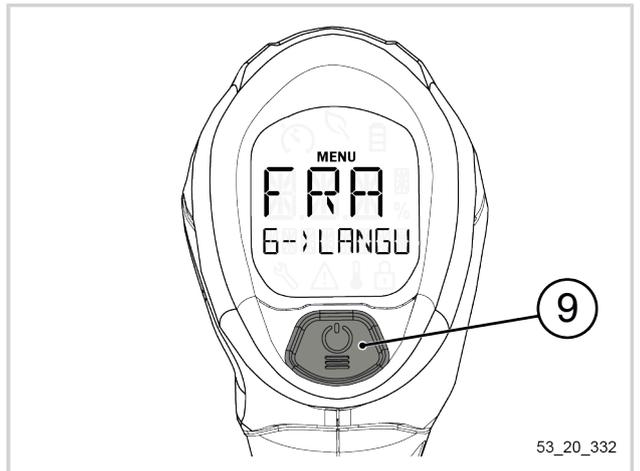

2. Click on the POWER / MENU button (9) for 1 second to enter the tool's language menu.
3. Click several times on the POWER / MENU button (9) so as to scroll through the different languages available on the tool.

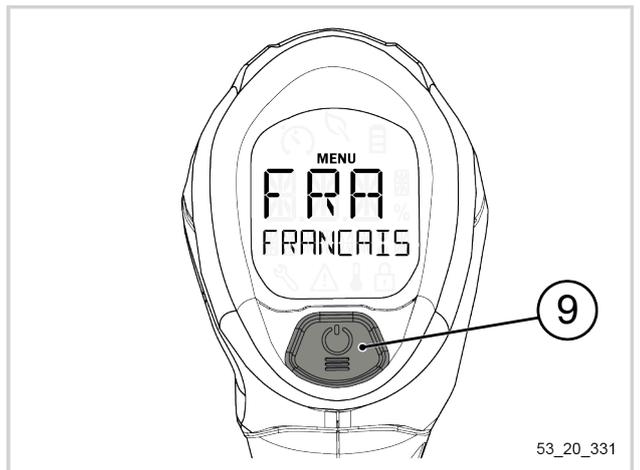


- Click on the POWER button (9) for 1 second to validate the language of the tool.

The selected language is displayed in the middle of the screen and the display returns to the main menu.

- Pressing the trigger (6) allows you to completely exit the menu.

Note

The interface of your tool is available in French, English, Spanish, Italian and German.

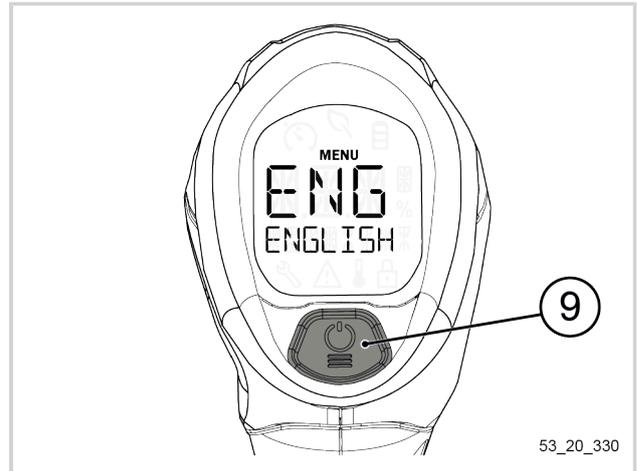


- 5.5.3.7. DISPLAYING THE SOFTWARE VERSION OF THE HMI

- Click several times on the POWER/MENU button (9) to access menu "7--HMI SOFT".

The screen displays the software version of the HMI.

Note

This value cannot be reset.

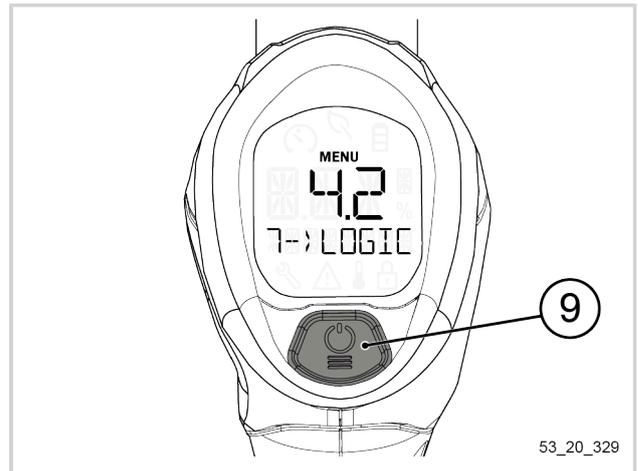


- 5.5.3.8. DISPLAYING THE SOFTWARE VERSION OF THE MOTOR BOARD

- Click several times on the POWER/MENU button (5) to access menu "8--TOOL SOFT".

The screen displays the software version of the motor board.

Note

This value cannot be reset.

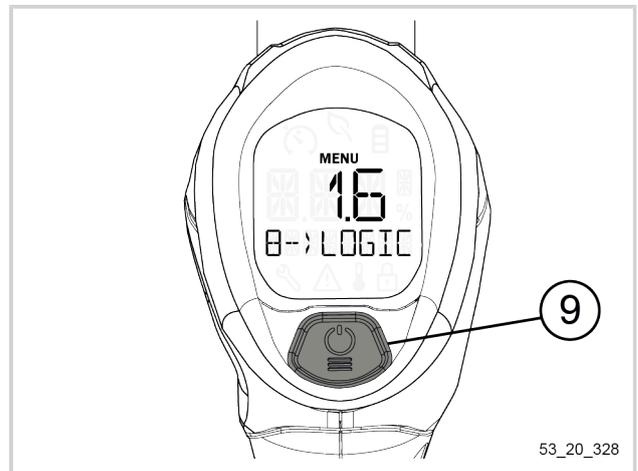

5.6. TIPS FOR USE AND WORKING TECHNIQUES

5.6.1. CHOICE OF THE RIGHT CUTTING HEAD ACCORDING TO THE USE


Whether you want to clean or beautify your green space, remove tall grass, wild shoots, thickets or bushes cluttering up a path, for each use of your Brush cutter Excelion 2 LH, there are a suitable PELLENC cutting head. It is therefore important to choose the right cutting head according to the intended job.

- 5.6.1.1. TAP CUT 2 AND 3 CUTTING HEADS

- They are ideal for mowing and edge trimming.
- They are mainly used in cases where the wear of the trimmer wire is significant (edge of wall, along fences, etc.).

Choice of trimmer wire

- For grass: use PELLENC ELECTRIC Ø 2.4 mm trimmer wire (reference 159893).
- For dense grass and brush: use PELLENC ELECTRIC trimmer wire Ø 2.7 mm (reference 159892).

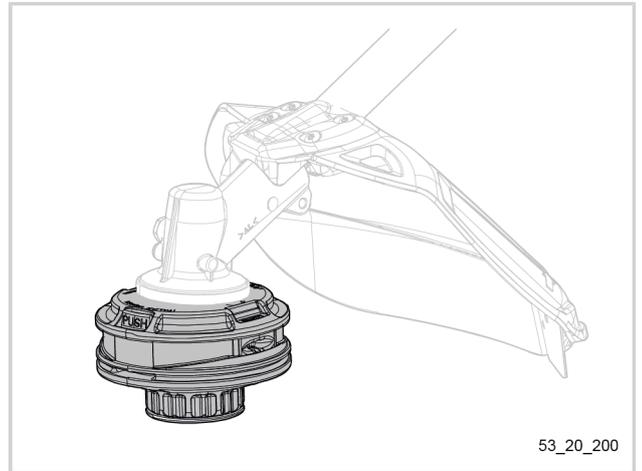


- 5.6.1.2. WEED CONTROL BLADES AND MULCHING BLADES

These accessories have been specially designed for mowing/trimming brush, tall grass, woody vegetation and even shrubs.

Your tool is compatible with several special "large brush clearing" accessories.


Choice of accessory

- For dense grass and brush: use a Ø 320 mm twin-blade (reference 158490) or a Ø 320 mm tri-blade (reference 158489).
- To cut and slash woody vegetation, dense brush or thorny vegetation: use a mulching blade (reference 158491) + a mulching kit (reference 57277).
- For cutting shrubs, shoots or coppices: use the sawing kit (reference 57275 with the chisel-tooth saw blade (reference 111700)).

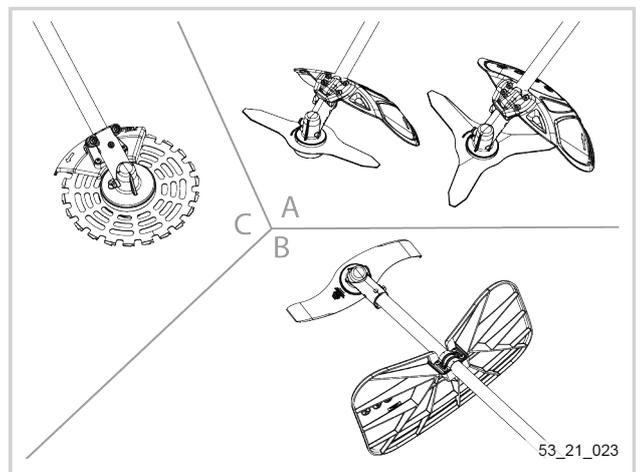

- 5.6.1.3. CITY CUT HEAD

This cutting head can be used in green spaces as well as in the vicinity of homes. It was designed to limit projections and can therefore be used safely in urban areas.

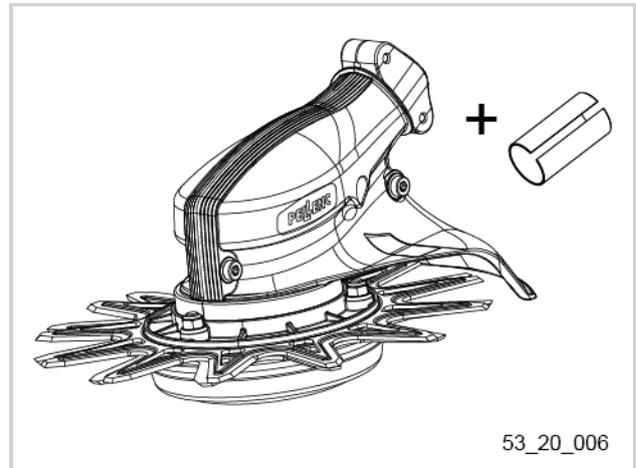

For more information on the accessories available with your Brush cutter Excelion 2 LH, refer to Section 9.2, “Cutting tools”.

5.6.2. ADVICE FOR OPTIMIZING THE BATTERY

In order to optimize the autonomy of your PELENC battery as much as possible, the rotational speed of the cutting tool used must be adapted to the type of mowing/strimming work to be carried out.

This is because the higher the rotational speed of the cutting tool, the greater the energy consumption. Therefore the progressive nature of the control trigger must be used to adjust the rotational speed of the cutting tool.

Type of vegetation or work	Recommended cutting tool	Recommended tool speed
Edges	TAP CUT 3 + PELENC ELECTRIC Ø 2.4 mm strimmer wire	S1
Lawn	TAP CUT 3 + PELENC ELECTRIC Ø 2.4 mm strimmer wire	V1
Grass	TAP CUT 3 + PELENC ELECTRIC Ø 2.7 mm strimmer wire	V2
Dense and tall grass	TAP CUT 3 + PELENC ELECTRIC Ø 2.7 mm strimmer wire	V3, V4
Tall, dense scrub brush	Twin-blade / Tri-blade	V3, V4
Brambles, plant re-growths, shrubs	Mulching blade	V3, V4
Thinning	Chisel-tooth saw	V2
Green spaces or surroundings of homes (limitation of projections)	CITY CUT	V1 + City Cut mode on the HMI

5.6.3. TIPS FOR USE AND WORKING TECHNIQUES


1. Before starting mowing/strimming, examine the surface to be cleared: nature of the surface, area, relief, presence of obstacles, etc.
2. Note the wind direction. The latter may facilitate the removal of clippings and make the task of the user easier.

Important

Always keep a minimum distance of 50 mm between the cutting head and the obstacle in order to avoid any risk of damage to the tool and the "strands" (of strimmer wire).


Simple mowing/strimming

- Move the tool in semi-circles from left to right while gradually advancing.
- While weeding and clearing, keep the cutting tool parallel to the ground and avoid contact of the cutting head with the ground.

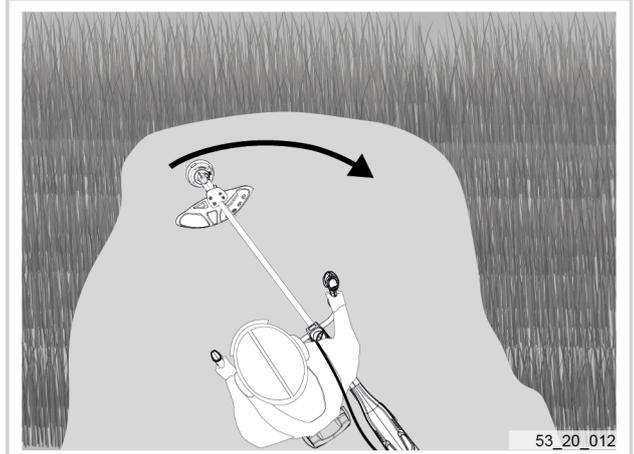

Tall grass mowing

- To mow tall, dense grass, mow the upper part first, then the lower part.
- The mowing movement is from right to left while left to right is the return movement.
- Mowing in one direction only helps with the disposal of cut grass.

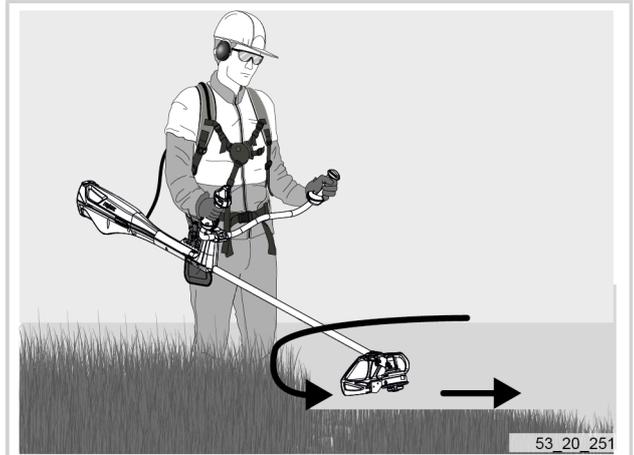

Mowing on slopes

Important

Before starting to mow on a slope, make sure you are stable on the ground.

1. Position yourself at the base of the slope.
2. Define a strip parallel to the slope that spans the width of the work area.



Movement to be performed


- The operator must always work with the same movement with the arms: start at the highest side of the slope and finish his movement towards the bottom of the slope. This will allow the freshly cut grass to fall down slope. This will prevent the cutting attachment from turning in the grass that has already been cut.

Direction of progression

- The operator must always walk forward, following the strip defined at the start of the work.
- When said strip is finished, the user must retrace his steps and start a new strip slightly higher than the one which has just been completed.

Mowing along walls, fences, around trees and flower beds

- Use the TAP CUT 3 and its trimmer wire as this facilitates the removal of grass and avoids the phenomenon of kickbacks when in contact with a fixed obstacle.
- Protect bark and the edge of flower beds by using the safety guard as a shield between the surface area to be cleared and the vegetation to be protected.

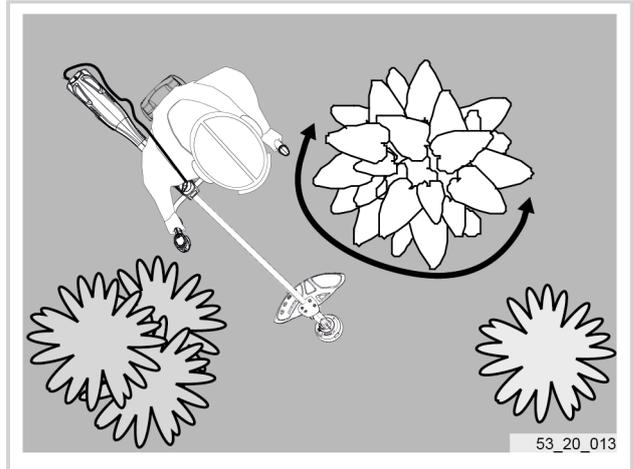


Working with the clearing saw

Important

Avoid all contact of the blade with the soil or stones.

- The brush cutter saw can be used for all types of work: clearing, cutting regrowth, shrubs, woody vegetation, etc.
- Working with the clearing saw is carried out parallel to the ground observing the direction of rotation of the blade to avoid kickback.
- High risk of kickback zone (mark 1)
- Increased risk zone (mark 2)
- Working zone (mark 3)

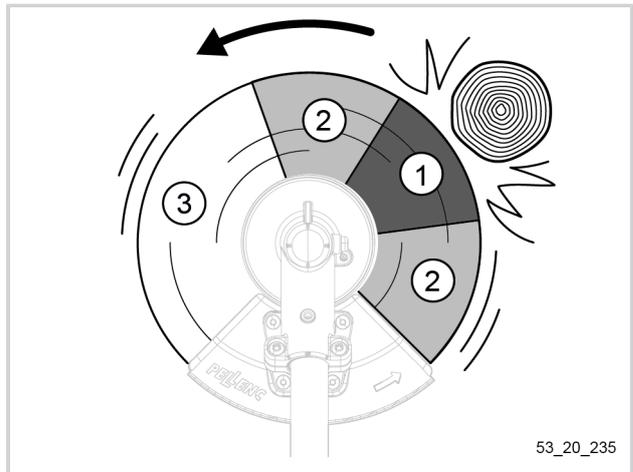

Work without projections in an urban environment

- The CITY CUT cutting head is specially designed for weed control urban environments, in gravel, stabilized gravel or asphalt.
- Its counter-rotating technology avoids projections, the upper and lower blades rotating in the opposite direction to each other.
- According to the user's needs and to optimize his working comfort, the CITY CUT cutting head is oriented at 28° or 51° depending on the working direction.
- The quick fit assembly of the CITY CUT cutting head on the Brush cutter Excelion 2 LH takes 20 seconds.





5.7. EMERGENCY RELEASE

The Brush cutter Excelion 2 LH has a quick release system for the tool, making it possible to move away from it quickly in an emergency.

In case of emergency:

1. Disconnect the quick connector from the tool (19) located on the harness.
2. Undo the "backpack" type buckle (22). The tool will fall to the ground.
3. Leave the tool in place and move away as quickly as possible to get out of danger.

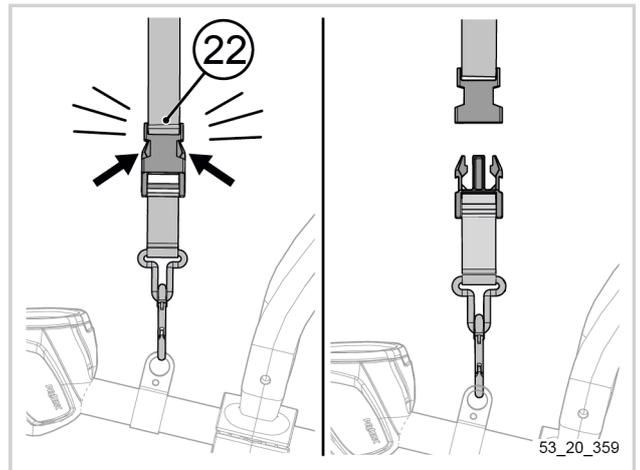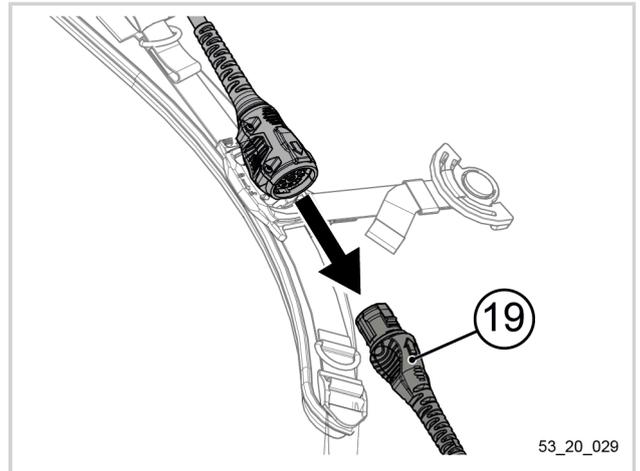

6. SERVICE

6.1. MAINTENANCE ADVICE



Caution

Always disconnect the tool battery before starting tool maintenance.

- Use products recommended by PELENC.
- In the event of any problem, consult an authorised PELENC distributor.

6.2. MAINTENANCE TABLE

Maintenance task	At each start-up	Every two hours	Every 50 hours	Every month	After each use	Every year or as necessary
Cleaning the Brush cutter Excelion 2 LH (do not clean with a high pressure water but instead by blowing or brushing)					X	
Visual verification of the machine's safety devices (carrying plate, safety guard, angle gear)	X				X	
Visual check of the air exhaust screen and the air intake screen which must not be obstructed					X	
Functional check of the safety throttle	X					
Sharpening verification and re-sharpening if necessary	X	X				X
Visual inspection of the cutting tool (no cracks or deformation)	X	X				X
Visual inspection of the cutting tool's attachment to the shaft (absence of distortion or wear and tear)	X	X				X
Check the level of wear on the teeth of the serrated blade and sharpen if necessary or replace the serrated blade	X			X		X
Check the battery level	X					
Machine check by an approved PELENC dealer						X
Angle gear lubrication				X		
Visual check of the protective casing	X	X			X	
Visual check of the distancing bar	X	X			X	
Lubrification of the CITY CUT blades		X				
Cleaning the CITY CUT blades					X	
Greasing the angle gear of the CITY CUT			X			

Important

Have the machine serviced every 400 hours or at least once a year by an authorised PELENC distributor.

6.3. CLEANING THE TOOL

After each use, clean with water:



Warning

Do not use a high pressure cleaner.

- The safety guard (13).

Note


If necessary remove the safety guard (see Section 4.3, "Fitting/ dismounting of the safety guards on the Brush cutter").

- The cutting head (12).

Note

If necessary, remove the cutting head (see Section 4.4, "Fitting/dismounting of the cutting heads on the Brush cutter").

- The transmission shaft (14).

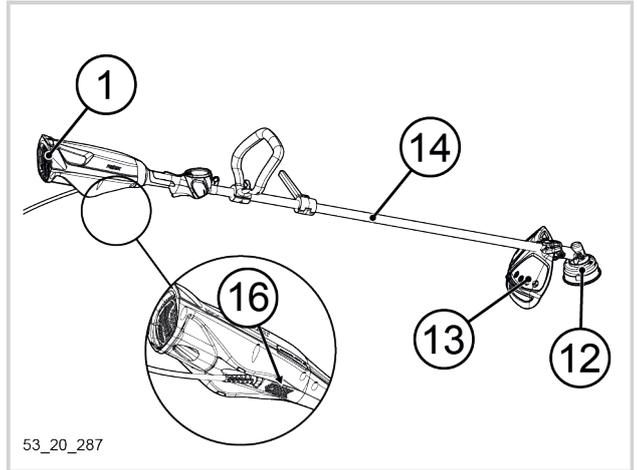

53_20_287

Important


After cleaning, allow the tool to dry thoroughly before using it.

After each use, make sure that the holes in the air exhaust screen (1) and the air intake screen (16) are not blocked.

6.4. CLEANING TAP CUT 2 / TAP CUT 3


The TAP CUT 2 / TAP CUT 3 cutting head may need to be cleaned after numerous uses.

1. Simultaneously press the two notches on either side of the TAP CUT 2 / TAP CUT 3.
2. Remove the cover and the central part of the TAP CUT 2 / TAP CUT 3.
3. Clean the inside of the cutting head to remove any grass or trimmer wire residue that may prevent the tool from working properly.

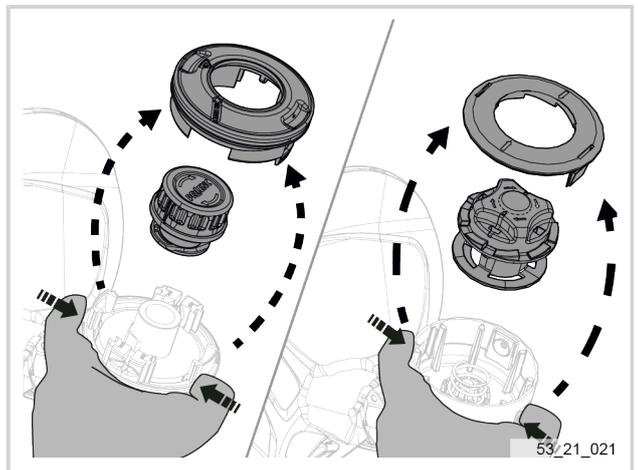

53_21_021


4. After cleaning the inside of the head, put the central part back in position.
5. Replace the head cover, making sure to line up the notches.

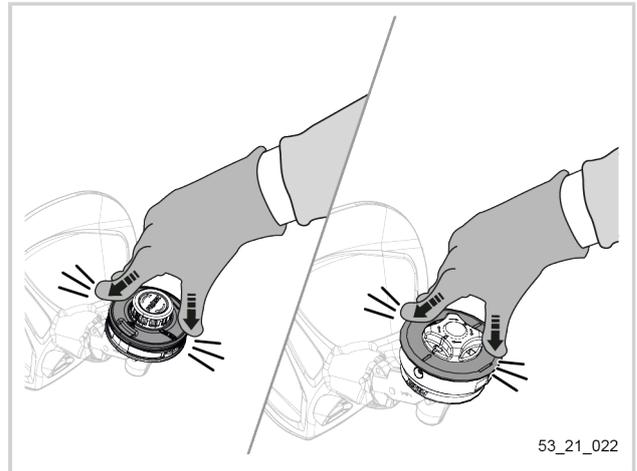

53_21_022

6.5. ANGLE GEAR LUBRICATION

1. Remove the screw located on the angle gear (11) using the Torx 25 key (22) supplied with your tool.
2. Apply 4 grams of PELENC grease (reference 35749), once a month or every 100 hours.
3. Grease the thread of the angle gear shaft (11) to facilitate the loosening of the cutting head nuts.
4. Fit the screw located on the angle gear (11) using the Torx 25 key (22) supplied with your tool.

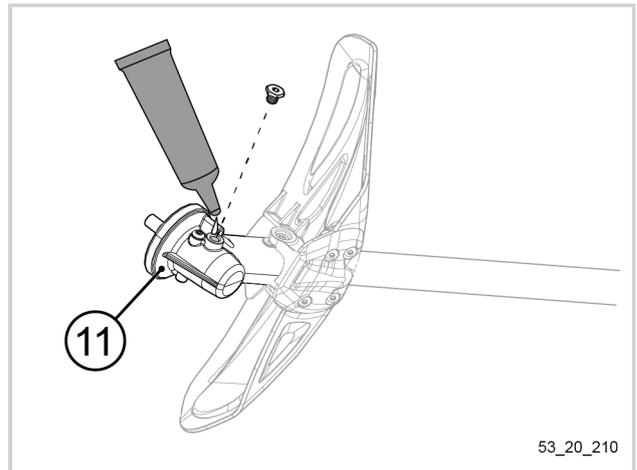


53_20_210

6.6. SAWING KIT MAINTENANCE

6.6.1. ANGLE GEAR LUBRICATION

1. Remove the screw located on the angle gear (11) using the Torx 25 key (22) supplied with your tool.
2. Apply 4 grams of PELENC grease (reference 35749), once a month or every 100 hours.
3. Grease the thread of the angle gear shaft (11) to facilitate the loosening of the cutting head nuts.
4. Fit the screw located on the angle gear (11) using the Torx 25 key (22) supplied with your tool.

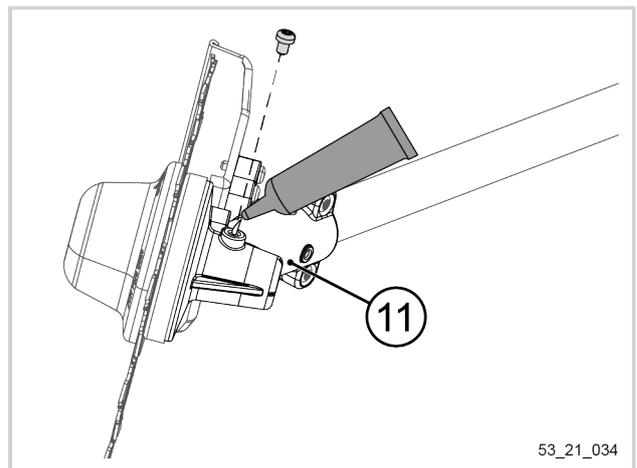

53_21_034


6.6.2. DISMOUNTING/FITTING OF THE CITY CUT SAFETY GUARD

Dismounting

1. Using a T20 screwdriver, unscrew the 4 screws holding the safety guard in place.
2. Remove the casing.

Fitting

1. Position the safety guard behind the angle gear.
2. Using a T20 screwdriver, tighten the 4 screws holding the safety guard in place.

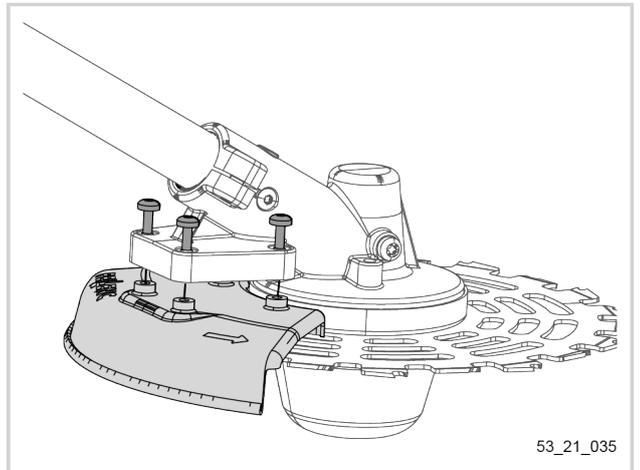


6.7. MAINTENANCE OF THE CITY CUT

6.7.1. DISMOUNTING/FITTING OF THE CITY CUT SAFETY GUARD


Dismounting

1. Dismount the CITY CUT (refer to the "dismount" part of Section 4.4.6, "Fitting/dismounting the CITY CUT on the tool").
2. Using a T20 screwdriver, unscrew the 2 screws holding the CITY CUT safety guard in place.
3. Remove the 2 parts of the safety guard.

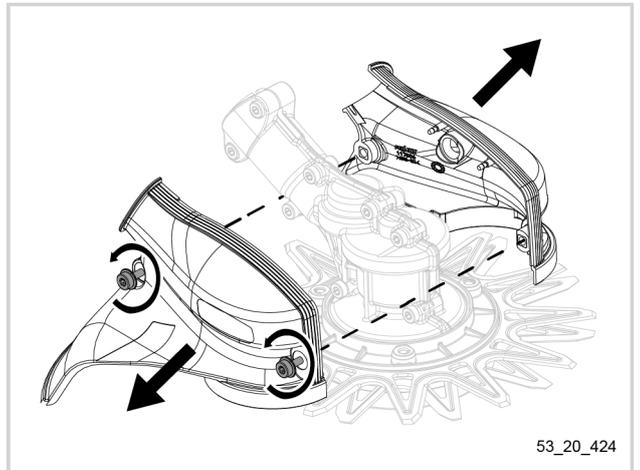

Fitting


1. Fit the 2 parts of the safety guard.
2. Using a T20 screwdriver, tighten the 2 screws holding the CITY CUT safety guard in place.
3. Refit the CITY CUT cutting head onto the tool (refer to the "assembly" part of Section 4.4.6, "Fitting/dismounting the CITY CUT on the tool").

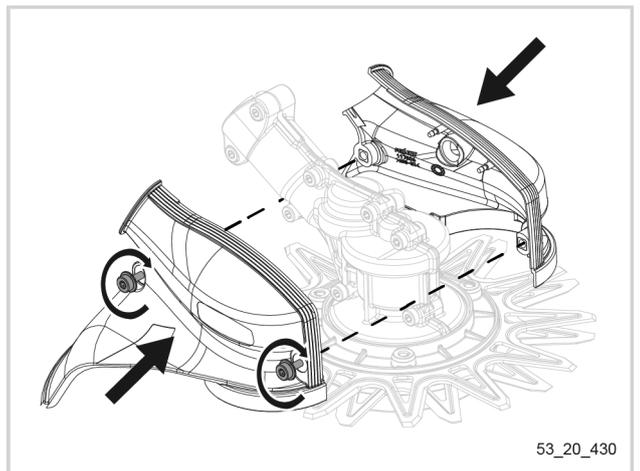

6.7.2. CHANGING THE CITY CUT BLADES

Dismounting

1. Unscrew the nut located under the cutting head with a 13 mm wrench.

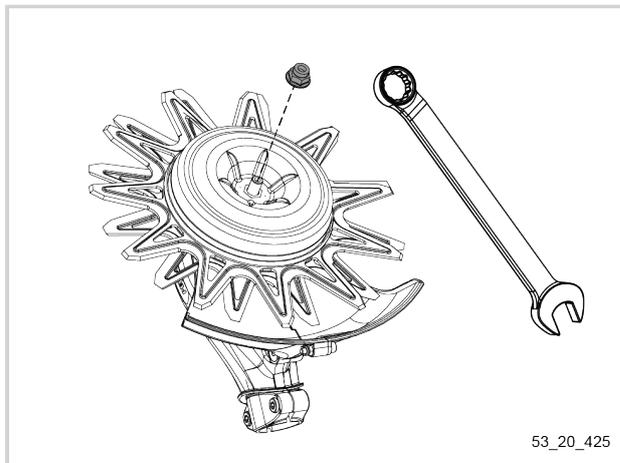


- 2.




Warning

A compressed spring is located under the bowl.

Carefully release the elements.

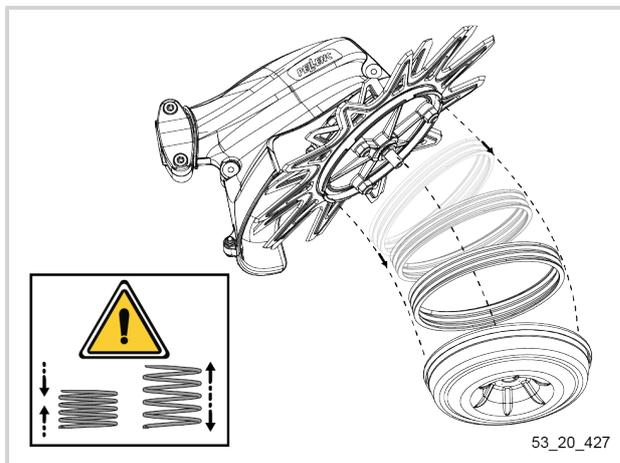

3. Remove the two blades each positioned on a support.

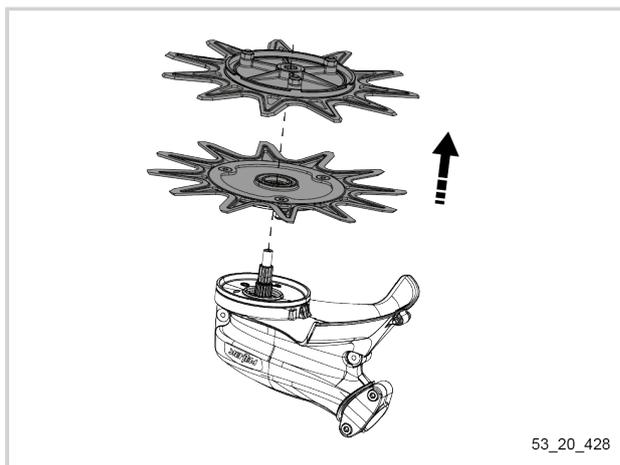


4. On each of the blade supports, using a TORX 27 screwdriver, remove the 3 nuts to separate the blade from its support.
5. Change the blades.

Fitting

1. Fit the blades on the corresponding blade support.

It is essential that the correct blades coincide with the correct blade holders. To do this, refer to the table below and match the references.

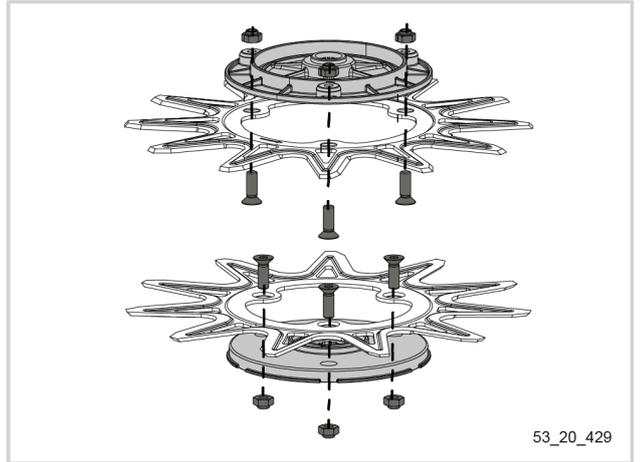


Support type	Blade
UP base (ref. 117491)	UP blade (ref. 117495)
DOWN base (ref. 117502)	DOWN blade (ref. 117497)

2. Using a Torx 27 screwdriver, fit the 3 screws and 3 nuts to lock the position of the blade on its support.


The screws must stop in their housing. Screw heads should be flush with the surface of the blade.

3. First install the blade support with the largest central hole on the rotation axis of the head. This is the UP base.
4. Fit the second blade support on the blade rotation axis. This is the DOWN base.


The two smooth surfaces must be pressed against each other.

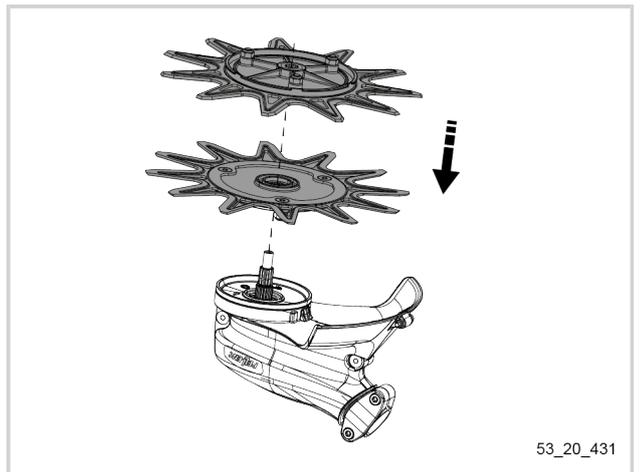

5. Install the spring.
6. Position the bowl while firmly holding it in place.

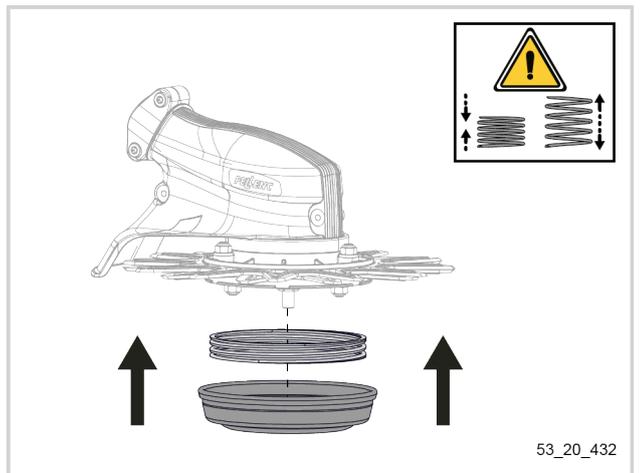

7. Screw the nut located under the head with a 13 mm wrench.

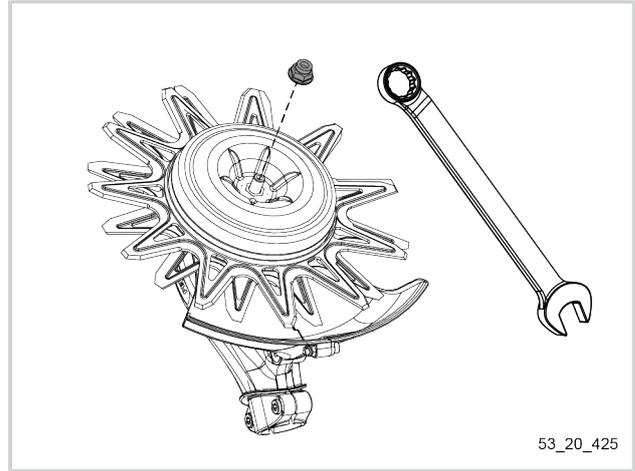


6.7.3. CLEANING AND LUBRICATING BLADES

To ensure the proper functioning of the CITY CUT, it is necessary:

- lubricate the blades using the PELENC lubricant spray (ref. 121633) every two working hours,
- to dismount the blades at the end of the working day to clean and lubricate the assembly, see procedure below.

1. Completely dismount the CITY CUT cutting head (refer to the "dismount" part of Section 6.7.2, "Changing the CITY CUT blades").
2. Clean the areas indicated in the illustration opposite using a flat screwdriver, compressed air, a brush or hot water (only on the blades).
3. Dry all the parts using a clean, dry cloth.
4. Lubricate the blades using the PELENC lubricant spray (ref. 121633).
5. Refit the CITY CUT (refer to the "assembly" part of Section 6.7.2, "Changing the CITY CUT blades").

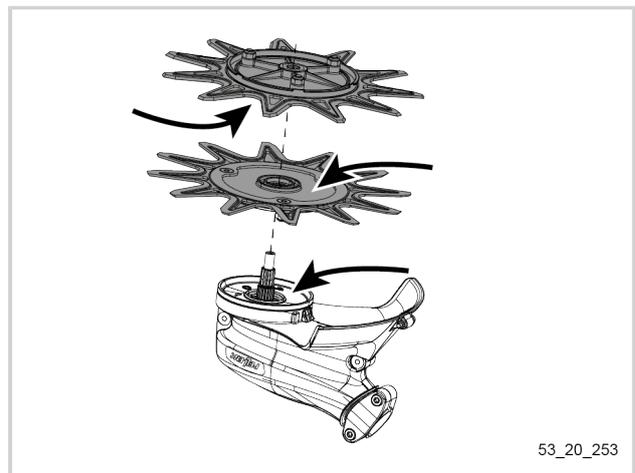


6.7.4. SHARPENING THE BLADES


1. Visually check the blades.

If any of the blades are twisted or bent, they should be discarded.


To equip yourself with new blades, see Section 9, "Accessories and consumables".

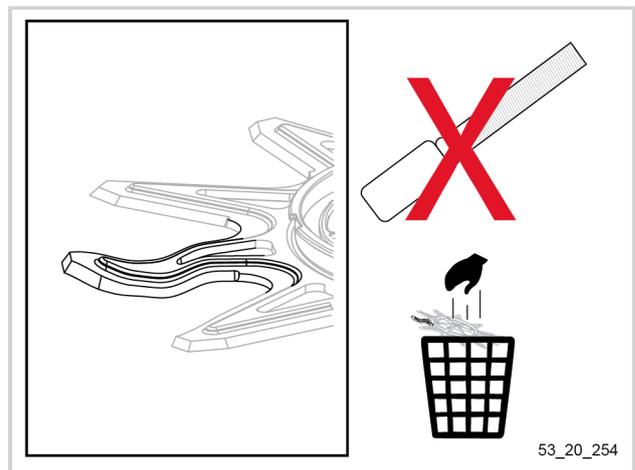

2. Proceed with the sharpening of the blade, taking care to maintain an inclination of 45° between the blade and the file.

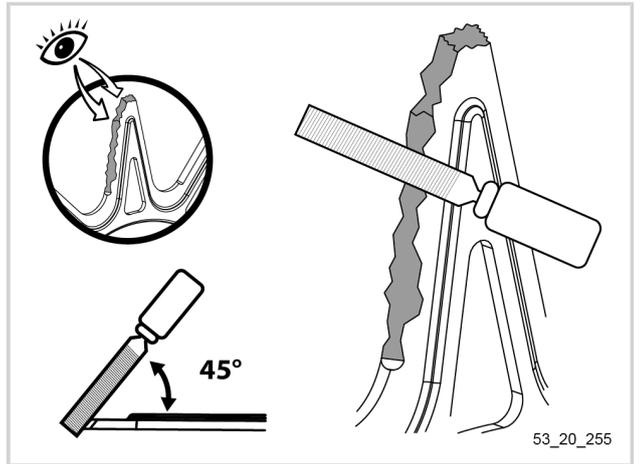


Always keep a distance of 3.7mm between the edge and the relief on the blade.

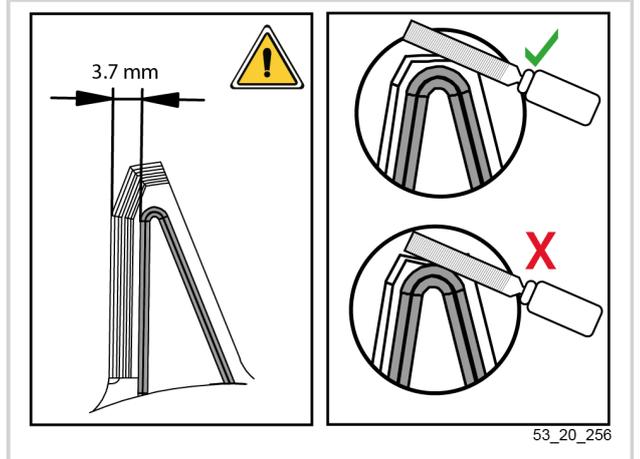

6.7.5. ANGLE GEAR LUBRICATION

1. Remove the screw located on the CITY CUT using the Torx 25 key (22) supplied with your tool.
2. Apply 4 grams of PELENC grease (reference 35749) every 50 hours.
3. Replace the screw located on the CITY CUT using the Torx 25 key (22) supplied with your tool.

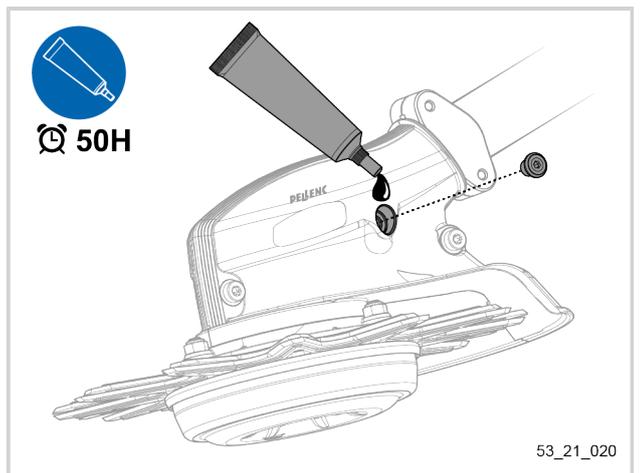

7. INCIDENTS AND TROUBLESHOOTING

7.1. TABLE OF INCIDENTS AND BREAKDOWNS - TROUBLESHOOTING

Symptoms	State of the on/off switch of the battery	HMI screen	Probable cause	Checks	Solutions	Repairer
The tool does not start	0	Off	Battery is off	Battery switch	Switch on your battery (refer to Section 5.1.1, "Power on". The pictogram ⚡ must be displayed on the battery HMI screen	User
			The power cord is severed	Check the condition of the cord	Change the cord	Authorised PELLENC distributor
	1	Off	The power cord is correctly connected	Checking the quick connector	Connect the quick connector	User
			Battery	Check that the battery is not completely discharged	Recharge the battery	User
			Electronic circuit board	At an authorised PELLENC distributor	Change the electronic board if the HMI screen remains off after switching on and checking of the previous points	Authorised PELLENC distributor
			Trigger no longer works	At an authorised PELLENC distributor	Change the trigger or sensor	PELLENC authorised distributor
			Electronic circuit board	At an authorised PELLENC distributor	Change the circuit board	Authorised PELLENC distributor

Symptoms	State of the on/off switch of the battery	HMI screen	Probable cause	Checks	Solutions	Repairer
The cutting head (trimmer wire or metal blade) makes an abnormal noise or vibrates heavily	I	On	Damaged cutting blade	Check the blade's condition (no cracks or deformations)	Changing the cutting blade	User
			Damaged crown	Check there is no deformation	Change the cover	User or Pellenc authorised distributor
			Damaged cutting blade holding part	Check there is no deformation	Change the metal blade holding part	Pellenc authorised distributor
			Motor shaft damaged	Check the condition of the shaft (no distortion)	Change the motor shaft	Authorised PEL-LENC distributor
The tool stops during use	I	On	Trigger no longer works	Authorised PEL-LENC distributor	Change the trigger or sensor	Authorised PEL-LENC distributor
			The power cord is severed	Check the condition of the cord	Change the cord	Authorised PEL-LENC distributor
		The battery is flat	When stopped, check the battery charge level shown in the side window	Recharge the battery (if less than 10% charged)	User	

7.2. SUMMARY OF DISPLAY SCREEN MESSAGES

Fault messages appear on the HMI screen of the tool.

Diagnosics display codes	Designation	Probable cause	Checks	Solutions	Repairer
Fault 4	Temperature fault	Tool temperature too high	User	Allow the tool to cool down	User
			Authorised PELLENC distributor	Tool check	Authorised PELLENC distributor
Fault 5	Communication fault	Communication between the tool and the battery is interrupted	Authorised PELLENC distributor	Check cables and connectors	Authorised PELLENC distributor
Fault 6	Battery fault	The battery connector on the tool no longer works	Authorised PELLENC distributor	Check cables, connectors and battery	Authorised PELLENC distributor
		Non compatible battery	User	Use a compatible battery	User
Fault 7	Sensor fault	Trigger pressed at start-up	User	Do not press the trigger	User
		Magnet fault	Authorised PELLENC distributor	Change the magnet	Authorised PELLENC distributor
Fault 8	Menu button fault	Menu button pressed when starting the machine	User	Release the Menu button	User
		Menu button blocked	Authorised PELLENC distributor	Change the Menu button	Authorised PELLENC distributor
Fault 9	Selector fault	Selector pressed when starting the machine	User	Release the selector	User
		Selector blocked	Authorised PELLENC distributor	Change selector	Authorised PELLENC distributor

Important

Ⓒ Never attempt to dismantle the tool, under penalty of cancellation of the warranty. Contact your authorised repair person.

8. STORAGE AND TRANSPORT

8.1. STORAGE

- Switch off the tool (see Section 5.1.2, “Stopping the tool”).
- Disconnect the battery (see Section 4.7, “Disconnecting the battery”).
- Store the battery (refer to the battery operating instructions).
- Store the tool in a safe place, out of reach of children and unauthorized persons.

Important


- In the event of prolonged storage, grease the output shaft of the angle gear (refer to Section 6.5, “Angle gear lubrication”).
- Always make sure the tool is clean and its battery is charged before storing it.
- The Brush cutter Excelion 2 LH must be stored away from heat, dust and humidity at an ambient temperature between 0° C and 40° C.
- The machine and the battery must be stored in their original packaging, in a dry place and out of the reach of children.

8.1.1. TOOL STORAGE POSITION

1. Stop the tool (refer to Section 5.1.2, “Stopping the tool”).
2. Disconnect the battery from the tool (refer to Section 4.7, “Disconnecting the battery”).
3. Store the Brush cutter and the cutting tools in their original packaging or place the assembly in the transport bag (refer to Section 9.3, “Other accessories”).

Important

It is compulsory to use the carrying bag when the brush cutter is equipped with a cutting head with blade. Risk of injury.

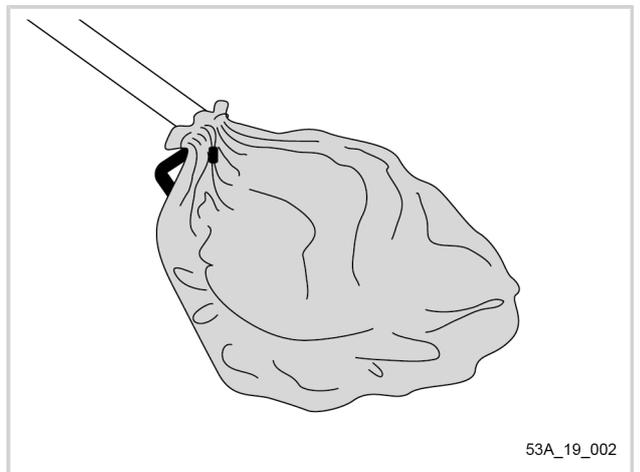

53A_19_002

4. Put the battery back in its original packaging.

8.2. TRANSPORTING THE TOOL

Important

- Never carry the machine or the battery by the power cord.
- Switch off the tool (see Section 5.1.2, “Stopping the tool”).
 - Disconnect the battery (see Section 4.7, “Disconnecting the battery”).
 - Put the tool in the storage position.
 - Make sure that the packed machine and battery are properly secured in the transport vehicle.

8.3. STORING THE TOOL

Important

- In the event of prolonged storage, grease the output shaft of the angle gear (refer to Section 6.5, “Angle gear lubrication”).
- Always make sure the tool is clean and its battery is charged before storing it.
- The Brush cutter Excelion 2 LH must be stored away from heat, dust and humidity at an ambient temperature between 0° C and 40° C.
- The machine and the battery must be stored in their original packaging, in a dry place and out of the reach of children.

The Brush cutter Excelion 2 LH is equipped with an attachment point (17) which allows the tool to be suspended against a wall.

In the case of a first installation:

Install at a height of 1.90 metres from the ground:


- either a screw whose head is at least 5 mm high and has a head diameter of less than 10 mm.
- Or a hook whose diameter is less than 5 mm.

Note


The attachment point should protrude 25mm from the wall.

Use screws suitable for the material that composes your wall.

- Hang the Brush cutter on the wall by its attachment point (17).

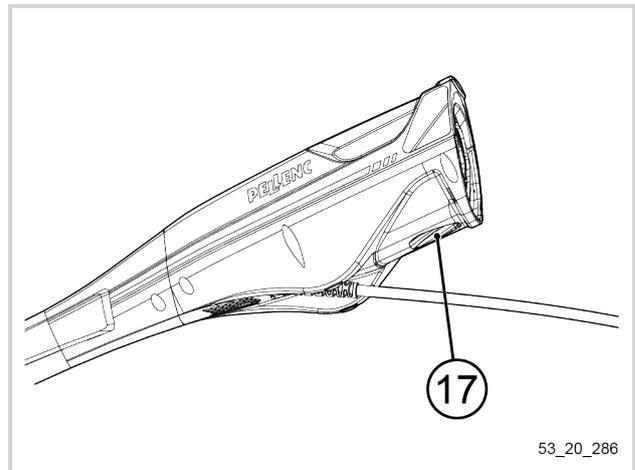


53_20_286

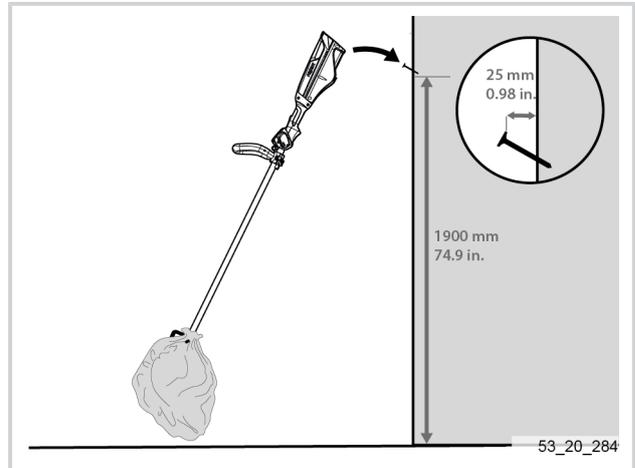

53_20_284

9. ACCESSORIES AND CONSUMABLES

9.1. ROUND HANDLE ACCESSORIES


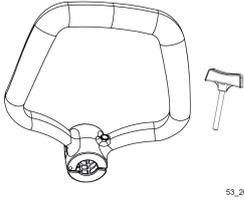
Handle accessories	Designation of the accessory	Reference
	Round handle	158162
	Distancing bar	158161

9.2. CUTTING TOOLS



9.2.1. WEED CONTROL

TAP CUT	Designation of the accessory	Reference
	<p>TAP CUT 3 cutting head</p> <p>(See Section 9.4.1, "TAP CUT Consumables" to consult the list of trimmer wires compatible with the TAP CUT 3)</p>	57276
	<p>TAP CUT 2 cutting head</p> <p>(See Section 9.4.1, "TAP CUT Consumables" to consult the list of trimmer wires compatible with the TAP CUT 2)</p>	57218

Weed control blades	Designation of the accessory	Reference
	<p>Twin-blade</p> <p>320 - 2.5</p>	158490

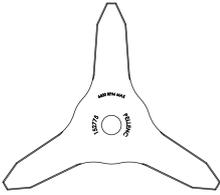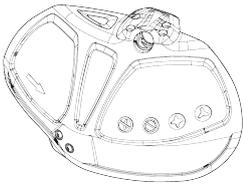
Weed control blades	Designation of the accessory	Reference
 <p>53_20_188</p>	<p>Tri-blade 320 - 2.5</p>	158489
Safety guards	Designation of the accessory	Reference
 <p>53_20_207</p>	<p>Standard guard MANDATORY</p>	152042

9.2.2. MULCHING




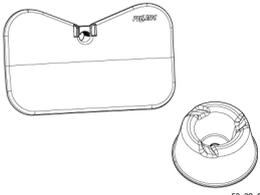
Mulching blade	Designation of the accessory	Reference
 <p>53_20_187</p>	<p>Mulching blade 280 - 3 CAUTION: Protective shield mandatory (ref. 57277)</p>	158491
 <p>53_20_010</p>	<p>Mulching kit Protective shield is MANDATORY when using the mulching blade. Includes the specific adapter bowl for the mulching blade</p>	57277

9.2.3. CHISEL-TOOTH SAW

Chisel-tooth saw	Designation of the accessory	Reference
 <p>53_20_384</p>	<p>Sawing Kit</p>	57275
 <p>53_20_383</p>	<p>Safety guard for chisel-tooth saw</p>	111500

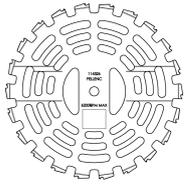Chisel-tooth saw	Designation of the accessory	Reference
 <p>53_20_382</p>	Chisel-tooth saw blade	111700

9.2.4. URBAN WEED CONTROL

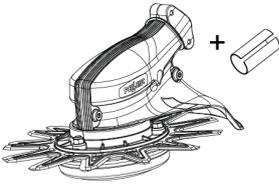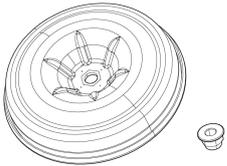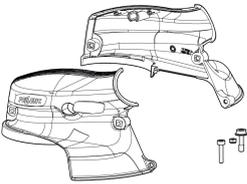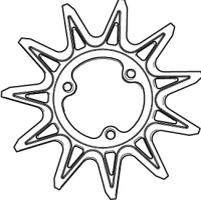CITY CUT	Designation of the accessory	Reference
 <p>53_20_006</p>	CITY CUT cutting head	57098
 <p>53_20_374</p>	CITY CUT bowl	118271
 <p>53_20_381</p>	CITY CUT safety guards	118267
 <p>x 2 53_20_007</p>	CITY CUT blades	118270

9.3. OTHER ACCESSORIES

Name	Reference
750 battery Comfort Harness	 <p>53_20_002</p>

Name	Reference
750 battery adapter cable  <p style="text-align: right; font-size: small;">53_20_214</p>	57238
Alpha harness  <p style="text-align: right; font-size: small;">53_21_044</p>	57194
Alpha battery adapter cable  <p style="text-align: right; font-size: small;">53_21_045</p>	57248
Protective bag  <p style="text-align: right; font-size: small;">53_20_001</p>	111800
Comfort Harness XL extension Kit	152778

9.4. CONSUMABLES

9.4.1. TAP CUT CONSUMABLES

Name	Reference
PELENC ELECTRIC Ø 2.7 mm (280 m) strimmer wire spool	159892
PELENC Ø 2.7 mm (63 m) strimmer wire pack	159895
PELENC ELECTRIC Ø 2.4 mm (347 m) strimmer wire spool	159893
PELENC Ø 2.4 mm (70 m) strimmer wire pack	159894

Name		Reference
PELENC grease tube		35749
PELENC lubricant spray		121633

10. WARRANTIES

10.1. GENERAL WARRANTIES

10.1.1. STATUTORY WARRANTY

- 10.1.1.1. LATENT DEFECTS WARRANTY

Apart from the commercial warranty provided for under Article II, Article 1641 of the Civil Code provides that "the seller is bound to a warranty on account of latent defects of the object sold which render it unfit for the use for which it was intended, or which would impair said use to the extent that the buyer would not have acquired it, or would only have given a lesser price for it, had he known of them".

Article 1648 of the Civil Code "The action resulting from latent defects must be brought by the purchaser within two years after the discovery of the defect. "

- 10.1.1.2. LEGAL WARRANTY OF CONFORMITY

Article L.217-4 of the French Consumer Code "The seller delivers goods in conformity with the contract and is liable for defects of conformity existing upon delivery".

The seller is also liable for any lack of compliance resulting from the packaging, assembly or installation instructions whenever its contractual liability is engaged in this regard or the latter are carried out under its responsibility

Article L.217-5 of the French Consumer Code "Goods are compliant with the contract":

1. Where they are fit for the purpose normally expected of similar goods and, where applicable:
 - If it matches the description given by the seller and possesses the qualities that were presented to the purchaser in the form of a sample or model;
 - If it possesses the qualities that a purchaser can reasonably expect given the public statements made by the seller, the producer or its representative, especially in advertising or labelling;

2. Or, if it has the characteristics defined by mutual agreement of the parties or is fit for any particular purpose that the buyer made known to the seller and that the latter accepted.

Article L.217-12 of the Consumer Code "legal action resulting from lack of conformity lapses two years after delivery of the goods".

10.1.2. COMMERCIAL WARRANTYPELENC

- 10.1.2.1. CONTENT

10.1.2.1.1. GENERAL INFORMATION

In addition to legal warranties, client users benefit from the commercial warranty on products PELENC covering the exchange and replacement of parts recognised as being out of order, due to machining defects, assembly defects or material defects, whatever the cause.

The warranty is fully integral to the product sold by PELENC.

10.1.2.1.2. SPARE PARTS

The commercial warranty also covers original PELENC spare parts, excluding labour and to the exclusion of certain parts of each product provided at delivery.

- 10.1.2.2. DURATION OF THE WARRANTY

10.1.2.2.1. GENERAL INFORMATION

PELENC Products are guaranteed under the commercial warranty as from delivery to the customer for a period of two (2) years for products connected to a PELENC battery, and for a period of one (1) year for other PELENC products.

10.1.2.2.2. SPARE PARTS

PELENC Replacement parts replaced under the product warranty are guaranteed under the commercial warranty as from delivery of the PELENC product to the customer user for a period of two (2) years for products connected to a PELENC battery, and for a period of one (1) year for other PELENC products.

In the case of products connected to a PELENC battery, parts that are replaced under the product warranty after the 12th month of use, are covered for a period of one (1) year.

10.1.2.2.3. WARRANTY EXCLUSIONS

Excluded from the commercial warranty are products that have been subject to abnormal use, or were used under conditions and for purposes other than those for which they were manufactured, especially in the case of non-compliance with conditions stipulated in this user manual.

It does not apply in case of shock, fall, neglect, lack of supervision or maintenance or in case of transformation of the product. Also excluded from the warranty are products that have been subject to tampering, alteration or modification by the client user.

Wear parts and/or consumables cannot be covered by the warranty.

- 10.1.2.3. IMPLEMENTATION OF THE COMMERCIAL WARRANTY**10.1.2.3.1. PRODUCT COMMISSIONING AND COMMISSIONING DECLARATION**

The DISTRIBUTOR undertakes to complete the computer commissioning declaration form, no later than eight days after the delivery of the property to the user customer, in order to activate the latter on the www.pellenc.com website under "warranties and training" in the "extranet" menu, using the identifier previously provided to them by PELLENC.

Failing that, commissioning declaration will not be effective and implementation of the commercial warranty PELLENC will not occur. As a consequence thereof, the DISTRIBUTOR must ensure the financial burden of its intervention under the warranty without being able to pass on the cost to the client user.

The DISTRIBUTOR shall also undertake to complete the warranty card or the certificate of warranty and commissioning for self-propelled equipment provided with the product after having the client user sign and date it.

10.1.3. PAID AFTER-SALES SERVICE**- 10.1.3.1. GENERAL INFORMATION**

Malfunctions, breakdowns, breakages resulting from misuse, neglect or improper maintenance by the client user as well as malfunctions resulting from normal wear of the product are subject to the payment of after-sales service, even during the period of the legal and commercial warranty. After-sales service repairs that fall outside of the legal and commercial warranty also include maintenance, adjustments, diagnostics of all types, and cleaning without the present list being exhaustive.

- 10.1.3.2. WEAR PARTS AND CONSUMABLES

Wear parts and consumables also fall within the after-sales service.

- 10.1.3.3. SPARE PARTS

Paid after-sales service also covers original PELLENC spare parts, excluding labour and outside the legal and commercial warranty period.

In case of replacement of original PELLENC spare parts in the context of after-sales service, said latter are covered by a warranty of one year as from the installation date.

11. COMPLIANCE STATEMENTS

11.1. CE STATEMENT OF COMPLIANCE: EXCELION 2 LH

MANUFACTURER / ENTITY AUTHORIZED TO COMPILE THE TECHNICAL FILE	PELENC
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

We hereby declare that the machine referred to below as:

GENERIC DENOMINATION	Brush cutter	
FUNCTION	Green spaces maintenance	
COMMERCIAL NAME	EXCELION 2	
TYPE	EXCELION 2	
MODEL	EXCELION 2 LH	
SERIAL No.	53V00001 - 53V49999	53W00001 - 53W49999

Complies with the relevant provisions of the machinery directive (2006/42/EC).

Complies with the following other directives and / or relevant provisions:

- 2014/30 / EU EMC Directive; 2011/65 / EU ROHS Directive; 1907/2006 REACH regulation; 2012/19 / EU WEEE Directive; 2000/14 / EC Directive relating to noise emissions into the environment.

The following harmonized European standards were used:

- EN 62841-1: 2015; EN ISO 11806-1: 2012; EN 55014-1: 2017; EN 55014-2: 2015.

Sound power level:

- Measured sound power level L_{WAm} : 94 dB (A)
- Guaranteed sound power level L_{WAg} : 96 dB(A)

The measured sound level and the guaranteed sound power level were measured according to a procedure in accordance with Directive 2000/14 / EC Annex V.

SIGNED IN PERTUIS, DATED 14/04/2021
JEAN-MARC GIALIS
CEO



11.2. UK DECLARATION OF CONFORMITY ^{UK}CA : EXCELION 2 LH

MANUFACTURER / ENTITY AUTHORIZED TO COMPILE THE TECHNICAL FILE	PELENC
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

We hereby declare that the machine referred to below as:

GENERIC DENOMINATION	BRUSH CUTTER		
FUNCTION	MAINTENANCE OF GREEN SPACES		
COMMERCIAL NAME	EXCELION 2		
TYPE	EXCELION 2		
MODEL	EXCELION 2 LH		
SERIAL No.	53U00001 - 53U49999	53V00001 - 53V49999	53W00001 - 53W49999

Complies with the relevant provisions of the Supply of Machinery (Safety) Regulations 2008

Complies with the following other directives and / or relevant provisions :

- Electromagnetic Compatibility Regulations 2016 ; The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 ; 1907/2006 Règlement REACH ; 2012/19/UE Directive DEEE ; Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001.

The following harmonised european standards were used:

- BS EN 62841-1 : 2015 ; BS EN ISO 11806-1 : 2011 ; BS EN 55014-1 : 2017 ; BS EN 55014-2 : 2015.

Sound Power Level :

- Measured sound power level L_{WAm} : 94 dB (A)
- Guaranteed sound power level L_{WAg} : 96 dB (A)

The measured sound level and the guaranteed sound power level were measured by the body SGS-CSTC Shanghai, 588 Wast Jindu Road, Xinqiao, Songjiang, 201612 Shanghai, Chine according to a procedure compliant with Directive 2000/14/EC Annex V.

SIGNED IN PERTUIS, DATED 30/04/2021
JEAN-MARC GIALIS
CEO



PELLENC

   www.pellenc.com

PELLENC
Quartier Notre Dame - 84120 Pertuis (France)

