

PELLENC BATTERY 250

Operating Instructions

56_158890-D 05/2024

READ THE USER OPERATING GUIDE CAREFULLY BEFORE USE







www.pellenc.com





TABLE OF CONTENTS

1. INTRODUCTION	. 5
2. SAFETY	6
2.1. SAFETY MEASURES ASSOCIATED WITH THE USE OF THE TOOL	. 6 . 7
3. DESCRIPTION AND TECHNICAL FEATURES	10
3.1. DESCRIPTION	10
4. START-UP	12
4.1. FITTING THE BATTERY ON THE HARNESS 4.2. SWITCHING THE BATTERY ON AND OFF 4.3. CHARGING THE BATTERY 4.4. HMI DISPLAY 4.5. FITTING THE HOLSTER TO THE HARNESS 4.6. TOOL CONNECTION 4.7. PUTTING THE LEAD AND ARMBAND IN PLACE	12 13 14 14 16
5. USE	17
5.1. USAGE METHOD WITH BOTH TOOLS 5.2. AUTHORISATION MODES 5.2.1. CHANGE OF AUTHORISATION MODE 5.2.2. PRESENTATION OF AUTHORISATION MODES	18
6. MAINTENANCE	20
6.1. TOOL MAINTENANCE TABLE	20
7. INCIDENTS AND TROUBLESHOOTING	22
7.1. RECAP OF BATTERY DISPLAY MESSAGES AND AUDIBLE SIGNALS	24
8. STORAGE AND TRANSPORT	26
8.1. BATTERY STORAGE CONDITIONS8.2. CONDITIONS OF TRANSPORT OF THE BATTERY	

PELLENC

PELLENC BATTERY 250 56_158890-D

9. ACCESSORIES AND CONSUMABLES	27
9.1. OPTIONAL ACCESSORIES	27
10. WARRANTIES	28
10.1. GENERAL WARRANTIES	28 28
11. STATEMENTS OF COMPLIANCE	31
11.1. C € EU DECLARATION OF CONFORMITY	



1. INTRODUCTION

Dear Customer,

Thank you for purchasing your PELLENC battery 250. Properly used and maintained, this equipment will give you years of satisfaction.



Warning

In accordance with product liability laws, we are not responsible for damage caused by our product if the product includes an accessory that is not from the manufacturer or is not approved by the manufacturer. The use of any other accessory may increase the risk of injury.



Warning

Your device contains numerous recoverable or recyclable materials. Return it to you dealer or, failing this, to an approved servicing centre to be treated.



Comply with the regulations in force in your country as concerns environmental protection associated with your activity.



Warning

It is imperative that you read through the ENTIRE user's manual guide before using or servicing the tool. Always comply with the instructions and illustrations in the manual.

Throughout the user's manual guide you will find advisory notes and information entitled: NOTE, IMPORTANT, ATTENTION and WARNING.

Points marked "NOTE" indicate additional information.

Points marked "IMPORTANT" warn the user of a potential risk for the equipment.

Points marked "CAUTION" warn the user of a potentially hazardous situation which if not avoided may result in minor injuries.

Points marked "WARNING" warn the user of a potentially hazardous situation which if not avoided may result in serious injury or death.

The warning indicates that damage resulting from failure to comply with the procedures and instructions is not covered by the warranty and the owner will be liable for any repair costs.

Safety signs on the tool also indicate the safety precautions to be observed. Locate these signs and read them before using your machine. Any partially illegible or damaged sign should be replaced immediately.

Refer to 2.4. Safety signs, page 8 for the location diagram of the safety stickers affixed to the tool.

No part of this manual may be reproduced without the written permission of the PELLENC company. The illustrations provided in this manual are for information purposes only and are in no way contractual. The PELLENC company reserves the right to make any modification or improvement to its products as deemed necessary without informing customers already in possession of a similar model. This manual forms an integral part of the tool and must accompany the tool if it changes hands.



2. SAFETY



Warning

Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

2.1. SAFETY MEASURES ASSOCIATED WITH THE USE OF THE TOOL

Note

Refer to the operating instructions for the tool concerned.



Warning

Read all safety warnings and all instructions. Retain all the safety measures and instructions for later reading.

This device is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities, nor by anyone lacking in experience or knowledge, except if they are supervised or have received prior instructions from a person responsible for their safety.

2.2. SAFETY MEASURES ASSOCIATED WITH BATTERY USE

- 1. If not using the battery unit, store it away from other metal objects such as paper clips, coins, keys, nails, screws or other such small metal items that might form a connection between the two terminals. Creating a short circuit between the battery terminals can result in burns or even a fire.
- 2. Keep the battery out of the reach of children and place it on a non-combustible support.
- 3. Do not interfere with its cooling cycle.
- 4. Do not use or leave the battery near a heat source (> 60°C).
- 5. Do not leave the battery in direct, strong sunlight.
- 6. Do not expose the battery to microwaves or high pressure.
- 7. Do not immerse the battery in water.
- 8. The batteries must be charged in a dry, ventilated room at a temperature between 10°C and 25°C maximum, away from any moisture.
- 9. If the battery is not used for 10 days, the battery will automatically discharge until it reaches its storage charge rate, and then goes to sleep. The battery heats up during this phase.¹.
- 10. Over time, the capacity of your battery decreases. When it reaches half of its original battery-life operating autonomy, it should be replaced.
- 11. The battery may lose 1 to 4 % of its capacity when exposed to a temperature higher than or equal to 55 °C for one week.
- 12. The charging location must be equipped with a class D fire extinguisher (for metal fire) in good working order.
- 13. The standards in effect must be complied with when either shipping a complete tool or a battery.
 - Complete tool with battery: product classified UN3481 class 9.
 - · Battery alone: product that is classified as class 9, UN3480.
- 14. Use of a battery other than that provided by Pellenc SA is dangerous (risk of serious injury). If a different battery is used, Pellenc SA cannot be held responsible for any consequences.
- 15. The battery must be protected from any impact and must be positioned and secured appropriately during transportation.
- 16. In the case of suspicious smoke, place the battery outside the charging area or transportation vehicle as far away as possible from any inflammable material.
- 17. Never store a battery when its capacity is below 50 %. Recharge the battery before storage if the value is below 50%.

¹Except for Alpha Lite batteries, which are discharged directly.

PELLENC

PELLENC BATTERY 250 56 158890-D

- 18. Under inappropriate conditions, liquid may leak from the batteries; avoid contact. In the event of accidental contact, rinse with water. In the event of contact with eyes, seek professional medical help. The liquid leaking from the batteries can cause irritations or burns.
- 19. Pellenc power tools must only be used with the battery units designed for the purpose. Use of other battery units can present a risk of injury and fire.
- 20. Recharge only with the charger specified by the manufacturer. A charger suitable for one type of battery pack may present a risk of fire if used with another type of battery pack.
- 21. Do not use the battery for any purpose other than that initially envisaged (exclusively for use with Pellenc tools).
- 22. At the end of its life, the battery must be returned to the authorized distributor from whom it was purchased to be recycled in accordance with waste regulations.
- 23. Fragile case, contains an electronic board and lithium.

2.3. SAFETY MEASURES WHEN USING THE "PELLENC" CHARGER

- 1. When in operation, the charger's temperature can reach 60°C. No flammable material must be within 1.5 metres of the charger and battery.
- 2. Place the charger out of children's reach and onto a non-combustible support.
- 3. Do not interfere with its cooling cycle.
- 4. The charger is intended only for recharging the battery. Do not charge non-rechargeable batteries.
- 5. The charging location must be equipped with a class D fire extinguisher (for metal fire) in good working order.
- 6. If the outlet cord is cut or damaged, the complete charger must be returned to the authorized distributor from which the tool was purchased in order to avoid any danger.
- 7. Only recharge using the "PELLENC" charger indicated by the manufacturer. A charger suitable for one type of battery pack may present a risk of fire if used with another type of battery pack.
- 8. This charger is designed to charge Pellenc tool lithium batteries.
- 9. Do not use it for any other purposes.
- 10. Children must be supervised to ensure they do not play with the charger.
- 11. Check that the cable cannot be bent and that it does not touch hot surfaces or sharp edges.
- 12. Ensure good ventilation during the charging.
- 13. Never cover the charger. This charger must not be used outdoors.
- 14. Make sure the power connector is not exposed to water.
- 15. Never attempt to charge a damaged battery.
- 16. The grid connection must comply with national electrical regulations.
- 17. Check the wiring of the charger before use. Never use the charger if the cable is damaged
- 18. When the battery is charging, place the charger on a non-flammable support, more than 1.5 m away from any flammable object.




2.4. SAFETY SIGNS

California State Proposition 65:



Caution

This product contains or emits a chemical recognized by the State of California to cause cancer, birth defects or other reproductive harm.

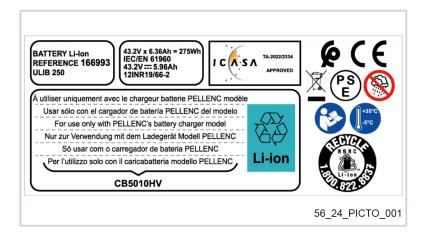



Tool compliant with Moroccan standards.



Tool compliant with EC standards.



Waste electrical and electronic equipment.

At the end of its life, the tool and the battery must be returned to the authorised dealer from whom they were purchased to be recycled in accordance with waste regulations.



Do not expose to rain.



PSE marking, JAPAN certification.



This equipment must be used at a temperature of -5° to +35°C.



Please read the operating instructions.

Read the instructions carefully and follow the safety precautions.



Independent Communications Authority of South Africa

The product complies with the strict radio interference standards set by ICASA at the approved frequency.



Marking symbol for identifying the chemical characteristic of the battery during recycling.



PELLENC BATTERY 250 56_158890-D




The **RBRC**™ sticker (found on the packaging) indicates that PELLENC voluntarily participates in an industry program for the collection and recycling of used batteries in the United States and Canada.



3. DESCRIPTION AND TECHNICAL FEATURES

3.1. DESCRIPTION

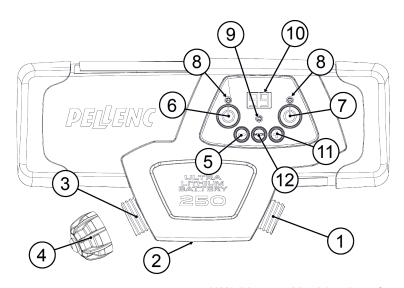

56_24_001

Battery

- 1. Right connector: reserved for pruning shears
- 2. Charging connector
- 3. Left connector: for 1.2 kW tools only
- 4. Protective cap for the left connector

HMI (Human-Machine Interface)

- 5. Decrease button
- 6. Left on/off buttons
- 7. Right on/off buttons
- 8. Right and left power LEDs
- O. Charge indicator
- 10. HMI display screen
- 11. Increase button
- 12. Mode change button

Note

A 1.2 kW tool can be connected at the same time using the second connector.

3.2. TECHNICAL CHARACTERISTICS - BATTERY

250					
Nominal\battery voltage	43.2 V ===				
Type of battery	24 cells in 1 pack				
Battery capacity	6.36 Ah				
Battery power	1,728 W				
Nominal power	275 Wh				
Battery life	Depending on the tool				
Weight of the battery	1800 grams (without cable)				
Operating frequency bands	13.56 MHz				
Max. transmitted RF power	-41 dBm				



3.3. TECHNICAL CHARACTERISTICS - CHARGER

	CB5010HV charger		
	132649		
Commercial reference of the charger	132658		
Tension	100-240V ~50/60Hz Class II		
Charging voltage	50,2 V DC		
Charging current	1 A dc maximum		

Type of charger	Charge percentage 250 battery	250 battery charging time	
Charger CB5010HV (1 A)	70%	4 hr	
Charger CB301011V (1 A)	100%	7 h	




4. START-UP

4.1. FITTING THE BATTERY ON THE HARNESS


Note


The following procedure is valid for the purchase of a single battery delivered not fitted on the harness.

- 1. Fitting the battery (1) on the harness (2).
- 2. Install and tighten the 4 screws (3).

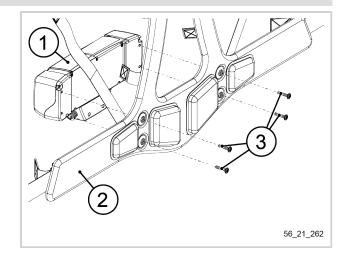

4.2. SWITCHING THE BATTERY ON AND OFF

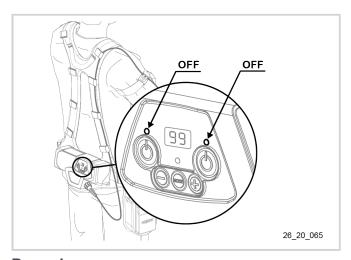

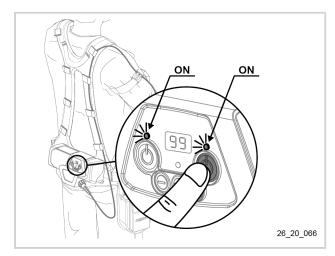

Powering on

1. If the HMI display is off, press one of the 2 On/Off buttons to wake up the battery from standby.

Note

The HMI display shows the remaining battery capacity and the power LED remains off when the device is switched off.

2. Press one of the 2 On/Off battery buttons.

Powering off

Press one of the 2 On/Off battery buttons.



Note

The power-on LED lights up when the power is turned on and goes out when the power is turned off.

For more information about switching on and off with both tools, see 5.1. Usage method with both tools, page 17.

4.3. CHARGING THE BATTERY

Before using the battery for the first time in the season, perform a full charge.




Caution


Before connecting the charger to the mains, make sure that your mains supply corresponds to the instructions on the charger (see 3.3. Technical characteristics - Charger, page 11).

When the battery is discharged, the tool stops automatically. The gauge display goes off, and the buzzer beeps once. See 7.1. Recap of battery display messages and audible signals, page 22.

- 1. Make sure the battery is switched off, see 4.2. Switching the battery on and off, page 12
- 2. Install the charger and battery in an ventilated, dry place with a temperature between 10°C and 25°C and free from dust. Place the battery lying in a horizontal position.
- 3. Connect the charger power connector (1) to the electrical power outlet. The charger indicator (2) lights up red.

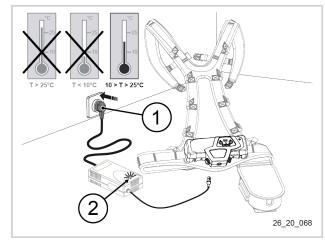


- 4. Align the markers on the charging cable with the slot on the battery charging connector.
- 5. Connect the charging cable (3) to the charging connector (4) of the battery. The charger indicator (2) lights up flashing green, and the battery indicator (5) flashes orange.

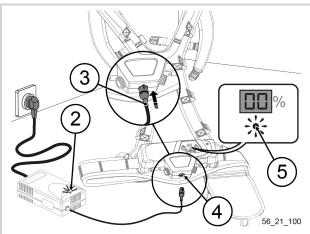

PELLENC

6. When the gauge display (6) flashes, the battery is charging. The charging is finished when the message 99 appears on the gauge display (6) and the charger LED (2) is solid green.

Once the battery is charged, first disconnect the charging cord (3) from the battery and then the mains plug from the charger (1).

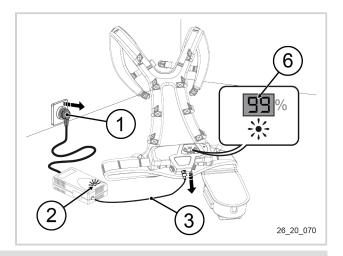

Note

After a long storage period (new battery, winter storage etc.), when you disconnect the charger, the charge level indicator may display a value of less than 99%. This is a normal phenomenon which can reoccur for up to 5 charge cycles with normal use between each charge.

4.4. HMI DISPLAY

The battery is equipped with an HMI display that shows the remaining capacity of the battery. The capacity is expressed as a percentage.


- If the display shows 99%, the battery is fully charged.
- If the display shows > 55% after one day's work, it is not necessary to recharge the battery before a second similar day of work.
- The display shows 00% or a value very close to it, you must recharge immediately.

4.5. FITTING THE HOLSTER TO THE HARNESS

Note


The procedure is the same for right and left hand holstering. Only illustrations of the right side set-up are shown.

- 1. Detach the hook-and-loop strap (1).
- 2. Pull the hook-and-loop strap (1) away from the belt loop (2).

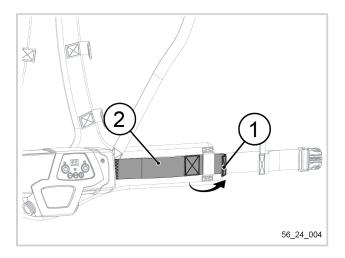


PELLENC


- 3. Install the holster (3) on the harness.
- 4. Position the hook-and-loop strap (1) on the holster (3).
- 5. Slide the end of the hook-and-loop strap (1) into the belt loop (2).
- 6. Pull and attach the hook-and-loop strap (1).

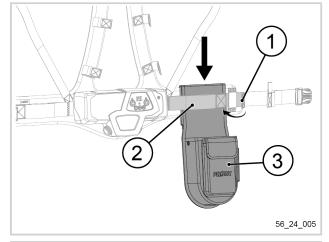


- 7. Align the tool power cord marker (4) with the slot in the right-hand connector (5) of the battery.
- 8. Connect the tool power cord (4) to the battery on the right connector (5) of the battery.
- 9. Tighten the tightening ring (6) of the tool power cord.

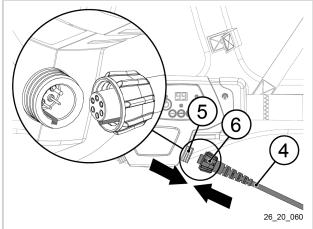

10. Fit the tool power cord (4) in the slots (7) of the harness.

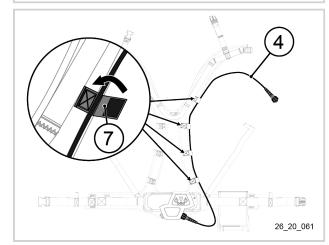

- 11. Put on the harness and adjust with the straps (8).
- 12. Attach the power cord to your arm using the armband provided, see 4.7. Putting the lead and armband in place, page 16.

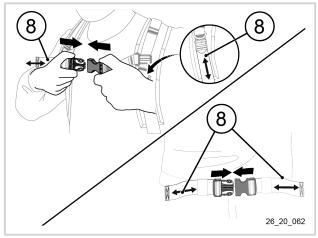




4.6. TOOL CONNECTION

Note


For more information on connecting the tool to the battery, refer to the tool's operating instructions manual.

4.7. PUTTING THE LEAD AND ARMBAND IN PLACE

- 1. Put on the harness and install the connected tool in the holster, see 4.5. Fitting the holster to the harness, page 14 and 4.6. Tool connection, page 16.
- 2. Put the armband (1) around your arm.

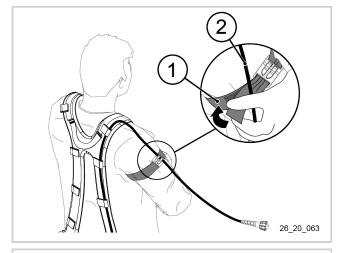

- 3. Insert the tool power cord (2):
 - in parallel if it is to slide into the armband clip (3);
 - perpendicularly if it is to be attached in the armband clip (3).
- 4. Connect the tool power cord (2) to the tool, see 4.6. Tool connection, page 16
- 5. Put the tool in the holster.

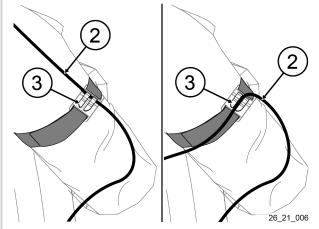



5. USE

Note

For more information on the modes of use and "functional" settings, please refer to the tool operating instructions.

5.1. USAGE METHOD WITH BOTH TOOLS


In order to guarantee your safety, when the pruning shears and the 1.2 kW tool are connected, the pruning shears take priority:

- When the pruning shears are operating, the 1.2 kW tool is not powered
- When the pruning shears are in standby, the 1.2 kW tool is powered

So there is no need to use the ON/OFF switches to start and stop the tools.

Left side: For 1.2 kW tools only.

Right side: For pruning shears only.

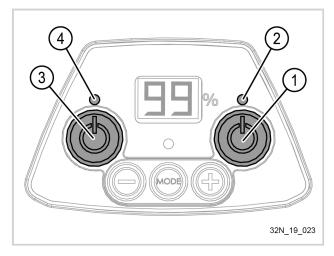

- To start your pruning shears PELLENC, turn on the battery by pressing the ON/OFF button (1) for 1 s, the red LED (2) will light up, and then the battery will beep². The pruning shear is ready for use, refer to the instruction manual of the pruning shear for more information about powering it on.
- To stop your pruning shears, close the blade, using the trigger, and keeping it closed, press on the switch (1). The battery beeps once and the red LED (2) goes off.
- If there is a blockage in the wood, the pruning shears stop when they close. They can then only open.
- To switch the pruning shears to "sleep" mode, press and hold the trigger until the blade closes and the battery beeps, unless the sleep setting is disabled.

Note

For more information on setting the trigger hold time for standby, see the tool's instruction manual.

- After two minutes without trigger action, the tool will automatically go into standby mode, press the trigger again
 to exit the standby mode.
- To start your 1.2 kW tool, switch on the battery by pressing the ON/OFF button (3) for 1 second, the green LED (4) will light up and flash. Ensure that the pruning shears are in standby mode, the green LED (4) remains on and steady. The 1.2 kW tool is ready for use.

Note

If the pruning shears is set to never go into standby mode, turn off the pruning shears by pressing the ON/OFF button (1) before pressing the ON/OFF button (3) for 1.2 kW tools.

²4 times only when the battery is connected to a C35 pruning shear



The green LED (4) will light up steady if the pruning shears are not connected to the battery.

Important

If there is no connector connected, it is imperative to put the protective cap on (otherwise there will be electrical malfunctions).




Warning

Before using the 1.2 kW tool, read the relevant instruction manual carefully.

5.2. AUTHORISATION MODES

5.2.1. CHANGE OF AUTHORISATION MODE

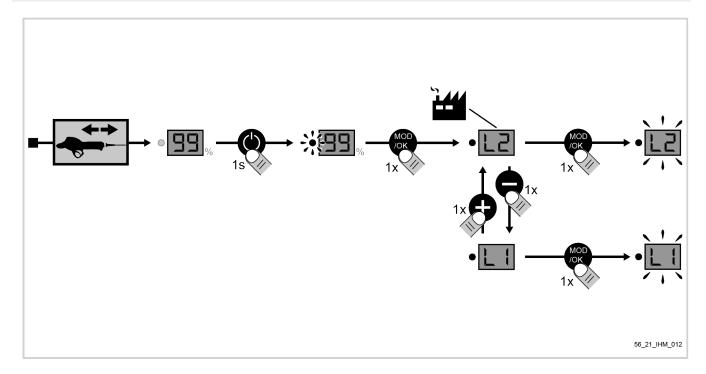

- 1. Disconnect the tool and turn on the battery,
- 2. Press the "mode" button,
- 3. Select the mode by pressing + or -,
- 4. Press the "mode" button to confirm,
- 5. After setting the mode, turn off the battery and then reconnect the tool.

PELLENC

PELLENC BATTERY 250 56_158890-D

5.2.2. PRESENTATION OF AUTHORISATION MODES

You can set the parameters for the tool's adjustment level to make it easier to use.

- L1: Normal" mode: the user has access to the operating modes but no "functional" adjustments are possible.
 - L2: "Expert" mode: the user accesses the operating modes and "functional" settings.



6. MAINTENANCE

6.1. TOOL MAINTENANCE TABLE

Maintenance task	At each start-up	Every 4 hours	Every week	After use	Every year or as necessary
Visual inspection of the general condition of the battery (no deformation or wear)				Х	
Visual inspection of the general condition of the charger (no deformation or wear)				Х	
Check of the tightness of the tool power cord knob	X				
Check the battery level.	Х				
Cleaning the battery), see 6.2. Cleaning the battery, page 20				Х	
Cleaning the battery), see 6.3. Cleaning the charger, page 21				Х	
Battery check by a PELLENC authorised distributor					X

Important


Have the battery serviced every 400 hours or at least once a year by a PELLENC authorised distributor. Always store the charged and clean battery in a dry place.

6.2. CLEANING THE BATTERY

- 1. Make sure the battery is switched off, see 4.2. Switching the battery on and off, page 12.
- 2. Ensure that the battery is disconnected from the charger and the tool.
- 3. Clean the battery casing with a soft damp cloth.

Important

Cleaning shall be carried out with water only and without detergent, chlorine or sterilising solutions with an alkaline reaction.

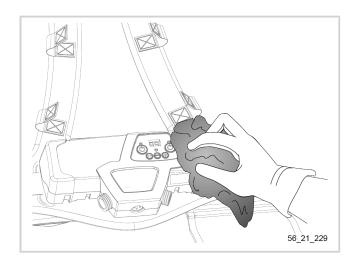

PELLENC BATTERY 250 56_158890-D



6.3. CLEANING THE CHARGER

- 1. Ensure that the charger is unplugged and disconnected from the battery.
- 2. Clean the charger housing with a soft damp cloth.

Important

Cleaning shall be carried out with water only and without detergent, chlorine or sterilising solutions with an alkaline reaction.



7. INCIDENTS AND TROUBLESHOOTING

7.1. RECAP OF BATTERY DISPLAY MESSAGES AND AUDIBLE SIGNALS

Normal messages					
Use					
BB fixed	Battery charge level (0 to 99)				
with 1 beep per minute	Battery empty, recharge immediately				
	Stop using, recharge immediately.				
flashing with 1 beep every 10 seconds	Only on ALPHA batteries connected to an ALPH. Tool.				
Flashing	Display off to avoid duplication with tool display				
Ch	arge				
flashing every 4 seconds	Battery charge level (0 to 99)				
99 fixed	Charging complete				
Storage					
Switched off	Standby				

Degraded mode messages						
Use						
and significant alternately	Stop the tool; the battery temperature is too high					
and and alternately	Stop the tool; the battery temperature is too low					
NOUNS	Electronic board out of order					
NO. UM. III	Electronic board not configured					
Fixed	Cell voltage too low					
Long beep and 1 short beep	Tool stop: tool intensity too high					
Long beep and 2 short beeps	Incompatible tool detected					
Long beep and 4 short beeps	Stop the tool; the tool temperature is too high					
Charge						
and alternately	Charge interrupted: Battery temperature too low					
and salternately	Charge interrupted: Battery temperature too high					



PELLENC BATTERY 250 56_158890-D

Fault messages						
Use						
and 1 beep every 2 minutes for 24 hours	Voltage too low after 3 hours of non-use. Recharge th battery immediately.					
HS _{NAMAS}	Electronic board out of order					
ROUNDS	Short circuit on the tool connector					
Long beep and 5 short beeps	Loss of connection, tool not detected					
Cha	arge					
and alternating and continuous beep	Battery problem					
and alternately	Charger problem					



7.2. TROUBLESHOOTING

ons Repairer	e battery User	board electronic diodes authorised distributor checking spoints			cool down 5 minutes	vattery wn for ninutes User	ery within imperature 2.2. Safety ssociated se , page 6	correct cange	
Solutions	Charge the battery	Configuring the electronic board	Change the electronic board if the diodes	remain off after starting and checking the previous points	Let the tool cool down for roughly 5 minutes	Let the battery cool down for about 5 minutes	Use the battery within the correct temperature range, see 2.2. Safety measures associated with battery use, page 6	Use the battery within the correct temperature range	Let the battery cool down for
Checks	Check that the battery is not fully discharged		At an authorised		4 beeps from the battery	Battery temperature too high	Battery temperature too low	Battery temperature too low	Battery temperature
Probable cause	Empty battery		Circuit board		The tool has reached its temperature limit			Battery	temperature
Battery display messages and beeps	BB with 1 beep per minute	N. A. W. C. A.	15 MAT C/2	85 	Long beep and 4 short beeps	□□ and 5⊆ alternately	문문 and 문문 and 군문 alternately	□□ and □□ alternately	end and HS
Symptoms		The battery	does not start			The tool stops		The battery	does not charge



Caution

Never attempt to open or repair the battery pack or the charger

PELLENC BATTERY 250 56_158890-D



7.3. BATTERY REPLACEMENT

Important

The battery must be replaced only by an approved distributor.

PELLENC BATTERY 250 56 158890-D



8. STORAGE AND TRANSPORT

8.1. BATTERY STORAGE CONDITIONS

- Store the "battery pack" and the charger away from heat, dust and humidity, after having switched off the battery see 4.2. Switching the battery on and off, page 12.
- Never store the battery in an ambient temperature of more than +45 °C.
- To preserve the life of the battery and avoid deterioration, it is imperative that the battery be stored charged and recharged every 24 months when not in use.
- Never operate the push-buttons during the storage period.
- To ensure long battery life, the battery should be stored in a dry and warm place between 0 °C and 25 °C.
- No combustible object must be placed within 1.5 metres of the battery.
- · The charger is maintenance-free.
- If the battery is not used for 30 days, the battery is automatically discharged to a storage state to preserve its life, and heating of the battery may occur during this phase.

8.2. CONDITIONS OF TRANSPORT OF THE BATTERY

Never transport a battery with a capacity of more than 30% by means of a postal carrier.



9. ACCESSORIES AND CONSUMABLES

9.1. OPTIONAL ACCESSORIES

Name	Reference	
Charger CB5010HV (1A)	132658	56,21,236
Note Only if 250 battery purchased alone	154702	55,20,054



10. WARRANTIES

10.1. GENERAL WARRANTIES

10.1.1. STATUTORY WARRANTY

10.1.1.1. LATENT DEFECTS WARRANTY

Apart from the commercial warranty provided for under Article II, Article 1641 of the French Civil Code states that "the seller is bound to a warranty on account of latent defects of the object sold which render it unfit for the use for which it was intended, or which would impair said use to the extent that the buyer would not have acquired it, or would only have paid a lesser price for it, had he/she known of them".

Article 1648 of the French Civil Code "The action resulting from latent defects must be brought by the purchaser within two years after the discovery of the defect."

10.1.1.2. LEGAL GUARANTEE OF CONFORMITY

Article L.217-4 of the French Consumer Code "The seller delivers goods in compliance with the contract and is liable for defects of conformity existing upon delivery.

The seller is also liable for any lack of conformity resulting from the packaging, assembly or installation instructions whenever its contractual liability is engaged in this regard or the latter are carried out under its responsibility.

Article L.217-5 of the French Consumer Code "Goods are compliant with the contract":

- If they are fit for the purpose normally expected of similar goods and, where applicable:
 - If they correspond to the description given by the seller and possess the qualities that were presented to the buyer in the form of a sample or model;
 - If they possess the qualities that a buyer can reasonably expect given the public statements made by the seller, the producer or its representative, especially in advertising or labelling:
- 2. Or if it has the characteristics defined by mutual agreement between the parties or be suitable for any special use sought by the buyer, brought to the attention of the seller and accepted by the latter.

Article L.217-12 of the French Consumer Code "legal action resulting from lack of conformity lapses two years after delivery of the goods".

10.1.2. PELLENC COMMERCIAL WARRANTY

10.1.2.1. CONTENTS

10.1.2.1.1. GENERAL INFORMATION

In addition to legal warranties, client users benefit from the commercial warranty on PELLENC products covering the exchange and replacement of parts recognised as being out of order, due to machining defects, assembly defects or material defects, whatever the cause.

The warranty forms an inseparable whole with the product sold by PELLENC.

10.1.2.1.2. SPARE PARTS

The commercial warranty also covers PELLENC original spare parts, excluding labour and to the exclusion of certain parts of each product provided at delivery.

PELLENC BATTERY 250 56_158890-D

10.1.2.2. DURATION OF WARRANTY

10.1.2.2.1. GENERAL INFORMATION

PELLENC products are guaranteed under the commercial warranty as from delivery to the customer for a period of two (2) years for products connected to a PELLENC battery, and for a period of one (1) year for other PELLENC products.

10.1.2.2.2. SPARE PARTS

PELLENC replacement parts replaced under the product warranty are guaranteed under the commercial warranty as from delivery of the PELLENC product to the customer user for a period of two (2) years for products connected to a PELLENC battery, and for a period of one (1) year for other PELLENC products.

In the case of products connected to a PELLENC battery, parts that are replaced under the product warranty after the 12th month of use, are covered for a period of one (1) year.

10.1.2.2.3. WARRANTY EXCLUSIONS

Products that have been subject to abnormal use, or that have been used under conditions and for purposes other than those for which they were manufactured, are excluded from the commercial warranty, especially in the case of non-compliance with the conditions stipulated in this user manual.

Nor does it apply in the event of impact, dropping, negligence, lack of supervision or maintenance or if the product has been transformed. Products that have been altered, transformed or modified by the user customer are also excluded from the warranty.

Wear parts and/or consumables are not covered by the warranty.

10.1.2.3. IMPLEMENTATION OF THE COMMERCIAL WARRANTY

10.1.2.3.1. PRODUCT COMMISSIONING AND COMMISSIONING DECLARATION

No later than eight days after delivery of the goods to the user customer, the DISTRIBUTOR undertakes to complete the computerised commissioning declaration form in order to activate the latter on the website www.pellenc.com, under the heading "Extranet Access" in the "Pellenc Extranet Service" menu, using the identifier previously issued by PELLENC.

Failing that, commissioning declaration will not be effective and implementation of the PELLENC commercial warranty will not occur. As a consequence thereof, the DISTRIBUTOR must ensure the financial burden of its intervention under the warranty without being able to pass on the cost to the client user.

The DISTRIBUTOR also undertakes to complete the warranty card or the certificate of warranty and commissioning for self-propelled equipment provided with the product after having the user customer sign and date it.

10.1.3. PAID AFTER-SALES SERVICE

10.1.3.1. GENERAL INFORMATION

Malfunctions, breakdowns, breakages resulting from misuse, negligence or improper maintenance by the user customer, as well as malfunctions resulting from the normal wear of the product, are subject to the payment of the after-sales service, even during the period of the legal and commercial warranty. After-sales service repairs that fall



PELLENC BATTERY 250 56 158890-D

outside of the legal and commercial warranty also include maintenance, adjustments, diagnostics of all types, and cleaning, without the present list being exhaustive.

10.1.3.2. WEAR PARTS AND CONSUMABLES

Wear parts and consumables also fall within the after-sales service.

10.1.3.3. SPARE PARTS

Paid after-sales service also covers PELLENC original spare parts, excluding labour and outside the legal and commercial warranty period.

In case of replacement of original PELLENC spare parts in the context of after-sales service, said latter are covered by a warranty of one year as from the installation date.



11. STATEMENTS OF COMPLIANCE

11.1. C E EU DECLARATION OF CONFORMITY

MANUFACTURER / PERSON AUTHORISED TO COMPIL	PELLENC
THE TECHNICAL FILE	
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

GENERIC DENOMINATION	BATTERY		
FUNCTION	Intended to power PELLENC portable power tools		
COMMERCIAL NAME	ULTRA LITHIUM BATTERY		
TYPE	Li-ion battery		
MODEL	250		
SERIAL NO.	26Y00001 - 26Y49999	26Z00001 - 26Z49999	26A00001 - 26A49999
	32Y00001 - 32Y49999	32Z00001 - 32Z49999	32A00001 - 32A49999
	56Y00001 - 56Y49999	56Z00001 - 56Z49999	56A00001 - 56A49999

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The object of the declaration described above complies with the relevant Union harmonisation legislation:

- Directive 2014/30/EU
 - EN 55014-1:2017 AND EN 55014-2:2015 EN IEC 61000-3-2:2019
- Directive 2011/65/EU
- Regulation (REACH) No 1907/2006
- Directive 2012/19/EU

Signed for and on behalf of:

Simon BARBEAU

CEO



PERTUIS, on 22/04/2024

- Directive 2006/66/EC
- EN 55014-1:2017 + A11:2020 EN IEC 62133-2:2017 + A1:2021 EN 300 330 V2.1.1
 - EN IEC 62841-1:2015 + EN 301 489-1 V2.1.1 A11:2022 / Annex K • EN 301 489-3 V2.1.1 • EN IEC 61960-3:2017 • EN IEC 62311:2020
- Directive 2014/53/EU



11.2. UK DECLARATION OF CONFORMITY CA: BATTERY 250

MANUFACTURER / ENTITY AUTHORIZED TO COMPILE	PELLENC
THE TECHNICAL FILE	
ADDRESS	Quartier Notre-Dame - 84120 Pertuis (France)

We hereby declare that the machine referred to below as:

GENERIC DENOMINATION	BATTERY			
FUNCTION	Intended to power PELL	Intended to power PELLENC portable power tools		
COMMERCIAL NAME	ULTRA LITHIUM BATTE	ULTRA LITHIUM BATTERY		
TYPE	Li-ion battery	Li-ion battery		
MODEL	250	250		
SERIAL No.	26Y00001 - 26Y49999	26Z00001 - 26Z49999	26A00001 - 26A49999	
	32Y00001 - 32Y49999	32Z00001 - 32Z49999	32A00001 - 32A49999	
	56Y00001 - 56Y49999	56Z00001 - 56Z49999	56A00001 - 56A49999	

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The object of the declaration described above is in conformity with the relevant statutory requirements:

- S.I. 2008 No. 2164 Battery Regulation
 - EN IEC 62133-2:2017 + A1:2021
 - EN IEC 62841-1:2015 + A11:2022 / Annex K
 - EN IEC 61960-3:2017
- S.I. 2016 No. 1091 Electromagnetic Compatibility Regulations 2016
 - EN 55014-1:2017 + A11:2020
 - EN 55014-2:2015
 - EN IEC 61000-3-2:2019
 - EN 61000-3-3:2019
- S.I. 2017 No. 1206 Radio Equipement Regulations 2017
 - EN 300 330 V2.1.1
 - EN 301 489-1 V2.2.3
 - EN 301 489-3 V2.1.1
 - EN IEC 62311:2020
- S.I. 2012 No. 3032 RoHS
- · S.I. 2021 No. 904 UK REACH Regulation

Signed by and on behalf of:

Simon BARBEAU CHIEF EXECUTIVE OFFICER



SIGNED IN PERTUIS, 22/04/2024



PELLENC

Quartier Notre Dame - 84120 Pertuis (France)

